## 3.3.2 ActiveSync

| The MT-600 V2 use the Com1 RS232 connect the P | V2 use the Com1 RS232 connect the F | PC |
|--|-------------------------------------|----|
|--|-------------------------------------|----|

| Step |                                   |   |
|------|-----------------------------------|---|
| 1    | Make sure the Microsoft           |   |
|      | ActiveSync service is properly    |   |
|      | installed on the host PC.         | Microsoft   |
| 2    | Click the "Connection             |   |
| 2    | Sattings "                        | Search ActiveSync   |
|      | Settings                          | File View Tools Help  |
|      |                                   | Synchronize<br>Stop   |
|      |                                   | Mobile Device   |
|      |                                   | Explore S   |
|      |                                   | Delete Partnership  |
|      |                                   | Get Connected   |
|      |                                   | Connection Settings   |
|      |                                   | Close   |
| 3    | Check "Allow serial cable or      | Connection Satting  |
|      | infrared connection to this COM   | Connection Settings   |
|      | port" and make sure the COM       | Click Get Connected to connect your mobile device to this   |
|      | port number.                      |   |
|      |                                   | Status: Waiting for device to connect                       |
|      |                                   |   |
|      |                                   | Allow serial cable or infrared connection to this LUM port: |
|      |                                   | JCOM2   |
|      |                                   | Status: COM port is available                               |
| 4    | Connect the MT-600 Com1           |   |
|      | RS232 and PC RS232 by the         |   |
|      | RS232 ActiveSync cable.           |   |
|      |                                   |   |
|      | Please follow the 4 steps:        | cable   |
|      |                                   |   |
|      | 1.) Firstly, connect ActiveSync   |   |
|      | Cable to HMI.                     |   |
|      | 2.) Then display the repllog.exe. |   |
|      | (Do not execute it.)              |   |
|      | 3.) Connect ActiveSync Cable to   |   |
|      | PC COM port.                      |   |

|   | (At this moment, A   | ActiveSync   | Microsoft   | ActiveSync  |            |                 |  |
|---|--|--|---|---|------------|-----------------|--|
|   | icon on the desktop  | p starts   | <u>F</u> ile <u>V</u> iew <u>I</u>                                | ools <u>H</u> elp   |            |                 |  |
|   | rotating.)   |  |   |   | Ontions    |                 |  |
|   | 4.) Execute repllog.exe  |  | Sync Sur  | I Details Explore   | ohmus      |                 |  |
|   | immediately.   |  | Connecting.   |   |            |                 |  |
|   | When the cable connect<br>the Microsoft ActiveSys<br>will change color to gre<br>rotate.   | ts to PC,<br>nc icon<br>en and                         | Information T   | ype Status  |            |                 |  |
|   | ActiveSync cable   |  |   |   |            |                 |  |
|   | PC COM1  |  |   | CN5 COI   | M1 [RS232] |                 |  |
|   | 9P D-SUB Female  | I  |   | 9P D-SU   | JB Female  |                 |  |
|   | 1,4,6 short  |  |   |   |            | 7               |  |
|   | 2 RD   |  |   | 3 TD  |            |                 |  |
|   | 3 TD   |  |   | 2 RD  |            |                 |  |
|   | 5 GND  |  |   | 5 GND   |            |                 |  |
|   | 7 RTS  |  |   | 8 CTS   |            |                 |  |
|   | 8 CTS  |  |   | 7 RTS   |            |                 |  |
|   |  |  |   |   |            |                 |  |
| 5 | <ul> <li>When the Microsoft Ac green disk rotating, Rur \Windows\repllog.exe</li> <li>1. From "Start", click</li> <li>2. Select \Windows for</li> <li>3. double click "repllo</li> <li>4. click "OK" to run th repllog.exe.</li> </ul> | tive Sync<br>n MT600<br>"Run…"<br>lder<br>g.exe"<br>ne | My<br>Compute<br>Progra<br>Favorit<br>Docum<br>Setting<br>Setting | Remote<br>r Desktop<br>ms • (top<br>es •<br>hents •<br>gs • | lows CE .r | ъет<br>9 ам 🞯 🇭 |  |

| 6 | Follow the onscreen instructions to establish a partnership and | Browse       Image: Start         Image: Start       Image: Start   |
|---|---|---|
|   | synchronize your MT600 with<br>your desktop computer.           | <ul> <li>Before you can synchronize information between your mobile device and this computer, you must set up a partnership between them.</li> <li>Would you like to set up a partnership?</li> <li>Yes</li> <li>Set up a partnership so that I can synchronize information between my device and this computer.</li> <li>No</li> <li>I don't want to synchronize information. Set up my device as a guest so that I can copy or move information between my device and this computer.</li> </ul>   |
| 7 | Now you can synchronize the                                     | Microsoft ActiveSync  |
|   | and host computer with  | Image: Second |
|   | ActiveSync.   | Sync Stop   Details Explore Options   |
|   |   | Connected   |

## Use Ethernet connect to PC ActiveSync.

## Microsoft ActiveSync 4.2 doesn't support Ethernet connect. Please use Microsoft ActiveSync version 3.8.0

| Step |   |  |
|------|---|--|
| 1    | Before you begin<br>Set up a partnership, between your<br>device and desktop computer using<br>RS232 connection.  | New Partnership         Set Up a Partnership         Before you can synchronize information between your mobile device and this computer, you must set up a partnership between them.         Would you like to set up a partnership?         Image: Set up a partnership so that I can synchronize information between my device and this computer.         No         I don't want to synchronize information. Set up my device and this computer.         Information between my device and this computer.  |
| 2    | MT600 V2 use CECP to save the<br>registry. (The MT600 will<br>remember the partnership after the<br>power reset.)<br>Disconnect the RS232 cable   | System settings       OK         LCD Settings       MAC address         Save registry  |
| 3    | <ul> <li>Enable a network (Ethernet)</li> <li>connection in ActiveSync.</li> <li>1 On the File menu, click</li> <li>Connection Settings.</li> <li>2 Select Allow network</li> <li>(Ethernet) and Remote Access</li> <li>Service (RAS) server connection</li> <li>with this desktop computer.</li> </ul> | Connection Settings       Image: Click Get Connected to connect your mobile device to this computer.         Status: Waiting for device to connect       Get Connected         Image: Allow gerial cable or infrared connection to this COM port:       Image: COM2         Image: Status: COM port is available       Image: COM2         Image: Allow LISB connection with this desktop computer.       Status:         Image: Status: USB is available       Image: Status:         Image: Status: Network (Ethernet) and Remote Access Service (RAS) server connection with this desktop computer.         Status: Network is available         Image: Status icon         Image: St |

| 4 | MT600 Run \Windows\repllog.exe | Run  |
|---|--------------------------------|--|
|   |                                | Type the name of a program, folder, or document, and Windows will open it for you. |
|   |                                | Open: \\Windows\repliog.exe /remote  |
|   |                                | OK Cancel <u>B</u> rowse   |
| 5 | Choose "Network Connection"    |  |
|   | And choose PC's name.          |  |
|   | Click "Connect" button         |  |
| 6 | The MT600 connect to PC via    | Connection Status  |
|   | Ethernet.                      | Connected, up-to-date  |
|   |                                | Disconnect when complete   |
|   |                                |  |