



Operating Instruction Manual

# **SyConCO**

## **System Configurator CANopen**

CANopen

Edition: 8

Language: English (EN)

**Hilscher Gesellschaft für Systemautomation mbH**

Rheinstraße 15  
D-65795 Hattersheim  
Germany

Tel. +49 (6190) 99070

Fax. +49 (6190) 990750

Sales: +49 (6190) 99070

Hotline and Support: +49 (6190) 990799

Sales email: [sales@hilscher.com](mailto:sales@hilscher.com)

Hotline and Support email: [hotline@hilscher.com](mailto:hotline@hilscher.com)

Web: [www.hilscher.com](http://www.hilscher.com)

# List of Revisions

| Index | Date     | Version                               | Chapter  | Revision   |
|-------|----------|---------------------------------------|--|--|
| 1     | 05.09.97 | 1.000                                 | all  | Created  |
| 2     | 10.06.98 | 2.310                                 | all  | Adaptation to new SyCon Version  |
| 3     | 02.10.98 | 2.510 CANOPEN.DLL<br>2.070 SYCON.EXE  | all<br>3   | Explanation of the new auto COB-ID feature, explanation of the extended device diagnostic structures<br>Licensing<br>CANopen Node configuration described<br>Error numbers completed   |
| 4     |          | 2.615 CANOPEN.DLL<br>2.620 SYCON.EXE  | all  | New Chapter structure<br>Chapter Installation and Licensing overworked<br>New Chapter: Getting Started,<br>Device assignment,<br>New functions:<br>Error numbers extended<br>New Chapter: Appendix   |
| 5     | 03.08.01 |                                       | All<br>3<br>4.1<br>4.4.3<br>4.5.2<br>5.8                               | Reworked<br>New chapter structure<br>Created<br>Created<br>Created<br>Created<br>Created   |
| 6     | 21.07.02 | 2.685 CANopen.dll<br>2.6383 SyCon.exe | All<br>1.3<br>4.4<br>10.3<br>to<br>10.9                                | revised<br>CAN and CANopen<br>completely revised and added, PDO Mapping DS301 V3/V4<br>created   |
| 7     | 06.05.03 | 2.706 CANopen.dll<br>2.651 SyCon.exe  | 4.3.1<br>4.3.3<br>4.4.2<br>4.4.2.5<br>4.4.2.11<br>5.2<br>7.5.1<br>10.9 | Node ID Master<br>Node ID Master<br>Node Configuration now also possible with Heartbeat<br>Receive PDO now also with Transmission Type 255<br>Heartbeat added in Configuration Error Control Protocol<br>Bus Parameter: Node ID for Master, Heartbeat<br>Device Table: Supervision times added<br>Table Error Register |
| 8     | 15.01.04 | 2.706 CANopen.dll<br>2.651 SyCon.exe  | all<br>5.1<br>9.3  | revised<br>Section 'Device Assignment' completely revised<br>Section 'CIF TCP/IP Error Numbers' added  |

Although this program has been developed with great care and intensively tested, Hilscher Gesellschaft für Systemautomation mbH cannot guarantee the suitability of this program for any purpose not confirmed by us in writing.

Guarantee claims shall be limited to the right to require rectification. Liability for any damages which may have arisen from the use of this program or its documentation shall be limited to cases of intent.

We reserve the right to modify our products and their specifications at any time in as far as this contributes to technical progress. The version of the manual supplied with the program applies.

# Table Of Contents

|       |  |    |
|-------|--|----|
| 1     | OVERVIEW SYCON .....   | 7  |
| 1.1   | Main Functions.....  | 7  |
| 1.2   | Properties.....  | 8  |
| 1.3   | CAN and CANopen .....  | 9  |
| 1.3.1 | CAN .....  | 9  |
| 1.3.2 | CANopen .....  | 9  |
| 1.3.3 | CANopen Device Model .....   | 9  |
| 2     | INSTALLATION AND LICENSING .....   | 11 |
| 2.1   | System Requirements .....  | 11 |
| 2.2   | Software Installation .....  | 12 |
| 2.3   | Installation of the System Configurator SyCon .....  | 14 |
| 2.4   | Licensing.....   | 16 |
| 2.4.1 | Ordering a License for the SyCon Configurator .....  | 16 |
| 2.4.2 | Enter the License Code .....   | 17 |
| 2.5   | Scope of functions of the basic version and unlicensed Fieldbus Modules .....                    | 19 |
| 3     | GETTING STARTED – CONFIGURATION STEPS .....  | 21 |
| 3.1   | Overview Communication Types.....  | 21 |
| 3.1.1 | Configuration for PDO Communication (CANopen).....   | 22 |
| 3.1.2 | Configuration for SDO Communication (CANopen).....   | 22 |
| 3.1.3 | Configuration for Send/Receive transparent (CAN).....  | 22 |
| 3.2   | Configuration for PDO Communication .....  | 23 |
| 3.2.1 | Configuration Hilscher CANopen Master to any CANopen Node (PDO).....                             | 23 |
| 3.2.2 | Configuration Hilscher CANopen Node to any CANopen Master (PDO).....                             | 25 |
| 3.2.3 | Configuration Hilscher CANopen Master to a Hilscher CANopen Node (PDO).....                      | 26 |
| 3.3   | Configuration for SDO Communication .....  | 28 |
| 3.3.1 | Configuration Hilscher CANopen Master to any CANopen Node (SDO).....                             | 28 |
| 3.3.2 | Configuration Hilscher CANopen Node to any CANopen Master (SDO).....                             | 29 |
| 3.3.3 | Configuration Hilscher CANopen Master to a Hilscher CANopen Node .....                           | 30 |
| 3.4   | Configuration for Send/Receive transparently (CAN) .....   | 31 |
| 3.4.1 | Configuration Hilscher CANopen Master to any CAN Device for Send/Receive transparent (CAN) ..... | 31 |
| 3.4.2 | Configuration Hilscher CANopen Node to any CAN Device for Send/Receive transparently (CAN).....  | 32 |
| 4     | CONFIGURATION OF CANOPEN WITH SYCON .....  | 33 |
| 4.1   | Setting up the CANopen Configuration.....  | 33 |
| 4.2   | EDS files .....  | 33 |
| 4.3   | Master .....   | 34 |
| 4.3.1 | Insert Master.....   | 34 |
| 4.3.2 | Master Configuration .....   | 36 |

|       |                                     |     |
|-------|-------------------------------------|-----|
| 4.3.3 | Replace Master .....                | 37  |
| 4.4   | Node (Slave) .....                  | 38  |
| 4.4.1 | Insert Node .....                   | 38  |
| 4.4.2 | Node Configuration.....             | 40  |
| 4.4.3 | Replace Node.....                   | 62  |
| 5     | SETTINGS .....                      | 63  |
| 5.1   | Device Assignment .....             | 63  |
| 5.1.1 | Driver Selection .....              | 63  |
| 5.1.2 | CIF Device Driver .....             | 65  |
| 5.1.3 | CIF Serial Driver .....             | 67  |
| 5.1.4 | CIF TCP/IP Driver.....              | 69  |
| 5.2   | Bus Parameter .....                 | 73  |
| 5.3   | CANopen Master.....                 | 76  |
| 5.3.1 | Master Settings.....                | 76  |
| 5.3.2 | Addressing Mode.....                | 78  |
| 5.3.3 | Master Configuration .....          | 80  |
| 5.3.4 | Global Settings .....               | 80  |
| 5.4   | CANopen Node .....                  | 82  |
| 5.4.1 | Node Settings .....                 | 82  |
| 5.4.2 | CANopen Node Configuration .....    | 83  |
| 5.5   | Project Information .....           | 84  |
| 5.6   | Path .....                          | 84  |
| 5.7   | Language .....                      | 85  |
| 5.8   | Start Options .....                 | 86  |
| 6     | ONLINE FUNCTIONS .....              | 89  |
| 6.1   | Introduction .....                  | 89  |
| 6.2   | Online to the CIF .....             | 89  |
| 6.2.1 | Downloading the Configuration ..... | 89  |
| 6.2.2 | Firmware Download.....              | 90  |
| 6.2.3 | Firmware / Reset .....              | 91  |
| 6.2.4 | Device Info.....                    | 91  |
| 6.2.5 | Activate Driver .....               | 92  |
| 6.3   | Start/Stop Communication .....      | 93  |
| 6.4   | Diagnostic Functions .....          | 94  |
| 6.4.1 | Live List.....                      | 95  |
| 6.4.2 | Debugmode (CANopen).....            | 96  |
| 6.4.3 | Global State Field .....            | 100 |
| 6.4.4 | Extended Device Diagnostic .....    | 102 |
| 6.5   | User Data Transfer.....             | 104 |
| 6.5.1 | I/O-Monitor.....                    | 105 |
| 6.5.2 | I/O Watch.....                      | 106 |
| 6.5.3 | Read Objects (SDO Upload) .....     | 108 |
| 6.5.4 | Write Object (SDO Download) .....   | 108 |
| 6.6   | Message Monitor.....                | 109 |

|       |  |     |
|-------|--|-----|
| 6.6.1 | Message Monitor for Using LSS/LMT .....                                  | 110 |
| 6.6.2 | Message Monitor for Sending or Receiving Transparent CAN Telegrams ..... | 117 |
| 7     | FILE, PRINT, EDIT, EXPORT AND VIEW .....                                 | 123 |
| 7.1   | File .....   | 123 |
| 7.1.1 | Open .....   | 123 |
| 7.1.2 | Save and Save As .....   | 123 |
| 7.1.3 | Close .....  | 123 |
| 7.2   | Print .....  | 124 |
| 7.3   | Export Functions .....   | 125 |
| 7.3.1 | DBM Export .....   | 125 |
| 7.3.2 | CSV Export .....   | 125 |
| 7.4   | Edit .....   | 129 |
| 7.4.1 | Cut, Copy and Paste .....  | 129 |
| 7.4.2 | Delete .....   | 131 |
| 7.4.3 | Replace .....  | 131 |
| 7.5   | View of the Configuration .....  | 132 |
| 7.5.1 | Device Table .....   | 132 |
| 7.5.2 | Address Table .....  | 133 |
| 7.5.3 | ID Table .....   | 133 |
| 7.5.4 | SDO Table .....  | 134 |
| 7.6   | View Menu SyCon .....  | 135 |
| 7.6.1 | Logical Network View .....   | 135 |
| 7.6.2 | Toolbars .....   | 135 |
| 7.6.3 | Status Bar .....   | 135 |
| 8     | TOOLS .....  | 137 |
| 8.1   | PKV40 / PKV50 Gateway .....  | 137 |
| 9     | ERROR NUMBERS .....  | 139 |
| 9.1   | CIF Device Driver (Dual-port memory) Error Numbers (-1 .. -49) .....     | 139 |
| 9.2   | CIF Serial Driver Error Numbers (-20 .. -71) .....                       | 143 |
| 9.3   | CIF TCP/IP Driver Error Numbers .....                                    | 145 |
| 9.3.1 | Standard Win32 Socket API Errors .....                                   | 145 |
| 9.3.2 | Specific NetIdent Errors .....   | 145 |
| 9.4   | RCS Error Numbers (4 .. 93) .....  | 146 |
| 9.5   | Database Access Error Numbers (100 .. 130) .....                         | 148 |
| 9.6   | Online Data Manager Error Numbers .....                                  | 149 |
| 9.6.1 | Online Data Manager Error Numbers (1000 .. 1018) .....                   | 149 |
| 9.6.2 | Message Handler Error Numbers (2010 .. 2027) .....                       | 149 |
| 9.6.3 | Driver Functions Error Numbers (2501 .. 2512) .....                      | 150 |
| 9.6.4 | Online Data Manager Subfunctions Error Numbers (8001 .. 8035) .....      | 150 |
| 9.7   | Data Base Functions Error Numbers (4000 .. 4098) .....                   | 151 |
| 9.8   | Converting Functions Error Numbers (5001 .. 5008) .....                  | 155 |
| 10    | APPENDIX .....   | 157 |

|        |   |     |
|--------|---|-----|
| 10.1   | Extended Device Diagnostic Master .....                         | 157 |
| 10.1.1 | PLC_TASK Common Variables .....                                 | 157 |
| 10.1.2 | CAN_TASK Common Variables .....                                 | 158 |
| 10.1.3 | CAN_TASK Node Running State .....                               | 160 |
| 10.1.4 | CAN_TASK Global State Field .....                               | 160 |
| 10.1.5 | CAN_TASK Communication Error .....                              | 160 |
| 10.1.6 | Queues .....  | 161 |
| 10.1.7 | CAN_TASK CMS Domain Services .....                              | 163 |
| 10.1.8 | CAN_TASK Timeout Counter .....                                  | 164 |
| 10.1.9 | CAN_TASK Node Init Counter .....                                | 165 |
| 10.2   | Extended Device Diagnostic Node .....                           | 166 |
| 10.2.1 | PCL_TASK Common Variables .....                                 | 166 |
| 10.2.2 | COS_TASK Common Variables .....                                 | 167 |
| 10.2.3 | COS_TASK User Communication .....                               | 169 |
| 10.2.4 | COS_TASK Node Management .....                                  | 170 |
| 10.2.5 | COS_TASK PDO Transfer .....                                     | 171 |
| 10.2.6 | COS_TASK SDO Transfer .....                                     | 172 |
| 10.2.7 | COS_TASK Object Dictionary .....                                | 173 |
| 10.2.8 | COS_TASK Receive Queue .....                                    | 173 |
| 10.2.9 | COS_TASK Transmit Queue .....                                   | 174 |
| 10.3   | COB-ID (Predefined Connection Set) .....                        | 175 |
| 10.4   | Object Dictionary .....   | 176 |
| 10.4.1 | Object Name and Object Code .....                               | 176 |
| 10.4.2 | Object Dictionary Data Types .....                              | 177 |
| 10.4.3 | Object Dictionary Profile .....                                 | 179 |
| 10.5   | Communication Profile, Device Profile and Device Type .....     | 181 |
| 10.5.1 | Communication Profile 301 .....                                 | 181 |
| 10.5.2 | Device Profile 401 - Device Profile for I/O Modules .....       | 181 |
| 10.5.3 | Device Profile 402 - Device Profile for Drives .....            | 182 |
| 10.5.4 | Device Profile 406 - Device Profile for Encoder .....           | 183 |
| 10.6   | PDO Mapping Method .....  | 184 |
| 10.7   | NMT State Machine (State Diagram) .....                         | 185 |
| 10.7.1 | Communication Characteristics in the different NMT States ..... | 186 |
| 10.8   | LSS/LMT Services .....  | 187 |
| 10.9   | Emergency Telegrams .....                                       | 188 |
| 10.9.1 | Emergency Telegram Error Codes .....                            | 189 |
| 11     | LISTS .....   | 191 |
| 11.1   | List of Figures .....   | 191 |
| 11.2   | List of Tables .....  | 194 |
| 12     | GLOSSARY .....  | 197 |

# 1 Overview SyCon

## 1.1 Main Functions

The main functions of the CANopen System Configurator are:

| Function      | Section                             | Short Description  |
|---------------|-------------------------------------|--|
| Configuration | <i>Overview Communication Types</i> | Overview communication types and description of the configuration steps    |
| Diagnostic    | <i>Diagnostic Functions</i>         | Diagnostic functions, e.g. Life List, Debugger, Global State Field etc.    |
|               | <i>User Data Transfer</i>           | I/O-Monitor, I/O-Watch, Read and Write Objects, Message-Monitor, Live List |
| Documentation | <i>Project Information</i>          | Set the project information  |
|               | <i>Print</i>                        | Print out the configuration  |

Table 1: SyCon Main Functions

## 1.2 Properties

### **SyCon is an universal Fieldbus Configurator**

This means you can configure the most important fieldbus systems like PROFIBUS, InterBus, CANopen, DeviceNet, ControlNet, SDS, AS-Interface etc. with the same tool.

### **SyCon is a global Fieldbus Configurator**

You configure all devices with one tool. SyCon checks the dependencies between the devices. SyCon only allows configurations that make sense. In case of doubt SyCon will give you a warning.

To Hilscher devices you can make downloads of the configuration data. For other devices, export functions or documentation possibilities are available.

### **SyCon documents your Fieldbus system**

After the configuration you can print out a detailed documentation of your fieldbus network. The details can be switched on/off. You can print a documentation with details between the bus topology and the detail of one device.

### **SyCon uses standardized configuration files**

Some protocols support standardized files containing information about all features and limitations of the Slave device. SyCon uses these files for the configuration.

### **SyCon is a diagnostic tool**

After the configuration you can switch SyCon into the diagnostic mode. You can watch all status information of Hilscher devices, see protocol dependent diagnostic information, e.g. live list or Slave diagnostic information on PROFIBUS. In this case a Slave not operating correctly will be displayed in a different colour.

### **SyCon can be extended**

SyCon consists of a universal EXE file and several protocol specific DLLs. Most customers demand SyCon only for one bus system.

SyCon can be enlarged later by adding one or more DLLs for any other available protocol. The configuration of the different protocols will be as similar as possible.

## 1.3 CAN and CANopen

### 1.3.1 CAN

CAN means Controller Area Network. The CAN specification describes the physical interface, the telegram structure and the secure transmission of a CAN telegram. It describes the send and the receive of a telegram.

The CAN telegram consists (simplified) of a telegram identifier and 0 to 8 bytes of data.

The meaning of the telegram identifier and of the max. 8 bytes user data is not described, e.g. it does not say anything about the application layer.

### 1.3.2 CANopen

CANopen is an open standard and based on CAN. The meaning of the telegram identifier and of the 0 to 8 bytes of user data is described (specified).

CANopen is a standard application layer defined by the CIA (CAN in automation) specifications DS 301.

CANopen is network concept and determines what data and what services are to be transmitted and what is the meaning of the data for the individual device classes.

CANopen provides functions for the network initialization, the network guarding and the network configuration.

CANopen offers a big flexibility.

### 1.3.3 CANopen Device Model

A CANopen device can be described generally as 3 components: communication, objects and application.

| Component         | Description   |
|-------------------|---|
| Communication     | The communication unit contains the mechanism for the transport of data according to the CANopen specification over the CAN.  |
| Object dictionary | The object dictionary is the connection between the application unit and the communication unit. It contains configuration data and device information. All entries have an object index (index) and a sub index. |
| Application       | The application unit describes the function of the CANopen device.  |

Table 2: Components of the CANopen Device Model



## 2 Installation and Licensing

### 2.1 System Requirements

- PC with 486-, Pentium processor or higher
- Windows 95/98/ME, Windows NT 4.0/2000/XP
- Free disk space: 30 - 80 MByte
- CD ROM drive
- RAM: min. 16 MByte
- Graphic resolution: min. 800 x 600 pixel
- Windows 95: Service Pack 1 or higher
- Windows NT: Service Pack 6 or higher
- COM/DCOM only for OPC Server
- Keyboard and Mouse

## 2.2 Software Installation

Close all application programs on the system!

Insert the CD in the local CD ROM drive. The installation program will start by itself (Autostart enabled). Otherwise change into the root directory on the CD and start Autorun.exe (Autostart disabled).

**Note:** Administrator privileges are required on Windows NT/2000/XP systems for installation!

The installation program ask for the components you want to install. Answer these questions with **Yes** or **No**.

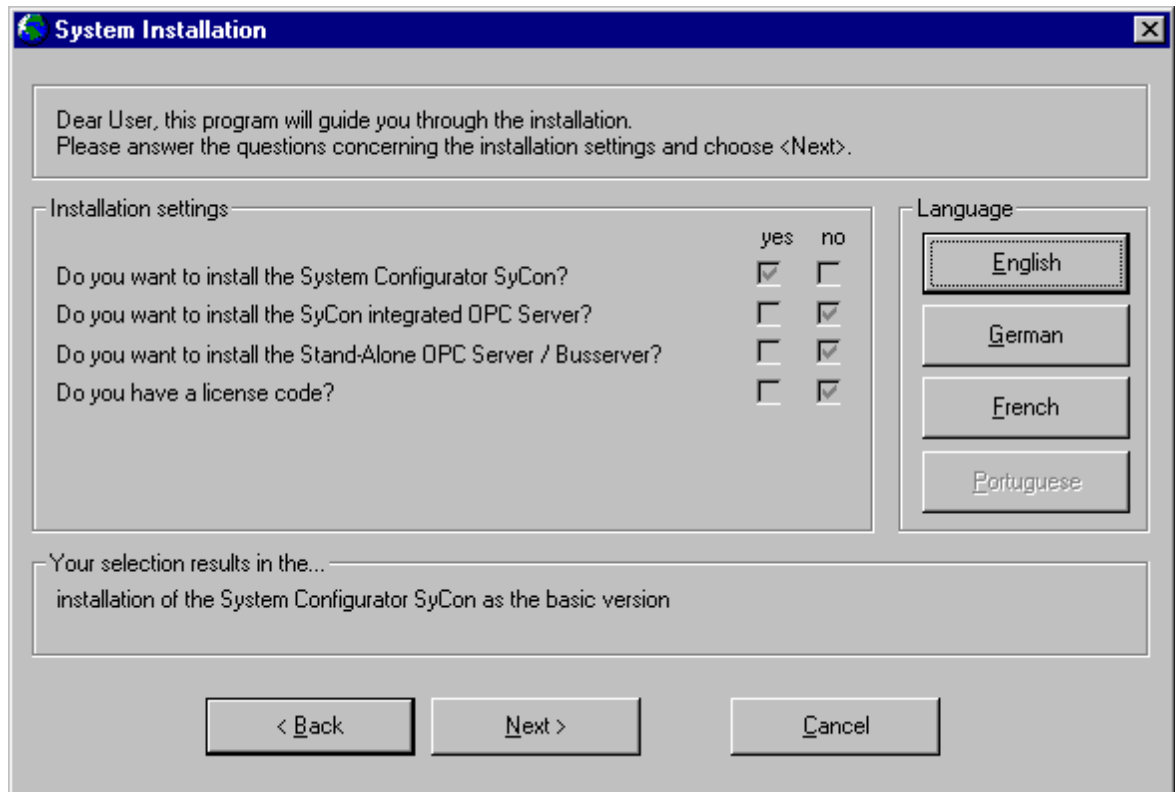


Figure 1: Selection for the Installation of the System Configurator in Basic Version

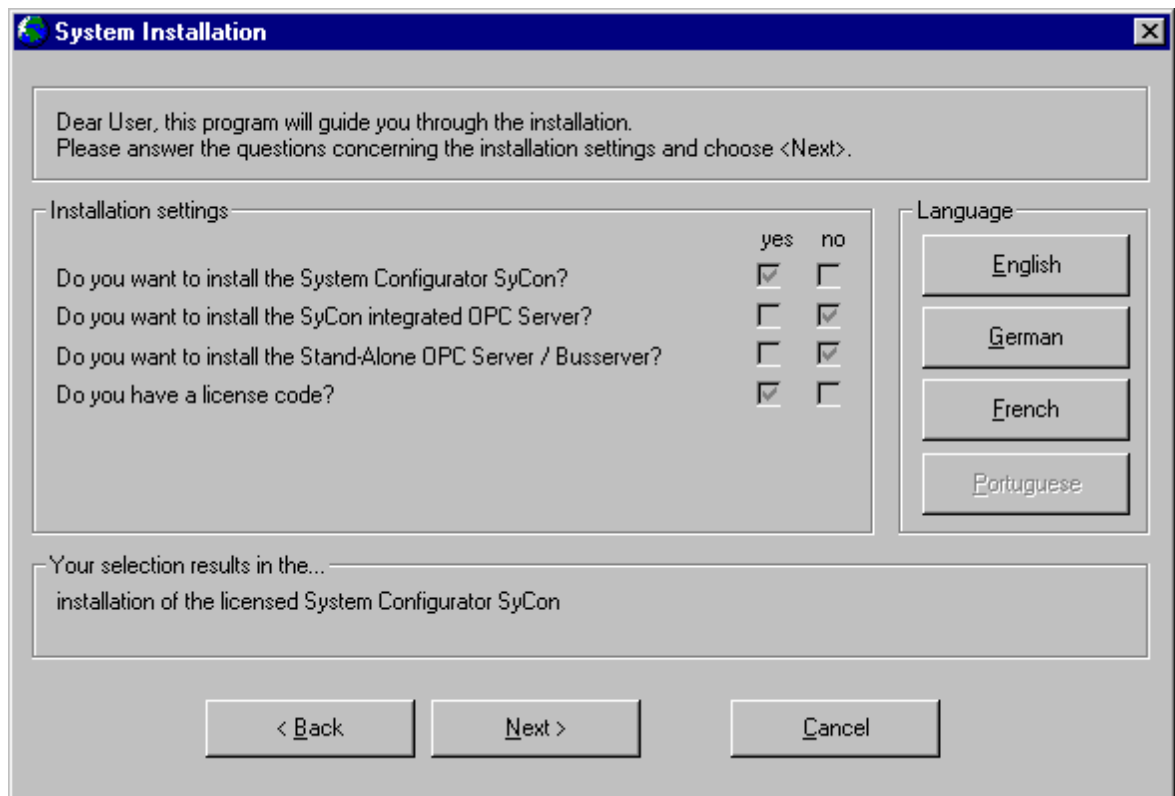


Figure 2: Selection for the Installation of the licensed System Configurator

It can be installed

- System Configurator SyCon (Configuration and diagnostic tool)
- OPC-Server (For OPC Communication)
- CIF Device Driver (Device Driver for access to the CIF)


If you have a license code or it is printed on the label of the CD, then answer the question for an existing license code with yes, otherwise a basic version of the System Configurator will be installed. Enter your name and the company name.

## 2.3 Installation of the System Configurator SyCon

During the installation the user and the company name must be entered. If you have a license code or it is printed on the label of the CD, it must also be entered now. Otherwise the System Configurator will work as a basic version. In this case, all functions are available, but the configuration is limited to two devices on the network, which is sufficient for Slave devices.

A license can be ordered by filling out the order form under the menu item **Help > Licensing** and fax this order form either to the distributor or directly to us.

Follow the instructions of the installation program by selecting the fieldbus system to be installed and answer all the questions with **OK** or **NEXT**.

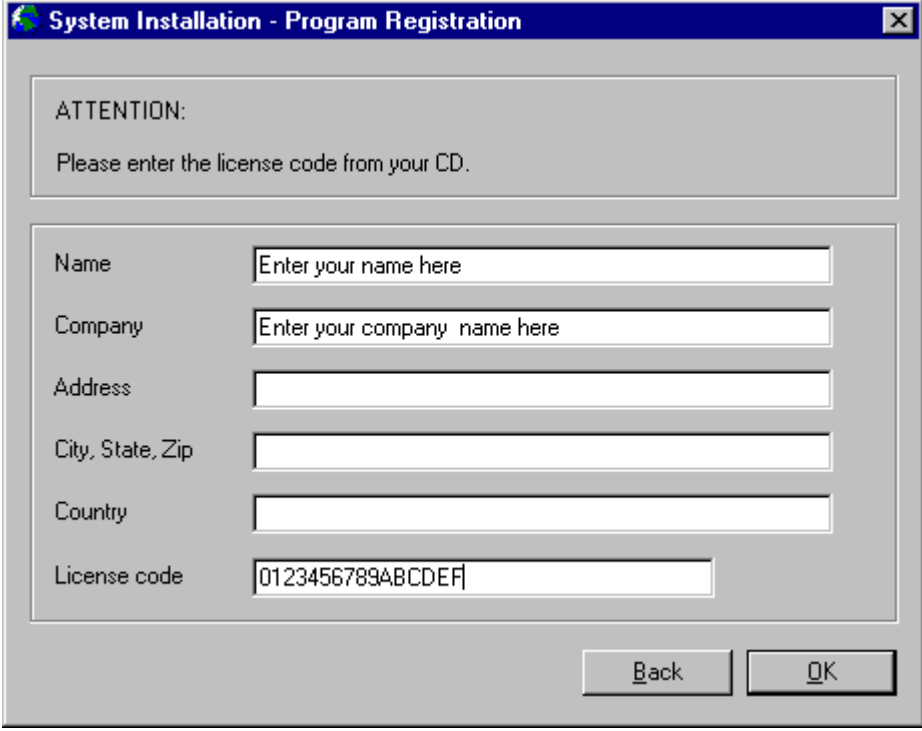

**System Installation - Program Registration**

ATTENTION:  
Please enter the license code from your CD.

Name:

Company:

Address:

City, State, Zip:

Country:

License code:

Back OK

Figure 3: Enter the Name, the Company Name and the License code

**Note:** The License code 0123456789ABCDEF is no valid code and is only used for explanation.

It is necessary to fill in the Name and the Company Name. It is optional to fill in the Address, the City, State, Zip and Country.

The installation program offers the following selections:

| Selection           | Default Settings                          | Meaning  |
|---------------------|---|--|
| Directory           | C:\Programs\Hilscher\SyCon                | Directory for Installation of the System Configurator and its Components |
| AS-Interface        | Selected                                  | Program DLL and Components of the Fieldbus System or the Protocol        |
| CANopen             | Selected                                  |  |
| ControlNet          | Selected                                  |  |
| DeviceNet           | Selected                                  |  |
| InterBus            | Selected                                  |  |
| PROFIBUS            | Selected                                  |  |
| Ethernet / Protocol | Selected                                  |  |
| SDS                 | Selected                                  |  |
| CIF Device Driver   | Selected<br>C:\Programs\CIF Device Driver | CIF Device Driver  |
| Program Menu        | SyCon System Configurator                 | Folder under Start > Programs  |

Table 3: Selection during Installation

The installation program copies the program files, GSD or EDS files and Bitmaps to the PC. Finally

- System DLLs
  - The Application
  - OLE Controls
  - ODBC Components
- are entered into the Registry.

## 2.4 Licensing

This section describes the steps to license the System Configurator from the already installed basic version of the System Configurator. To license the System Configurator during installation was already described above.

Deliveries that contain a license for the System Configurator have a formulary with. Fill out this paper (formulary) and fax it to your distributor or directly to us. After you receive the license code enter it as described in section *Enter the License Code* as described below on page 17.

An order form for a license for the System Configurator can be printed out and is described in the next section.

### 2.4.1 Ordering a License for the SyCon Configurator

To order the license code for the selected fieldbus systems select the menu **Help > Licensing**. The licensing window will be opened.

Fill in your name, the company name and the address for license information into the fields.

Select one more fieldbus modules. There are three tables to do this. The first table list the modules, that are not licensed. Doubleclick or select and click the **Add** button to move the desired modules into the table in the middle that are printed on the order form later. The modules, which are already licensed, are shown in the last table.

**Licensing**

Licensee Information

Name: Enter your name

Company: Enter your company name

Address: Enter address

City, State, Zip: Enter city, state, zip

Country: Enter your country

OK Cancel

Enter License Code...

Print Order Form...

Licensing of the fieldbus systems

Not licensed

| Module | Version    | Date       |
|--------|------------|------------|
| ASi    | 2, 6, 7, 0 | 15/05/2001 |
| DEVNet | 2, 6, 7, 0 | 15/05/2001 |

License ordered

| Module  | Version    | Date       |
|---------|------------|------------|
| Canopen | 2, 6, 8, 2 | 26/07/2001 |

License presented

| Module | Version | Date |
|--------|---------|------|
|        |         |      |

Add Delete

Figure 4: Example for Selection of the Fieldbus Module CANopen

After selecting the modules select the button **Print Order Form** and send us this paper by fax or by mail.

## 2.4.2 Enter the License Code

This section describes the steps to license the System Configurator from the already installed basic version of the System Configurator. To license the System Configurator during installation was already described above.

Select the menu **Help > Licensing**. The licensing window will be opened.

In the table in the middle are listed the fieldbus modules that were already selected for the order form. If this is not the case then select the fieldbus modules from the upper table by double click or by select and **Add**.

Check if the name and the company name was entered exactly as printed on the fax. Observe that the spelling is the same as on the fax, especially the small and capital letters.

Then select the button **Enter License Code**. The following windows appears. Enter the 16 digits of the license code.

**Note:** License codes with less than 16 digits can only be entered during the installation. In this case deinstall the System Configurator first and then restart the installation and enter the code. Also the System Configurator (license code with less than 16 digits) expects a license in the device.

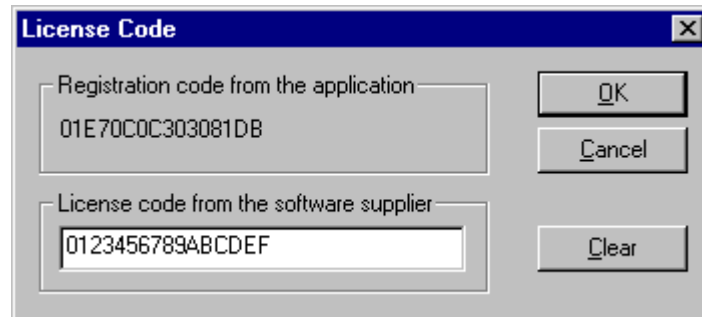


Figure 5: Enter the License Code

**Note:** The license code showed above is an invalid license code and is only used for explanation.

After you have entered the license code select the button **OK**. The code is verified. If the license code is valid SyCon will ask you to exit and restart the System Configurator to activate the license. If the license code is invalid the following window appears.



Figure 6: Note License code is invalid

In this case check

- the license code with the information on the fax
- the right spelling of the name and the company name with the information on the fax. Check especially for small and capital letters.

## 2.5 Scope of functions of the basic version and unlicensed Fieldbus Modules

The basic mode and unlicensed fieldbus modules have the following functionality:

- Full functionality for configuring up to two devices. For the configuration of a Hilscher Slave device this is enough.
- All diagnostic functions
- Open and download of an existing configuration file. If the configuration file has more than two devices, a modification of this configuration is not possible.



## 3 Getting Started – Configuration Steps

### 3.1 Overview Communication Types

Select the communication that you want to use from the following table. The configuration steps are described in the given section.

**Note:** The booklet with the CD ROM contains information for the hardware installation and information to the cable. At this point it is presupposed that the hardware installation was done.

CANopen offers the following communication possibilities:

| Communication                  | Overview in section                                     | Page |
|--------------------------------|---|------|
| PDO (CANopen)                  | <i>Configuration for PDO Communication (CANopen)</i>    | 22   |
| SDO (CANopen)                  | <i>Configuration for SDO Communication (CANopen)</i>    | 22   |
| Send/Receive Transparent (CAN) | <i>Configuration for Send/Receive transparent (CAN)</i> | 22   |

Table 4: Overview Communication Types CANopen

### 3.1.1 Configuration for PDO Communication (CANopen)

| Communication | Device                  | Device                | Described in section  | Page |
|---------------|-------------------------|-----------------------|---|------|
| PDO (CANopen) | Hilscher CANopen Master | Any CANopen Node      | <i>Configuration Hilscher CANopen Master to any CANopen Node</i>        | 23   |
|               | Any CANopen Master      | Hilscher CANopen Node | <i>Configuration Hilscher CANopen Node to any CANopen Master</i>        | 25   |
|               | Hilscher CANopen Master | Hilscher CANopen Node | <i>Configuration Hilscher CANopen Master to a Hilscher CANopen Node</i> | 26   |

Table 5: Overview Communication Types PDO Communication

### 3.1.2 Configuration for SDO Communication (CANopen)

| Communication | Device                  | Device                | Described in section  | Page |
|---------------|-------------------------|-----------------------|---|------|
| SDO (CANopen) | Hilscher CANopen Master | Any CANopen Node      | <i>Configuration Hilscher CANopen Master to any CANopen Node</i>        | 28   |
|               | Any CANopen Master      | Hilscher CANopen Node | <i>Configuration Hilscher CANopen Node to any CANopen Master</i>        | 29   |
|               | Hilscher CANopen Master | Hilscher CANopen Node | <i>Configuration Hilscher CANopen Master to a Hilscher CANopen Node</i> | 30   |

Table 6: Overview Communication Types SDO Communication

### 3.1.3 Configuration for Send/Receive transparent (CAN)

| Communication                      | Device                  | Device         | Described in section  | Page |
|------------------------------------|-------------------------|----------------|---|------|
| Send / Receive transparently (CAN) | Hilscher CANopen Master | Any CAN device | <i>Configuration Hilscher CANopen Master to any CAN Device for Send/Receive transparent (CAN)</i> | 31   |
|                                    | Hilscher CANopen Node   | Any CAN device | <i>Configuration Hilscher CANopen Node to any CAN Device for Send/Receive transparently (CAN)</i> | 32   |

Table 7: Overview Communication Types CAN send/receive transparent

## 3.2 Configuration for PDO Communication

### 3.2.1 Configuration Hilscher CANopen Master to any CANopen Node (PDO)

The following table describes the steps to configure a Hilscher CANopen Master to any CANopen Node for PDO communication, as it is typical for many cases.

| #  | Action   | Menu in the System Configurator  | Detail information in section                           | Page |
|----|--|--|---|------|
| 1  | Create a new project   | <b>File &gt; New &gt; CANopen</b>  | <i>Setting up the CANopen Configuration</i>             | 33   |
| 2  | Copy EDS file of CANopen Node, if Node is not available yet    | <b>File &gt; Copy EDS</b>  | <i>EDS files</i>  | 33   |
| 3  | Select Hilscher CANopen Master                                 | <b>Insert &gt; Master</b>  | <i>Insert Master</i>                                    | 34   |
| 4  | Select CANopen Node and set Node address                       | <b>Insert &gt; Node</b>  | <i>Insert Node</i>                                      | 38   |
| 5  | Set PDO  | Left mouse click at the Node, then<br><b>Settings &gt; Node Configuration</b>  | <i>Node Configuration</i>                               | 40   |
| 6  | Set Offset address (*1)  |  |   |      |
| 7  | Set Bus Parameter  | Left mouse click at the Master, then<br><b>Settings &gt; Bus Parameter</b>     | <i>Bus Parameter</i>                                    | 73   |
| 8  | Set Device Assignment, if no automatic assignment has occurred | Left mouse click at the Master, then<br><b>Settings &gt; Device Assignment</b> | <i>Device Assignment</i>                                | 63   |
| 9  | Save project   | <b>File &gt; Save</b>  | <i>Save and Save As</i>                                 | 123  |
| 10 | Download   | Left mouse click at the Master, then<br><b>Online &gt; Download</b>            | <i>Downloading the Configuration</i>                    | 89   |
| 11 | Live List  | Left mouse click at the Master, then<br><b>Online &gt; Live List</b>           | <i>Live List</i>  | 95   |
| 12 | Start Debugger   | Left mouse click at the Master, then<br><b>Online &gt; Start Debug Mode</b>    | <i>Debugmode (CANopen)</i>                              | 96   |
| 13 | Device Diagnostic  | Left mouse click at the Node, then<br><b>Online &gt; Device Diagnostic</b>     | <i>CANopen Node specific Diagnostic</i>                 | 97   |
| 14 | Stop Debugger  | <b>Online &gt; Stop Debug Mode</b>   | <i>Debugmode (CANopen)</i>                              | 96   |
| 15 | Global Diagnostic  | Left mouse click at the Master, then<br><b>Online &gt; Global State Field</b>  | <i>Global State Field</i>                               | 100  |
| 16 | Transfer user data:  | Left mouse click at the Master, then<br><b>Online &gt; I/O Monitor</b>         | <i>I/O-Monitor or (*2)<br/>alternatively: I/O Watch</i> | 105  |
|    | Send data,<br>Receive data                                     |  |   | 106  |

Table 8: Configuration Hilscher CANopen Master to any CANopen Node (PDO)

Notes see next page.

**Note (\*1):** The Offset addresses assigned in the Node configuration are always related to the Hilscher DP Master.

---

**Note (\*2):** Alternatively the CIF Device Driver Test program can be used for the test. After Board Select: Data Transfer > I/O Data > DevExchangeIO.

---

### 3.2.2 Configuration Hilscher CANopen Node to any CANopen Master (PDO)

The following table describes the steps to configure a Hilscher CANopen Node to any CANopen Master for PDO communication, as it is typical for many cases.

| # | Action   | Menu in the System Configurator  | Detail information in section                           | Page       |
|---|--|--|---|------------|
| 1 | Create a new project   | <b>File &gt; New &gt; CANopen</b>  | <i>Setting up the CANopen Configuration</i>             | 33         |
| 2 | Select Hilscher CANopen Master (*1)                            | <b>Insert &gt; Master</b>  | <i>Insert Master</i>                                    | 34         |
| 3 | Select Hilscher CANopen Node and set Node address              | <b>Insert &gt; Node</b>  | <i>Insert Node</i>                                      | 38         |
| 4 | Set Bus Parameter  | Left mouse click at the Master, then<br><b>Settings &gt; Bus Parameter</b>                                     | <i>Bus Parameter</i>                                    | 73         |
| 5 | Set Device Assignment, if no automatic assignment has occurred | Left mouse click at the Node, then<br><b>Settings &gt; Device Assignment</b>                                   | <i>Device Assignment</i>                                | 63         |
| 6 | Save project   | <b>File &gt; Save</b>  | <i>Save and Save As</i>                                 | 123        |
| 7 | Download   | Left mouse click at the Node, then<br><b>Online &gt; Download</b>  | <i>Downloading the Configuration</i>                    | 89         |
| 8 | PDO diagnostic   | Left mouse click at the Node, then<br><b>Online &gt; Extended Device Diagnostic &gt; COS_TASK PDO Transfer</b> | <i>COS_TASK PDO Transfer</i>                            | 171        |
| 9 | Transfer user data:<br>Send data,<br>Receive data              | Left mouse click at the Master, then<br><b>Online &gt; I/O Monitor</b>   | <i>I/O-Monitor or (*2)<br/>alternatively: I/O Watch</i> | 105<br>106 |

Table 9: Configuration Hilscher CANopen Node to any CANopen Master (PDO)

**Note:** The Hilscher CANopen Node is configured via the CANopen Bus by means of SDO download by a configuration master. Without a configuration master the Hilscher CANopen Node provides two send- and two receive-PDOs with a default mapping for the communication.

**Note (\*1):** Insert a Hilscher CANopen Master into the configuration. It serves as dummy and it does not have to agree with the connected Master.

**Note (\*2):** Alternatively the CIF Device Driver Test program can be used for the test. After Board Select: Data Transfer > I/O Data > DevExchangeIO.

### 3.2.3 Configuration Hilscher CANopen Master to a Hilscher CANopen Node (PDO)

The following table describes the steps to configure a Hilscher CANopen Master to a Hilscher CANopen Node for PDO communication, as it is typical for many cases.

| #  | Action  | Menu in the System Configurator  | Detail information in section               | Page |
|----|---|--|---|------|
| 1  | Create a new project  | <b>File &gt; New &gt; CANopen</b>  | <i>Setting up the CANopen Configuration</i> | 33   |
| 2  | Select Hilscher CANopen Master  | <b>Insert &gt; Master</b>  | <i>Insert Master</i>                        | 34   |
| 3  | Select Hilscher CANopen Node and set Node address                             | <b>Insert &gt; Node</b>  | <i>Insert Node</i>                          | 38   |
| 4  | Set PDO   | Left mouse click at the Node, then   | <i>Node Configuration</i>                   | 40   |
| 5  | Set Offset address (*1)   | <b>Settings &gt; Node Configuration</b>  |   |      |
| 6  | Set Bus Parameter   | Left mouse click at the Master, then<br><b>Settings &gt; Bus Parameter</b>     | <i>Bus Parameter</i>                        | 73   |
| 7  | Set Device Assignment for the Master, if no automatic assignment has occurred | Left mouse click at the Master, then<br><b>Settings &gt; Device Assignment</b> | <i>Device Assignment</i>                    | 63   |
| 8  | Set Device Assignment for the Node, if no automatic assignment has occurred   | Left mouse click at the Node, then<br><b>Settings &gt; Device Assignment</b>   |   |      |
| 9  | Save project  | <b>File &gt; Save</b>  | <i>Save and Save As</i>                     | 123  |
| 10 | Download on the Master  | Left mouse click at the Master, then<br><b>Online &gt; Download</b>            | <i>Downloading the Configuration</i>        | 89   |
| 11 | Download on the Node  | Left mouse click at the Node, then<br><b>Online &gt; Download</b>              |   |      |
| 12 | Live List   | Left mouse click at the Master, then<br><b>Online &gt; Live List</b>           | <i>Live List</i>                            | 95   |
| 13 | Start Debugger  | Left mouse click at the Master, then<br><b>Online &gt; Start Debug Mode</b>    | <i>Debugmode (CANopen)</i>                  | 96   |
| 14 | Device Diagnostic   | Left mouse click at the Node, then<br><b>Online &gt; Device Diagnostic</b>     | <i>CANopen Node specific Diagnostic</i>     | 97   |
| 15 | Stop Debugger   | <b>Online &gt; Stop Debug Mode</b>   | <i>Debugmode (CANopen)</i>                  | 96   |
| 16 | Global Diagnostic   | Left mouse click at the Master, then<br><b>Online &gt; Global State Field</b>  | <i>Global State Field</i>                   | 100  |
| 17 | Transfer user data:<br>Send data,<br>Receive data                             | Left mouse click at the Master, then<br><b>Online &gt; I/O Monitor</b>         | <i>I/O-Monitor or (*2)</i>                  | 105  |
|    |   | Left mouse click at the Node, then<br><b>Online &gt; I/O Monitor</b>           | <i>alternatively: I/O Watch</i>             | 106  |
|    |   |  | <i>I/O-Monitor (*2)</i>                     | 105  |

Table 10: Configuration Hilscher CANopen Master to a Hilscher CANopen Node (PDO)

Notes see next page.

**Note (\*1):** The Offset addresses assigned in the Node configuration are always related to the Hilscher DP Master.

---

**Note (\*2):** Alternatively the CIF Device Driver Test program can be used for the test. After Board Select: Data Transfer > I/O Data > DevExchangeIO.

---

### 3.3 Configuration for SDO Communication

#### 3.3.1 Configuration Hilscher CANopen Master to any CANopen Node (SDO)

The following table describes the steps to configure a Hilscher CANopen Master to any CANopen Node for SDO communication, as it is typical for many cases.

| #  | Action   | Menu in the System Configurator  | Detail information in section               | Page |
|----|--|--|---|------|
| 1  | Create a new project   | <b>File &gt; New &gt; CANopen</b>  | <i>Setting up the CANopen Configuration</i> | 33   |
| 2  | Copy EDS file of CANopen Node, if Node is not available yet    | <b>File &gt; Copy EDS</b>  | <i>EDS files</i>                            | 33   |
| 3  | Select Hilscher CANopen Master                                 | <b>Insert &gt; Master</b>  | <i>Insert Master</i>                        | 34   |
| 4  | Select CANopen Node and set Node address                       | <b>Insert &gt; Node</b>  | <i>Insert Node</i>                          | 38   |
| 5  | Set Bus Parameter  | Left mouse click at the Master, then<br><b>Settings &gt; Bus Parameter</b>     | <i>Bus Parameter</i>                        | 73   |
| 6  | Set Device Assignment, if no automatic assignment has occurred | Left mouse click at the Master, then<br><b>Settings &gt; Device Assignment</b> | <i>Device Assignment</i>                    | 63   |
| 7  | Save project   | <b>File &gt; Save</b>  | <i>Save and Save As</i>                     | 123  |
| 8  | Download   | Left mouse click at the Master, then<br><b>Online &gt; Download</b>            | <i>Downloading the Configuration</i>        | 89   |
| 9  | Live List  | Left mouse click at the Master, then<br><b>Online &gt; Live List</b>           | <i>Live List</i>                            | 95   |
| 10 | Transfer user data:  | Left mouse click at the Node, then   | <i>Read Objects (SDO Upload)</i>            | 108  |
|    | Read objects   | <b>Online &gt; Read Objects</b>  | <i>Write Object (SDO Download)</i>          | 108  |
|    | Write objects  | <b>Online &gt; Write Objects</b>   |   |      |

Table 11: Configuration Hilscher CANopen Master to any CANopen Node (SDO)

### 3.3.2 Configuration Hilscher CANopen Node to any CANopen Master (SDO)

The following table describes the steps to configure a Hilscher CANopen Node to any CANopen Master for SDO communication, as it is typical for many cases.

| # | Action   | Menu in the System Configurator   | Detail information in section               | Page |
|---|--|---|---|------|
| 1 | Create a new project   | <b>File &gt; New &gt; CANopen</b>   | <i>Setting up the CANopen Configuration</i> | 33   |
| 2 | Select Hilscher CANopen Master (*1)                            | <b>Insert &gt; Master</b>   | <i>Insert Master</i>                        | 34   |
| 3 | Select Hilscher CANopen Node and set Node address              | <b>Insert &gt; Node</b>   | <i>Insert Node</i>                          | 38   |
| 4 | Set Bus Parameter  | Left mouse click at the Master, then<br><b>Settings &gt; Bus Parameter</b>          | <i>Bus Parameter</i>                        | 73   |
| 5 | Set Device Assignment, if no automatic assignment has occurred | Left mouse click at the Node, then<br><b>Settings &gt; Device Assignment</b>        | <i>Device Assignment</i>                    | 63   |
| 6 | Save project   | <b>File &gt; Save</b>   | <i>Save and Save As</i>                     | 123  |
| 7 | Download   | Left mouse click at the Node, then<br><b>Online &gt; Download</b>                   | <i>Downloading the Configuration</i>        | 89   |
| 8 | SDO Diagnostic   | Left mouse click at the Node, then<br><b>Online &gt; Extended Device Diagnostic</b> | <i>COS_TASK SDO Transfer</i>                | 172  |
| 9 | Transfer user data:<br>Read objects<br>Write objects           | Left mouse click at the Node, then<br><b>Online &gt; Message Monitor</b>            | <i>Message Monitor</i>                      | 109  |

Table 12: Configuration Hilscher CANopen Node to any CANopen Master (SDO)

**Note (\*1):** Insert a Hilscher CANopen Master into the configuration. It serves as dummy and it does not have to agree with the connected Master.

### 3.3.3 Configuration Hilscher CANopen Master to a Hilscher CANopen Node

The following table describes the steps to configure a Hilscher CANopen Master to a Hilscher CANopen Node for SDO communication, as it is typical for many cases.

| #  | Action  | Menu in the System Configurator  | Detail information in section               | Page |
|----|---|--|---|------|
| 1  | Create a new project  | <b>File &gt; New &gt; CANopen</b>  | <i>Setting up the CANopen Configuration</i> | 33   |
| 2  | Select Hilscher CANopen Master  | <b>Insert &gt; Master</b>  | <i>Insert Master</i>                        | 34   |
| 3  | Select CANopen Node and set Node address                                      | <b>Insert &gt; Node</b>  | <i>Insert Node</i>                          | 38   |
| 4  | Set Bus Parameter   | Left mouse click at the Master, then<br><b>Settings &gt; Bus Parameter</b>     | <i>Bus Parameter</i>                        | 73   |
| 5  | Set Device Assignment for the Master, if no automatic assignment has occurred | Left mouse click at the Master, then<br><b>Settings &gt; Device Assignment</b> | <i>Device Assignment</i>                    | 63   |
| 6  | Set Device Assignment for the Node, if no automatic assignment has occurred   | Left mouse click at the Node, then<br><b>Settings &gt; Device Assignment</b>   |   |      |
| 7  | Save project  | <b>File &gt; Save</b>  | <i>Save and Save As</i>                     | 123  |
| 8  | Download on the Master  | Left mouse click at the Master, then<br><b>Online &gt; Download</b>            | <i>Downloading the Configuration</i>        | 89   |
| 9  | Download on the Node  | Left mouse click at the Node, then<br><b>Online &gt; Download</b>              |   |      |
| 10 | Live List   | Left mouse click at the Master, then<br><b>Online &gt; Live List</b>           | <i>Live List</i>                            | 95   |
| 11 | Transfer user data:<br>Read objects,<br>Write objects                         | Left mouse click at the Node, then<br><b>Online &gt; Read Objects</b>          | <i>Read Objects (SDO Upload)</i>            | 108  |
|    |   | <b>Online &gt; Write Objects</b>   | <i>Write Object (SDO Download)</i>          | 108  |
|    |   | Left mouse click at the Node, then<br><b>Online &gt; Message Monitor</b>       | <i>Message Monitor</i>                      | 109  |

Table 13: Configuration Hilscher CANopen Master to a Hilscher CANopen Node

## 3.4 Configuration for Send/Receive transparently (CAN)

### 3.4.1 Configuration Hilscher CANopen Master to any CAN Device for Send/Receive transparent (CAN)

The following table describes the steps to configure a Hilscher CANopen Master for send/receive CAN telegrams (Layer 2) transparently, as it is typical for many cases.

| # | Action  | Menu in the System Configurator  | Detail information in section  | Page       |
|---|---|--|--|------------|
| 1 | Create a new project  | <b>File &gt; New &gt; CANopen</b>  | <i>Setting up the CANopen Configuration</i>  | 33         |
| 2 | Select Hilscher CANopen Master  | <b>Insert &gt; Master</b>  | <i>Insert Master</i>   | 34         |
| 3 | Set Bus Parameter   | Left mouse click at the Master, then<br><b>Settings &gt; Bus Parameter</b>     | <i>Bus Parameter</i>   | 73         |
| 4 | Set Device Assignment for the Master, if no automatic assignment has occurred | Left mouse click at the Master, then<br><b>Settings &gt; Device Assignment</b> | <i>Device Assignment</i>   | 63         |
| 5 | Save project  | <b>File &gt; Save</b>  | <i>Save and Save As</i>  | 123        |
| 6 | Download on the Master  | Left mouse click at the Master, then<br><b>Online &gt; Download</b>            | <i>Downloading the Configuration</i>   | 89         |
| 7 | Transfer user data:<br>Send CAN Telegrams<br>Receive CAN Telegrams (*1)       | Left mouse click at the Master, then<br><b>Online &gt; Message Monitor</b>     | <i>Message Monitor for Sending CAN Telegrams (transparent)</i><br><i>Message Monitor for Receiving CAN Telegrams (transparent)</i> | 117<br>119 |

Table 14: Configuration Hilscher CANopen Master to any CAN Device for Send/Receive transparent (CAN)

**Note (\*1):** The information, which CAN Telegram should receive Identifier, is activated per message.

### 3.4.2 Configuration Hilscher CANopen Node to any CAN Device for Send/Receive transparently (CAN)

The following table describes the steps to configure a Hilscher CANopen Node for send/receive CAN telegrams (Layer 2) transparently, as it is typical for many cases.

| # | Action  | Menu in the System Configurator  | Detail information in section  | Page       |
|---|---|--|--|------------|
| 1 | Create a new project  | <b>File &gt; New &gt; CANopen</b>  | <i>Setting up the CANopen Configuration</i>  | 33         |
| 2 | Select Hilscher CANopen Master (*1)   | <b>Insert &gt; Master</b>  | <i>Insert Master</i>   | 34         |
| 3 | Select Hilscher CANopen Node  | <b>Insert &gt; Node</b>  | <i>Insert Node</i>   | 38         |
| 4 | Set Bus Parameter   | Left mouse click at the Master, then<br><b>Settings &gt; Bus Parameter</b>   | <i>Bus Parameter</i>   | 73         |
| 5 | Set Device Assignment for the Node, if no automatic assignment has occurred | Left mouse click at the Node, then<br><b>Settings &gt; Device Assignment</b> | <i>Device Assignment</i>   | 63         |
| 6 | Save project  | <b>File &gt; Save</b>  | <i>Save and Save As</i>  | 123        |
| 7 | Download on the Node  | Left mouse click at the Node, then<br><b>Online &gt; Download</b>            | <i>Downloading the Configuration</i>   | 89         |
| 8 | Transfer user data:<br>Send CAN Telegrams<br>Receive CAN Telegrams (*2)     | Left mouse click at the Node, then<br><b>Online &gt; Message Monitor</b>     | <i>Message Monitor for Sending CAN Telegrams (transparent)</i><br><i>Message Monitor for Receiving CAN Telegrams (transparent)</i> | 117<br>119 |

Table 15: Configuration Hilscher CANopen Node to any CAN Device for Send/Receive transparently (CAN)

**Note (\*1):** Insert a Hilscher CANopen Master into the configuration. It serves as dummy and it does not have to agree with the connected Master.

**Note (\*2):** The information, which CAN Telegram should receive Identifier, is activated per message.

## 4 Configuration of CANopen with SyCon

### 4.1 Setting up the CANopen Configuration

To create a new configuration, choose the **File > New** menu. This will offer a selection list of fieldbus systems. Select **CANopen**. If only the CANopen fieldbus system is installed, the configuration window will open directly.

The name of the configuration file can be allocated when the configuration is finished or with **File > Save As**.

### 4.2 EDS files

Each CANopen device manufacturer defines the CANopen characteristics of its device in a so called Electronic Data Sheet, also called EDS file. This description files form the basis of the configuration.

| Devices                          | EDS files   |
|----------------------------------|---|
| Hilscher devices                 | The EDS files for Hilscher devices are already included in the delivery of the System Configurator SyCon. |
| Devices from other manufacturers | For other devices these have to be delivered by the device manufacturer.                                  |

Table 16: EDS files - Source of Supply

During the program start the System Configurator reads in automatically all EDS files, which are put down in the EDS directory. In this act the device names are taken up to an internal list. The device-specific data are read out during the configuration directly from the EDS file.

If a CANopen Node (Slave) is needed, which does not appear yet in the selection list, then the appropriate EDS file can be copied in the EDS directory with the menu **File > Copy EDS**. Another possibility is to copy the EDS file with the Windows Explore into the SyCon EDS directory and then read in the EDS files in the EDS directory again with the menu **Settings > Path**.

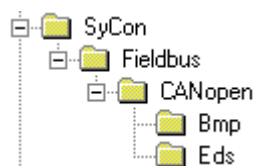


Figure 7: EDS files and bitmaps directory

The EDS path is changeable. The standard setting can be changed with the menu **Settings > Path**.

## 4.3 Master

### 4.3.1 Insert Master

In order to insert a (Hilscher) Master into the configuration, choose the **Insert > Master** menu, in order to open the selection window, or click on the symbol:



Figure 8: Insert > Master Symbol

A window appears where you can select one master device.

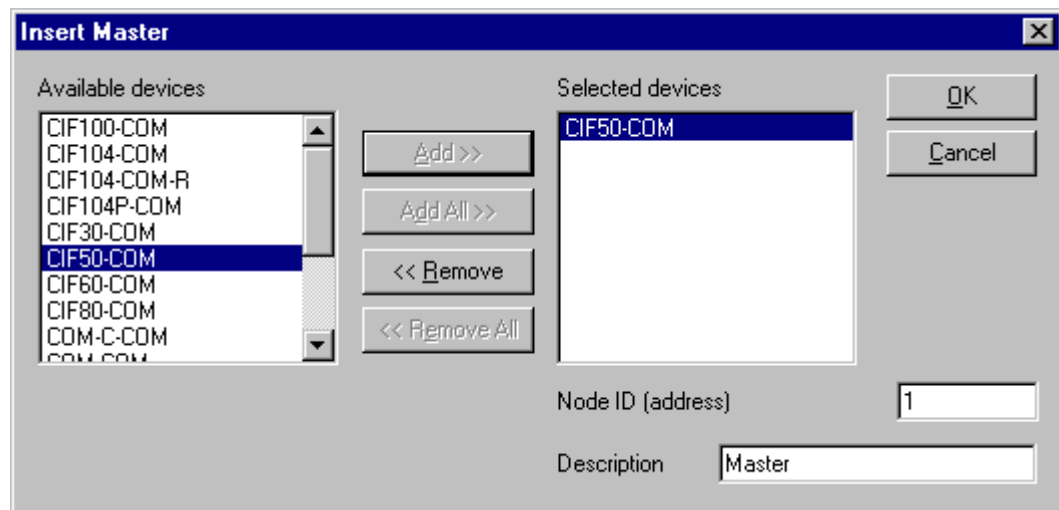


Figure 9: Insert > Master

In this window you select the Master you want by clicking on it in the list **Available devices** and then click the **Add** button or make a double click to put the Master in the list **Selected devices**. With **OK** you confirm the selection and the Master will be insert.

This example shows a CIF 50-COM with the **Description** Master, which is changeable in this field.

The **Node ID (address)** is necessary for the addressing of the device at the bus and has to be unique. Therefore it is not allowed to use this number two times in the same network.

#### 4.3.1.1 Hardware Assignment

If you have configured the CIF Device Driver Setup for your hardware and you insert the correct Master in the SyCon, it detects this hardware. SyCon displays at which board and which driver was detected and ask, if the hardware should be assigned.

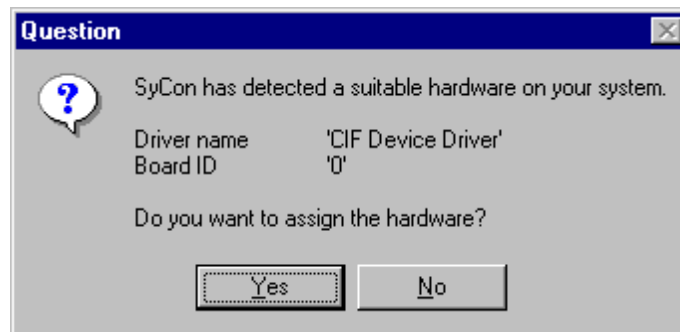


Figure 10: Hardware Assignment Master

If you answer with **Yes**, the Hardware is assigned. If you answer with **No** you have to assign this hardware with **Settings > Device Assignment** (in section *Device Assignment* at page 63).

### 4.3.2 Master Configuration

The Master specific configuration is carried out in the following window and sub window.

Set the focus on the Master (left mouse click) and then select the **Settings > Master Configuration** menu

or

A double click on the symbol of the Master which should be configured will open the following window.

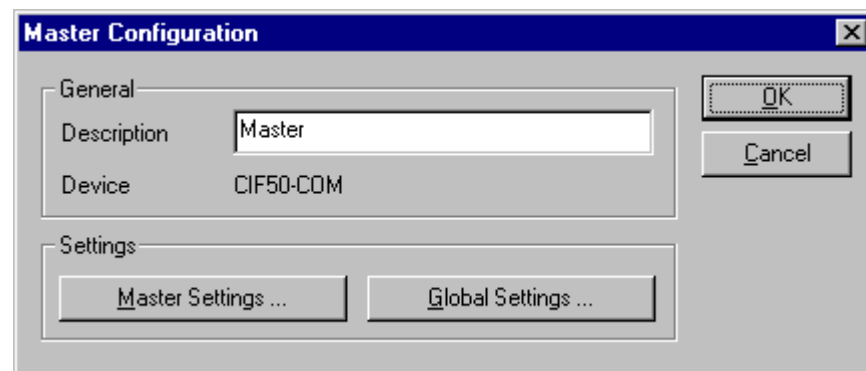


Figure 11: Settings > Master Configuration

The following can be set in this Master Configuration window:

- a (symbolic) **Description** of the Master
- the window *Master Settings* (described on page 76) can be opened
- the window *Global Settings* (described on page 80) can be opened

### 4.3.3 Replace Master

If a Master already exists in the configuration and should be replaced against another Master, you first have to set the focus on the Master (left mouse click) and then select the menu **Edit > Replace**.

or

make a right mouse click at the Master and select in the now opened window the menu **Replace**.

In the opened window appears the question if the Master should be replaced.

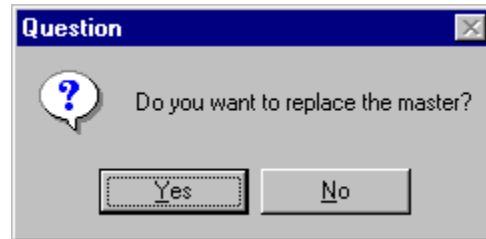


Figure 12: Security question Replace Master

If you click the **Yes** button a new window opens, where you can replace the Master against the existing Master.

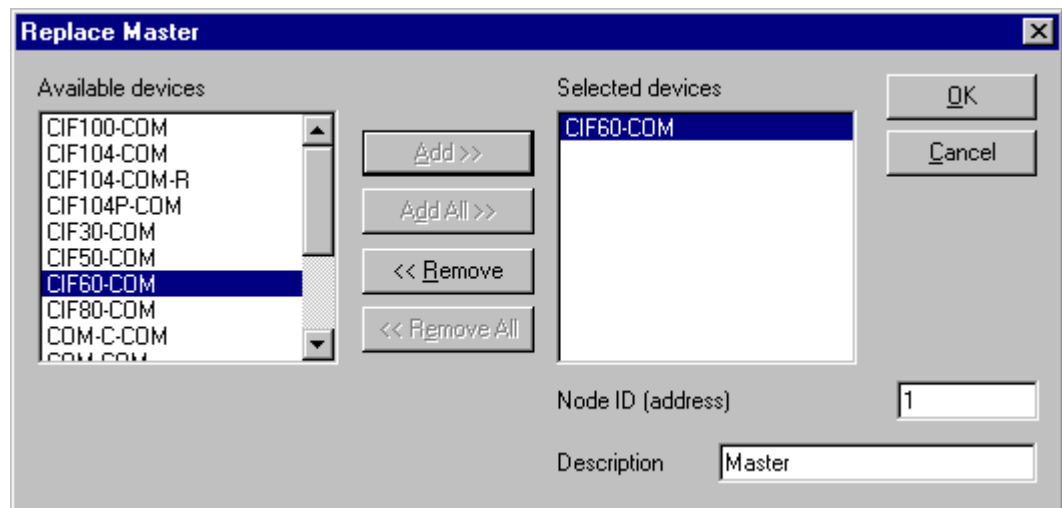


Figure 13: Edit > Replace Master

In this window you select the Master you want by clicking on it. By clicking the **Add** button this Master is shown in the first position by **Selected devices**. With **OK** you confirm the selection and the Master will be replaced.

## 4.4 Node (Slave)

### 4.4.1 Insert Node

In order to insert a CANopen Node into the configuration, select the **Insert > Node** menu to open the selection window, or click on the symbol:

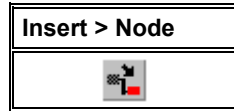


Figure 14: Insert > Node

The mouse cursor changes automatically to the insert Node cursor. Click on the position where you want to insert the new Node. A dialogue box appears where you can select one or more Nodes for insertion.

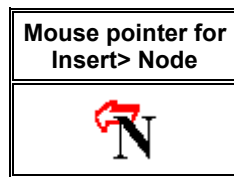


Figure 15: Mouse pointer for Insert > Node

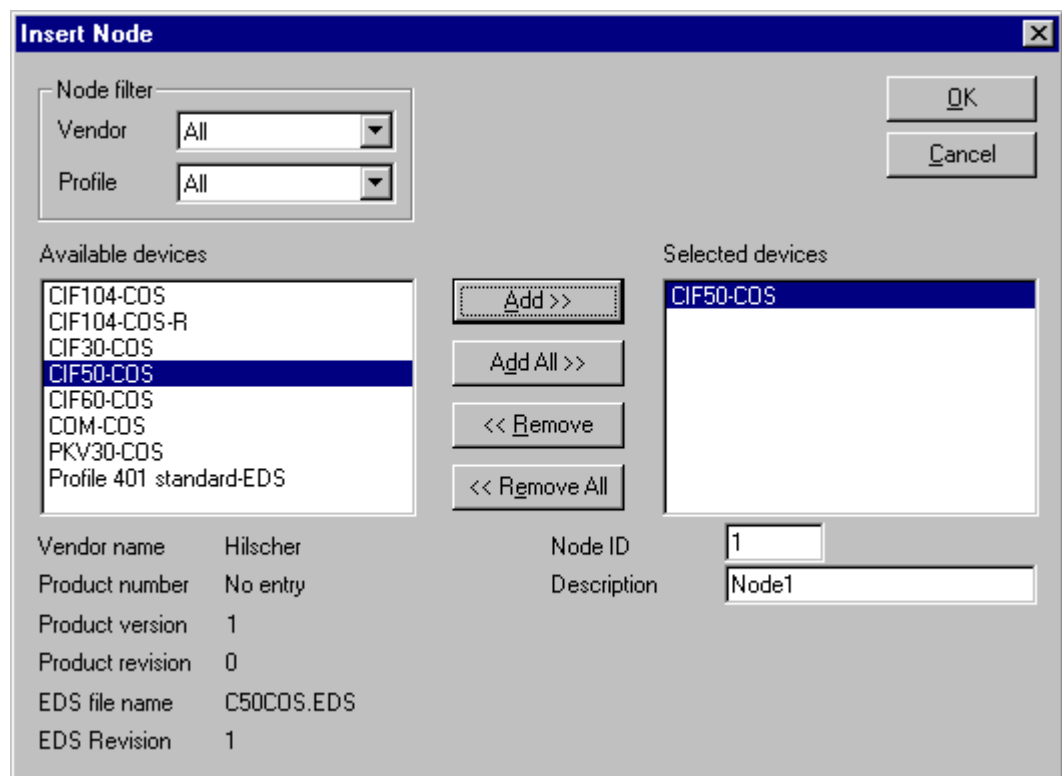


Figure 16: Insert > Node

The left list all available Node devices are shown which are present in the EDS directory. A filter can be used to limit the selection list via the **Vendor** and the **Profile**. If one Node is selected there you can see some additional information about that Node below the list box.

With a double click or with the button **Add**, the Node appears in the list **Selected devices**. When a new Node is chosen SyCon always looks for the next free Node ID value and propose it. If you select each Node by each you can change its Node ID and give it a short description in the field **Description**. The Description field will accept up to 32 characters of text.

It is possible to configured an available Node multiple times with different **Node IDs**. In CANopen the Node address is called Node ID. The Node ID distinguishes the different Nodes from each other in the network. It's a unique number that can't be forgiven twice. Therefore your made entry in the field **Node ID** must be equivalent to the real Node ID itself, else the master will get no contact later to the Node when it wants to establish the communication.

#### 4.4.1.1 Hardware Assignment

If you have configured the CIF Device Driver Setup for your hardware and you insert the correct Node in the SyCon, it detects this hardware. SyCon displays at which board and which driver was detected and ask, if the hardware should be assigned.

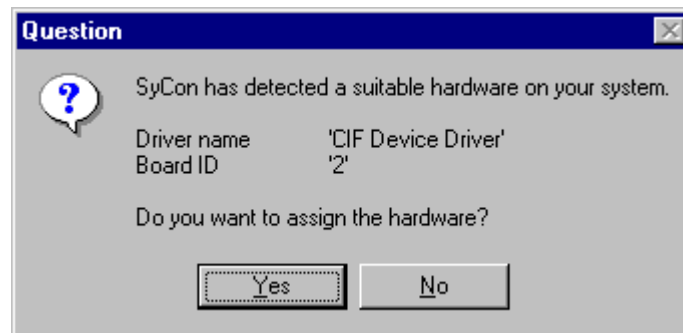


Figure 17: Hardware Assignment Node

If you answer with **Yes**, the Hardware is assigned. If you answer with **No** you have to assign this hardware with **Settings > Device Assignment** (in section *Device Assignment* at page 63).

## 4.4.2 Node Configuration

At first you have to make a left mouse click on the symbol of the Node and select the menu **Settings > Node Configuration**.

or

Make a double click on the CANopen Node to open the Node Configuration window.

The Node specific configuration is carried out in this window. Here the PDO (Process data objects) and their addresses in the process data image are assigned in the Hilscher Master. Please note, that the addresses have to agree with the addresses in the PC application program.

---

**Note 1 (Hilscher Master):** The information about the Offset addresses relate to the addressing of the data in the Master! The addresses don't relate to the addressing of the data in the Node. The Node organizes its data addressing itself.

---

---

**Note 2 (Hilscher Node):** In case of a Hilscher Node (Slave) the In- and Output data are taken over at the bus directly in the Dual-port memory. The Offset addresses relate to the Master.

---

**Node Configuration**

Node: CIF50-COS      Node ID (address): 2

Description: Node2

File name: C50COS.EDS

☒ Activate node in actual configuration

☒ Automatic COB-ID allocation in accordance with Profile 301

Device Profile: 301      Device type: 0

Configuration Error Control Protocol

Emergency COB-ID: 130

Nodeguard COB-ID: 1794

OK

Cancel

Node BootUp

OPC Objects

Object Configuration

Predefined Process Data Objects (PDOs) from EDS file

| Obj.Idx. | PDO name         |
|----------|------------------|
| 1400     | RxPDO1 parameter |
| 1401     | RxPDO2 parameter |
| 1800     | TxPDO1 parameter |
| 1801     | TxPDO2 parameter |

Actual node: 2 / CIF50-COS

PDO mapping method: DS301 V4

Add to configured PDOs

Configured PDOs

| PDO name | Symbolic Name | COB-ID | I Type | I Addr. | I Len. | O Type | O Addr. | O Len. |
|----------|---------------|--------|--------|---------|--------|--------|---------|--------|
| RxPDO1   | PDO_1400      | 514    |        |         |        | QB     | 0       | 8      |
| TxPDO1   | PDO_1800      | 386    | IB     | 0       | 8      |        |         |        |

PDO Contents Mapping...

PDO Characteristics...

Define new Receive PDO...

Define new Transmit PDO...

Delete configured PDO

Symbolic Names

Figure 18: Settings &gt; Node Configuration

The following table shows the fields and elements of the Node Configuration window.

- **Node**  
The name of the device coming from the EDS file is shown in the field **Node**.
- **Description**  
The field **Description** contains a symbolic name for the Node.
- **File name**  
File name of the EDS file.

- **Activate Node in actual configuration**

If **Activate Node in actual configuration** is selected, process memory in the Master is reserved for this Node and the Master makes a data exchange at the bus to this Node. If this setting is deactivated, the Master reserves memory in the process data image for this Node, but no data exchange to this Node is made at the bus.

- **Automatic COB-ID allocation in accordance with Profile 301**

In the basic setting **Automatic COB-ID allocation in accordance with Profile 301** is activated. Then the COB-ID is preset for a PDO depending on the Node address and depending on the used PDO. If this field is deactivated, a manual assignment can be done.

In order to reduce configuration effort for simple networks a mandatory default identifier allocation scheme is defined, which is described in section *COB-ID* at page 175. These identifiers are available in the Pre-operational state of a Node which works in accordance to the Communication Profile 301 directly after initialization. These pre-defined connection sets are used by SyCon if automatic allocation is enabled. Then the COB-IDs in the already configured PDO COB-ID column are not editable. So if the automatic allocation is disabled the COB-IDs can be edited in the range from 0 –2047.

---

**Note:** If the setting Automatic COB-ID allocation in accordance with Profile 301 is deactivated, SyCon does not check if a COB-ID was assigned two times. This is the job of the user. Further more you have to check, if the Node supports this function.

---

- **Device Profile and Device Type**

Because of the information of the Device Profile and the Device Type the Master can read out the Object 1000H from the Node and compare it with this information when it start communication.

If the Device Profile and the Device Type do not agree the Master reports a parameterization error.

Further information about the Device Profile and the Device Type you find in section *Device Profile and Device Type* at page 45.

- **NodeID (address)**

The **NodeID (address)** is necessary for the addressing of the device at the bus and has to be unique. Therefore it is not allowed to use this number two times in the same network. And it has to agree with the set Node address of the device. Otherwise it is not possible for the Master to build up a communication to this device.

The NodeID (address) also fixes the used COB-ID.
- **Configuration Error Control Protocol**

The **Configuration Error Control Protocol** makes for setting the device control via the Node Guarding, Live Guarding and respectively Heartbeat.

The **Guard Time** and the **Live Time Factor** for the Node Guarding are set in the **Configuration Error Control Protocol** window. Further information is described in section *Configuration Error Control Protocol* on page 56.

The **Node Heartbeat Producer Time** and the **Master Guarding Time of Node** are set in the **Configuration Error Control Protocol** window. Further information is described in section *Configuration Error Control Protocol* on page 56.
- **Emergency COB-ID**

Is an information of the COB-ID of the Emergency telegram.
- **Nodeguard COB-ID**

Is an information of the COB-ID of the Nodeguard telegram.
- **OK**

To close the Node Configuration window and to take over the settings.
- **Cancel**

To close the Node Configuration window and to reject the settings.
- **Node BootUp**

The Node BootUp defines the start up behaviour of the Master with regard to each individual Node and is described in section *Node BootUp* at page 54.
- **OPC Objects**

The information in the OPC Objects field relate to the symbols of the OPC server and the SDO communication. Further information you find in the manual for the OPC server.
- **Object Configuration**

Via the button Object Configuration the object directory can be read out from the EDS file and if necessary added to the Node configuration. Further information you find in section *Object Configuration* at page 60.

- **Actual Node**  
Changes to the Node configuration of another Node without leaving the window.
- **PDO mapping method**  
Lays down the procedure of the PDO mapping. You can select between the methods DS301 V4 and DS301 V3. The difference between these methods are described in section *PDO Mapping Method* at page 184.
- **Predefined Process Data Objects (PDOs) from the EDS file**  
Shows the list of the PDOs which are given in the EDS file and which can be used for the configuration. Further information you find in section *Process Data Configuration - Selection of PDO* at page 46.
- **Configured PDOs**  
Shows the PDOs which are used for the data exchange between Master and Node. In addition to the Offsets in the process data image also the length of the PDOs is indicated. Further information you find in section *Process Data Configuration - Selection of PDO* on page 46.
- **Add to configured PDOs**  
By clicking on a PDO in the list **Configured PDOs** and afterwards a click on the button **Add to configured PDOs** the selected PDO is taken over in the list of **Configured PDOs**.
- **PDO Contents Mapping**  
First you have to select a PDO in the list **Configured PDOs**. By making a double click or a click at the **PDO Contents Mapping** button the in the PDO transferred user data can be shown and the combination can be changed if necessary. Further information you find in section *PDO Contents Mapping* on page 53.
- **PDO Characteristics**  
First you have to select a PDO in the list **Configured PDOs**. With a click at the **PDO Characteristics** button the transmission settings of the PDO can be shown and adjusted if necessary.
- **Define new Receive PDO**  
By clicking on this button a new Receive PDO is added to the **Configured PDOs**. This is described in section *Creating own Receive PDOs* at page 50.
- **Define new Transmit PDO**  
By clicking on this button a new Transmit PDO is added to the **Configured PDOs**. This is described in section *Creating own Transmit PDOs* at page 52.

- **Delete configured PDO**

To delete a configured PDO you first have to select the PDO in **Configured PDOs** and then click on the **Delete configured PDO** button.

- **Symbolic Names**

The information at **Symbolic Names** relate to the symbols for the OPC server. Further information you find in the manual for the OPC server.

#### 4.4.2.1 Overview Node Configuration

For the Node Configuration to transfer PDO data the following typical steps have to be made.

| Configuration step             | Description  |
|--------------------------------|--|
| Device Profile and Device Type | Set or take over the value which is read out of the EDS file |
| Process Data Configuration     | Select the PDO   |
| Process Data Configuration     | Set the PDO transmission characteristics                     |
| PDO Mapping                    | Take over the basic setting or adjust the PDO combination    |
| Node BootUp                    | Set startup behaviour  |
| Node supervision               | Set Nodeguarding and/or Lifeguarding                         |

Table 17: Overview Node Configuration

#### 4.4.2.2 Device Profile and Device Type

Each CANopen Node has a mandatory Object 1000H, which has to be existing in the object directory. This object is named Device Type. The Device Type also includes the information about the Device Profile.

The Master reads out the Object 1000H from the Node when starting up the CANopen bus and compares the entries, which are made in the two available fields **Device Profile** and **Device Type**. If the Device Profile and the Device Type do not agree, the Master reports a parameterization error and does not establish a process data transfer to the Node. To get the real values of the Node, use the online function **Online > Read Object** or click on the Node in Debug mode.

#### 4.4.2.3 Process Data Configuration - Selection of PDO

The process data are transmitted via process data objects, short PDOs, and assigned to the process data image. CANopen distinguishes between receive- and send PDOs.

| Receive PDOs                     | Send PDOs                                |
|----------------------------------|--|
| Data from the Master to the Node | Data from the Node (Slave) to the Master |
| Output data                      | Input data                               |
| are processed by the Node        | are generated by the Node (Slave)        |

Table 18: PDO: Send PDO and Receive PDO

The data of the Node in the process data image of the Master are serviced for the application with the configuration of the PDOs.

The configuration window contains two tables. The upper table **Predefined Process Data Objects (PDOs) from EDS file** shows all configurable PDOs, which are predefined in the EDS file of the device. By making a double click on a table entry or via the **Add to configured PDOs** button the entry is taken over in the table **Configured PDOs**.

The columns of the table **Configured PDOs** have the following meaning:

- **PDO name**

Here the RxPDO parameter and TxPDO parameter are shown.

- **Symbolic Name**

Here the symbolic name, which is used in case of OPC communication, is given. PDO\_1400 and PDO\_1800 and continuous names are used as pre-set value. This can be overwritten by the user.

- **COB-ID**

In this column the CAN telegram identifier is shown. In case of automatic award of COB-ID the routine described in section *COB-ID (Predefined Connection Set)* on page 175 is used. In case of manual award the telegram identifier of the CAN telegram which is transmitted with the PDO can be edit in the range from 0 to 2047.

- **I Type and O Type**

The specification IB stands for Input Byte and the specification QB stands for Output Byte.

- **I Addr. and O Addr.**

The **I Addr.** (Input Address) and the **O Addr.** (Output Address) define the address of the PDO data in the process data image, which is lead in the Dual-port memory of the Master. The range can be between 0 and 3583. According to information the number of data bytes is shown under **I Number** and **O Number**.

The addresses can be assigned automatically by SyCon or manually by the user. This is set in the menu **Settings > Global Settings** in the field **Process Data Auto Addressing**, which is described in section *Global Settings* at page 80. A screening for double addresses takes place before the Download of Configuration and when you open the window **Address Table**.

- **I Len. and O Len.**

Gives the length of the PDO in bytes and can be max 8. If the value 0 is shown, the PDO still does not includes user data. Via the PDO Mapping the user data for this PDO have to be set.

#### 4.4.2.4 PDO Communication Parameter (PDO Characteristic)

Before a chosen PDO is moved into the lower window, the **PDO characteristics** window is opened automatically.

A PDO in CANopen can be configured in Event Driven mode or Cyclic Transmission. Both kinds of transmission types can be synchronized to a special synchronization message which is sent by the master in defined time intervals. Because of the different behaviour of a transmit and receive PDO, two different windows will be open during the PDO insertion. The several transmissions are distinguished in the so-called **Transmission type** value.

Synchronous means that the transmission of the PDO shall be related to the SYNC message that is sent cyclically by the Master. Preferably the Nodes use the SYNC message as a trigger to output or actuate based on the previous synchronous Receive-PDO respectively to update the data transmitted at the following synchronous Transmit-PDO. Details of this mechanism depend on the device type and are defined in the device profile.

Asynchronous means that the transmission of the PDO is not related to the SYNC message and can happen at any time.

#### 4.4.2.5 Receive PDO characteristics

Receive PDO are output data of the Master and where received from the Node. One calls this PDOs therefore Receive PDOs from view of the Node.

Figure 19: Receive PDO Parameter

| Transmission Type | cycl. | acycl. | syn-chronous | asyn-chronous | RTR | Description   |
|-------------------|-------|--------|--------------|---------------|-----|---|
| 0                 |       | X      | X            |               |     | The telegram is transferred related to the SYNC, but not periodically.  |
| 1..240            | X     |        | X            |               |     | A value between 1 and 240 means that the PDO is transferred synchronously and periodically and that the value of the type of transmission shows the number of SYNC telegrams between the two transferring PDOs. |
| 241..251          |       |        | res.         |               |     | reserved  |
| 254               |       |        |              | X             |     | Type of transmission 254 means that the application event is manufacturer dependent.  |
| 255               |       |        |              | X             |     | The Transmission type 255 means that the application event is defined in the respectively supported equipment profile. The exact transmission mode whether cyclically, event-controlled etc. can reread there.  |


Table 19: PDO Communication Parameter > Transmission Types (Receive PDO)

The event control selection menu has two possibilities to configure a Receive PDO for its mailing event.

- On the one hand there is the selection event-controlled, which configures the Master in such a way, that the Master sends the Receive PDO only if it has changed. This kind of the event control keeps the bus load low.
- On the other hand there is the possibility to transmit the PDO cyclic. However this time is indicated here not in milliseconds, but in Node cycle intervals. A Node cycle interval is the time the Master needs to test all configured PDOs in their states and to process them once. The smallest cycle interval is indicated with about 300µsec.

#### 4.4.2.6 Creating own Receive PDOs

If further PDOs shall be used, which are not predefined in the table **Predefined Process Data Objects (PDOs) from EDS file**, this can be done with the functions **Define new Receive PDO**.

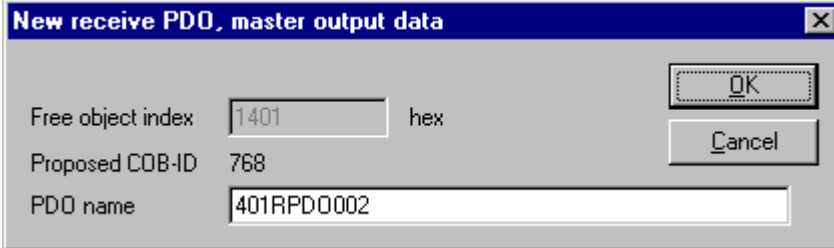

The screenshot shows a dialog box titled "New receive PDO, master output data". It contains three input fields: "Free object index" with the value "1401" and a "hex" label, "Proposed COB-ID" with the value "768", and "PDO name" with the value "401RPDO002". There are "OK" and "Cancel" buttons on the right side.

Figure 20: Define a new receive PDO

SyCon suggests a free message number, which can be edited later in the PDO configuration window, if the PDO was taken over.

#### 4.4.2.7 Transmit PDO characteristics

Transmit PDOs are input data of the Masters and they were sent by the Node. This PDOs are called Transmit PDOs from view of the Node.

**Node transmit PDO characteristics, master input process data**

**Transmission Mode**

- ☐ node shall use a synchronization message as trigger to send the transmit PDO acyclically
- ☐ node has to send the transmit PDO at every  received synchronization message
- ☐ node shall use a synchronization message as trigger to send the transmit PDO when previously remote requested by the master
- ☐ node shall send the transmit PDO when remote requested
- ☒ transmission event of transmit PDO fully node manufacturer specific
- ☐ transmission event of transmit PDO defined in the device profile of the node

Resulting CANopen specific transmission type: 254

**Triggering Mode**

- ☐ no remote request, transmission of transmit PDO fully node dependent
- ☒ remote request at every  node cycle interval (inhibit time)

OK

Figure 21: Transmit PDO Parameter

| Transmission Type | cycl. | acycl. | syn-chronous | asyn-chronous | RTR | Description   |
|-------------------|-------|--------|--------------|---------------|-----|---|
| 0                 |       | X      | X            |               |     | The telegram is transferred related to the SYNC, but not periodically.  |
| 1..240            | X     |        | X            |               |     | A value between 1 and 240 means that the PDO is transferred synchronously and periodically and that the value of the type of transmission indicates the number of SYNC of telegrams between the two transferring PDOs.  |
| 241..251          |       |        | res.         |               |     | reserved  |
| 252               |       |        | X            |               | X   | The transmission types 252 and 253 mean that the PDO is an event without immediate notification and it is only transferred with remote transmission requirement. With the type of transmission 252 the data are immediately updated after receiving the SYNC Telegram (however not sent). |
| 253               |       |        |              | X             | X   | The transmission types 252 and 253 mean that the PDO is an event without immediate notification and it is only transferred with remote transmission requirement. With the type of transmission 253 the data are immediately updated after receiving the SYNC Telegram                     |
| 254               |       |        |              | X             |     | The Transmission type 254 means that the application event is manufacturer dependent.   |
| 255               |       |        |              | X             |     | The Transmission type 255 means that the application event is defined in the respectively supported equipment profile. The exact transmission mode whether cyclically, event-controlled etc. can reread there.  |

Table 20: PDO Communication Parameter > Transmission Types (Transmit PDO)

The event control selection menu has two possibilities to configure a transmit PDO for its mailing event.

- On the one hand there is the selection no remote request. The Master behaves completely passively to the PDO and is programmed only for receiving. When the PDO is received is completely Node dependent here.
- On the other hand there is the possibility to set remote request. Here the Master sends so-called Remote-Telegrams in settable Node cycle intervals, which arrange the Node to send its Transmit PDO to the Master after receiving it.

#### 4.4.2.8 Creating own Transmit PDOs

If further PDOs shall be used, which are not predefined in the table **Predefined Process Data Objects (PDOs) from EDS file**, this can be done with the functions **Define new Transmit PDO**.

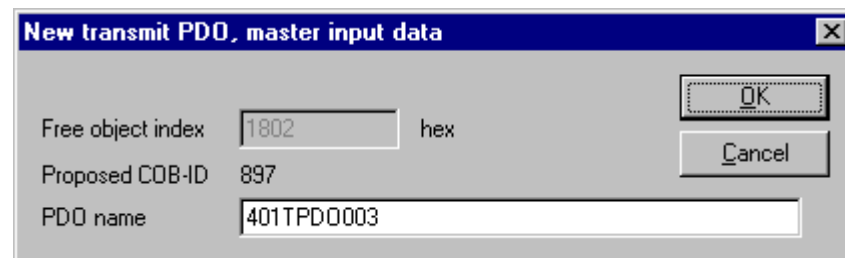


Figure 22: Define a new Transmit PDO

SyCon suggests a free message number, which can be edited later in the PDO configuration window, if the PDO was taken over.

#### 4.4.2.9 PDO Contents Mapping - Arrange a PDO

Some CANopen Nodes support the PDO data mapping and dynamic distribution. That means a user defined containment mapping of objects into a PDO. The mapping itself is always done by the Node internally after it has received new RX-PDO or has to send new TX-PDO, so that the master can handle the input and output PDOs coming from and going to the Node completely transparent. This guarantees high speed data transfer and execution in the view of the master. His job is it only to configure the Node's mapping dictionary during its configuration phase once.

A PDO can contain always up to 8 byte process data. The combination of these individual process data elements can be changed when the button **Append Object** is used. When a PDO was transferred from the upper table to the **Configured PDOs** table, SyCon maps automatically all found map able process data from the Node EDS file into this PDO.

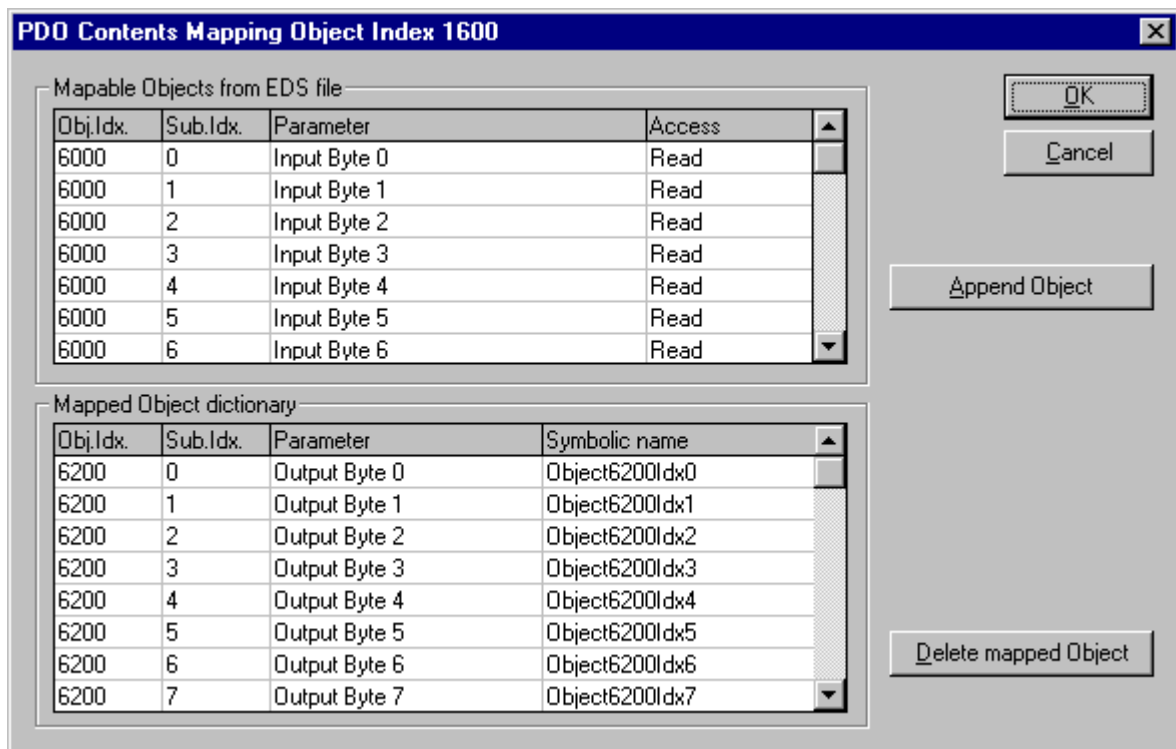


Figure 23: PDO Contents Mapping

The picture above is an example for a TX-PDO mapping. The upper table shows all available objects with their access right which are declared as supported in the node's EDS file. A double click onto one of these transfer it into the lower table. This table contains the real mapped objects that shall be a content of the PDO later in the process data exchange phase.

**Note:** Not all CANopen Nodes supports the PDO mapping feature!

#### 4.4.2.10 Node BootUp

The Node BootUp defines the network startup behaviour of the Master for the particular Node to get it operative. There are different states a Master is running through per Node, till the BootUp sequence is finished for the Node. Each state now is configurable and can be enabled (activated) or disabled (deactivated) here. In the basic setting all states are activated.

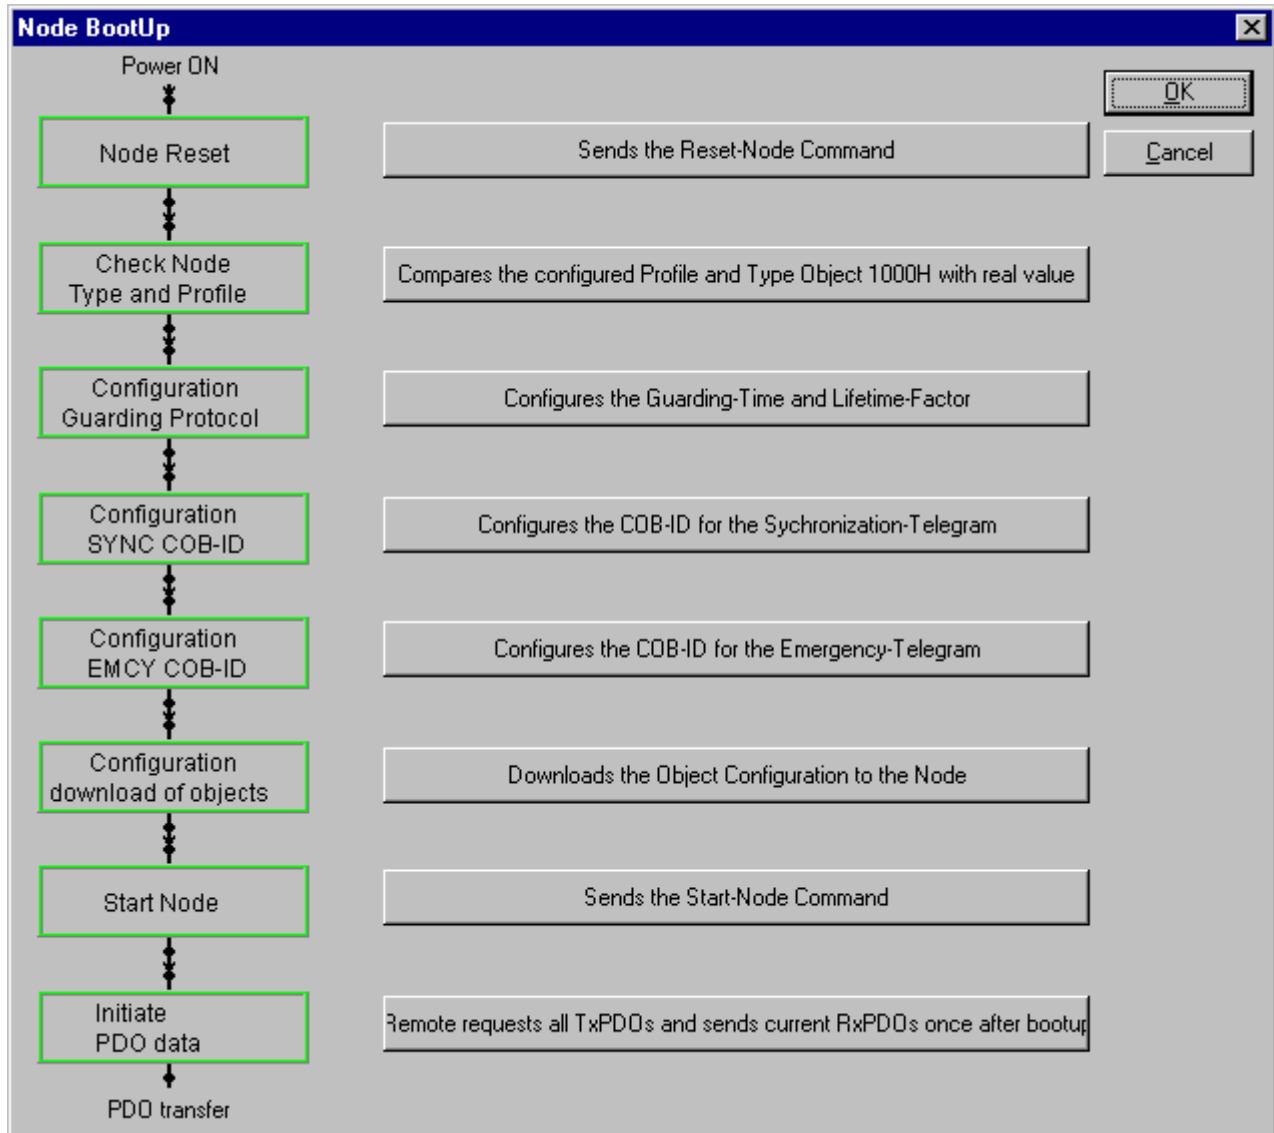


Figure 24: Online > Node Configuration > Node BootUp

| Node BootUp parameter             | Description  |
|-----------------------------------|--|
| Node Reset                        | If enabled, the master sends as first the CANopen specific Node Reset Communication command.   |
| Check Node Type and Profile       | If enabled, the master will compare the contents of the mandatory Node Object 1000H is the device type with the values that are configured within SyCon. If the values are different, the master will report a parameterization error.   |
| Configuration Guarding Protocol   | A CANopen has two specific register responsible for the Node guarding protocol. If the item is enabled, the master will write the Guard Time and Life-Time factor of the Node configuration into the corresponding objects of the Node during startup.   |
| Configuration SYNC COB-ID         | If the item is enabled, the master will write the SYNC COB-ID of the configuration into the corresponding objects of the Node during startup.  |
| Configuration EMCY COB-ID         | If the item is enabled, the master will write the EMCY COB-ID of the configuration into the corresponding objects of the Node during startup.  |
| Configuration download of objects | To get a PDO communication to a Node working, the master has to send all relevant configuration objects to the Node. For example the mapping table, the COB-ID a PDO shall be sent through are covered here. If enabled, all these parameter and also the user specific objects which are added manually in the Node object configuration window are written down to the Node by the master. |
| Start Node                        | To reach the operational state in CANopen a Node has to get the CANopen specific Start Node command. If enabled, the master will send the Start Node command to the Node at the end of the boot-up procedure.  |
| Initiate PDO data                 | This item selects if the installed PDOs shall be automatically written and read by the master directly after the startup once. This ensures that the latest output data which can be found within the Masters output process data area is sent to the Node and that the latest Node input data is read from the Node and be placed into the input process data area.                         |

Table 21: Node BootUp

#### 4.4.2.11 Configuration Error Control Protocol

The Configuration Error Control Protocol defines the device monitoring. In doing so the Node Guarding Protocol or the Heartbeat Protocol can be used. In the following you find information about the functional principle, about the settings as far as notes to the Node Guarding and the Heartbeat Protocol.

[illegible]

**Settings:** The **Guard time** is the setting for the supervision of the Node in the view of the Master (Master controls Node). If the communication is running, the Master will poll the Node in the time interval **Guard time**, to check, if the Node is still present in the network or not. If this value is configured with 0, the supervision is disabled in the Master as well as in the Node.

The **Life time factor** is the setting for the supervision of the Master in the view of the Node (Node controls Master). If the communication is running, the Node will control the Master in the **Guard time** multiplied with the **Life time factor** as time interval, to check, if the Master is still present in the network or not. If this value is configured with 0, the supervision in the Node is deactivated.

**Warning:** To reach a stable communication of the Node on the CANopen, the **Life Time Factor** has to be set to minimal 2.

**Note:** A Life Guarding can only be used, if the Master carries out a Node Guarding, that means Life Guarding presumes Node Guarding.

**Error Control Protocol (Node Id: 2)**

☐ Use Node Guarding Protocol

Guard Time  msec.

Life Time Factor

☒ Use Heartbeat Protocol

Master Consumer Time of Node  msec.

Node Heartbeat Producer Time  msec.

Node Heartbeat Consumer List

| Node ID | Active                              | Description | ConsumerTime (msec.) | Producer Time (msec.) |
|---------|-------------------------------------|-------------|----------------------|-----------------------|
| 1       | <input checked="" type="checkbox"/> | Master      | 220                  | 200                   |
| 3       | <input type="checkbox"/>            | Node3       | 220                  | 200                   |
| 4       | <input type="checkbox"/>            | Node4       | 220                  | 200                   |
| 5       | <input checked="" type="checkbox"/> | Node5       | 220                  | 200                   |
|         |                                     |             |                      |                       |
|         |                                     |             |                      |                       |
|         |                                     |             |                      |                       |
|         |                                     |             |                      |                       |
|         |                                     |             |                      |                       |
|         |                                     |             |                      |                       |
|         |                                     |             |                      |                       |
|         |                                     |             |                      |                       |
|         |                                     |             |                      |                       |
|         |                                     |             |                      |                       |
|         |                                     |             |                      |                       |
|         |                                     |             |                      |                       |
|         |                                     |             |                      |                       |
|         |                                     |             |                      |                       |

Figure 26: Error Control Protocol - Heartbeat Protocol

- **Heartbeat Protocol**

Functional Principle: A Heartbeat Producer transmits the Heartbeat telegram cyclically with the time interval defined in the field **Node Heartbeat Producer Time**. One or more Heartbeat Consumer may receive the indication. The relationship between producer and consumer is configurable via the Object Dictionary entries. The Heartbeat Consumer guards the reception of the Heartbeat telegram within the Heartbeat consumer time. If the Heartbeat telegram is not received within this time a Heartbeat Event will be generated.

Requirements: In order that the Heartbeat Protocol can be used, the following requirements are necessary:

- 1) The Heartbeat Function has to be activated in the bus parameters of the Hilscher Master.
- 2) In the Hilscher Master device the firmware version V1.070 has to be loaded.
- 3) The Node has to support the Heartbeat Protocol. The SyCon System Configurator reads out this information from the EDS file of the corresponding device.

Settings: The **Master Consumer Time** is the setting for supervising the Node from view of the Master (Master controls Node). If the communication is running, the Node sends telegrams in the time interval **Producer Heartbeat Time**, which are received and controlled by the Master. With this the value of the **Master Consumer Time** must have at least the value of the **Producer Heartbeat Time** or must be higher. If the value of the **Master Consumer Time** is 0, the Master does not control this Node.

Devices, which have to be supervised by this Node, can be selected in the **Consumer Heartbeat list**.

If the Node should control the Master, the **Consumer Heartbeat Node List** has to be activated by clicking on it in the line to the Master (default setting). The **Consumer Time** can be changed in this line by overwriting in this line (double click). The **Producer Time** is displayed informatively. Thereby the value of the **Consumer Time** must have the value of the **Producer Time** or must be higher. If the value of the **Consumer Time** is 0, the Node does not control the Master.

If this Node should control another Node, the **Consumer Heartbeat Node List** has to be activated in the line to the Node by enabling the check box. The **Consumer Time** can be changed by overwriting in this line (double click). The **Producer Time** is displayed informatively. Thereby the value of the **Consumer Time** must have the value of the **Producer Time** or must be higher.

The picture for example shows, that Node 2 controls Node 5 with 220ms, as well as Node 1 (the Master).

---

**Note:** The number of devices which can be controlled by this Node, depends on the scope of performance of this device.

---

- **Further Notes to the Node Guarding Protocol and Heartbeat Protocol**

---

**Note:** Heartbeat can displace Node Guarding Protocol (and the Life Guarding).

---

---

**Note:** SyCon reads out the EDS file with regard to the support of the Nodeguarding as well as the Heartbeat Protocol and gives out the following in the Error Control Protocol window: If only Nodeguarding is supported, Nodeguarding is preset. If only Heartbeat is supported, Heartbeat is preset. If Nodeguarding and Heartbeat is supported, Nodeguarding is preset. If there is no declaration about Nodeguarding or about Heartbeat, Nodeguarding is preset. In this case it must be checked, if the Node supports the Nodeguarding effectively or not.

---

---

**Note:** If the Node does not support Node Guarding Protocol or the Heartbeat Protocol, the Master cannot detect, if the Node has failed! If the Node does not support the Node Guarding or the Heartbeat, **the Guard Time** and the **Life Time Factor** have to be set to 0.

---

#### 4.4.2.12 Object Configuration

The most important part of a CANopen device is its object directory. The object directory is essentially a grouping of objects accessible via the network in an ordered predefined fashion. Each object within the directory is addressed using a 16-bit index. The Device profiles of CANopen define the name, the meaning, the value range and data type of the Service Data Objects (SDO). With so-called Service Data Messages the contents of an object and its sub index can be changed. This is necessary to set up the behaviour of a CANopen Node in the right manner. This is necessary to change the behaviour of the CANopen Node.

To get access to the SDO configuration press the **Object Configuration** button. The following window below will appear and SyCon shows in the upper table all supported objects read out from the EDS file of the Node. If you have already inserted some PDOs you will find existing entries in the lower table too.

SyCon places some objects in this table automatically when a PDO in the **Node Configuration** window is inserted, to set up the several variables of the PDO objects right, so that the wished configuration corresponds to the Node behaviour later in the process data communication. These values can not be edited.

**Object Configuration**

Node: CIF50-COS      Node ID: 1  
Description: Node1

Predefined supported Objects in the EDS file

| Obj.Idx. | Sub.Idx. | Parameter                | Default Value | Access    |
|----------|----------|--------------------------|---------------|-----------|
| 1000     | 0        | Device Type              | 120           | read only |
| 1001     | 0        | Error Register           | 0             | read only |
| 1004     |          | Number of PDOs supported |               |           |
|          | 0        | Nr RxPDOs/TxPDOs         | 200020        | read only |
|          | 1        | Nr synch. RxPDOs/TxPDOs  | 0             | read only |
|          | 2        | Nr asynch RxPDOs/TxPDOs  | 200020        | read only |

Access Filter: all

Decimal

Add to Configured Objects

Configured Objects automatically written while Node startup sequence

| Obj.Idx. | Sub.Idx. | Parameter                | Chosen Value | PDO Dialog |
|----------|----------|--------------------------|--------------|------------|
| 1400     | 1        | COB-ID                   | 201          | X          |
| 1400     | 2        | Transmission type        | FE           | X          |
| 1400     | 3        | Inhibit time             | 64           | X          |
| 1600     | 0        | Number of mapped objects | 8            | X          |
| 1600     | 1        | Output Byte 0            | 62000008     | X          |
| 1600     | 2        | Output Byte 1            | 62000108     | X          |

Delete Configured Object

Figure 27: Online > Node Configuration > Object Configuration

#### **4.4.2.13 OPC Objects**

With the information in this window symbols for the OPC communication are entered over SDO. For this the objects are selected from the indicated list. Further information you find in the manual for the OPC Server.

#### **4.4.2.14 OPC User Defined Objects**

With the information in this window symbols for the OPC communication are entered over SDO. For this the objects can be entered by the user. Further information you find in the manual for the OPC Server.

### 4.4.3 Replace Node

If a Node already exists in the configuration and should be replaced against the other Node, you first have to set the focus on the Node (left mouse click) and then choose the menu **Edit > Replace**.

or

make a right mouse click at the Node and select **Replace** in the now opened menu.

In the opened window the question appears if the Node should be replaced.

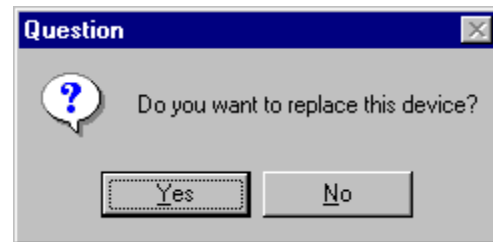


Figure 28: Security question Replace Device

If you click the button **Yes** a new window opens, where you can replace the Node against the existing Node.

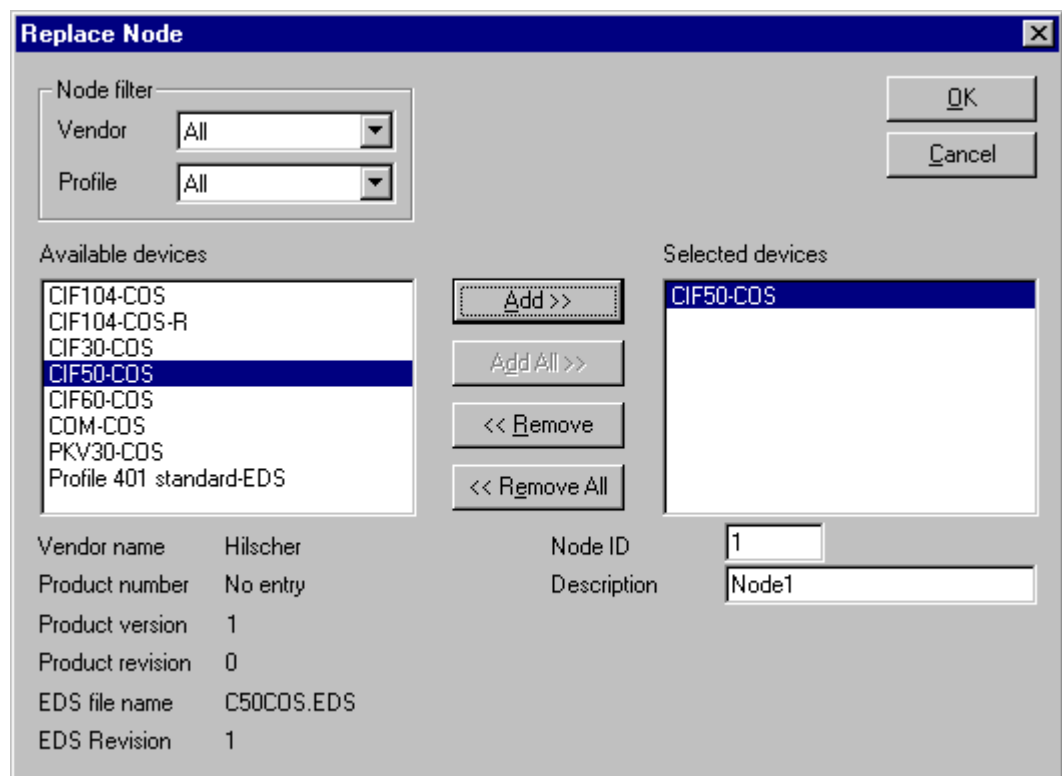


Figure 29: Edit > Replace Node

In this window you select the Node you want by clicking on it. By clicking the **Add** button this Node is shown in the first position by **Selected devices**. With **OK** you confirm the selection and the Node will be replaced.

## 5 Settings

### 5.1 Device Assignment

The Device Assignment setting determines how the System Configurator communicates with the device. This is selected in the device arrangement via the menu **Settings > Device Assignment**.

#### 5.1.1 Driver Selection

Calling up the **Device Assignment**, firstly a dialog window opens, where a driver has to be selected.

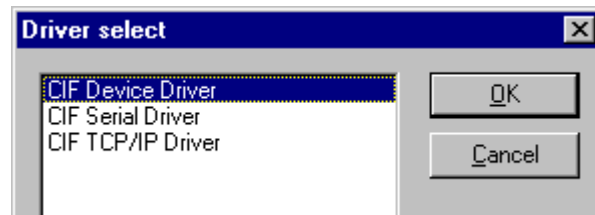


Figure 30: Driver Selection

With the selection of the driver, it is determined, how the System Configurator communicates with the device. The following drivers are available:

- **CIF Device Driver**

The System Configurator communicates with the Hilscher device via the Dual-port memory of the device.

This communication is utilized when the System Configurator is used on the same PC on which the Hilscher device is installed.

---

**Note:** The CIF Device Driver has to be installed and it must have access to the Hilscher device.

---

- **CIF Serial Driver**

The System Configurator communicates with the Hilscher device via a serial connection. In this case a COM port of the PC must be connected with the diagnostic interface of the Hilscher device via a diagnostic cable.

---

**Note:** The pin assignment of the diagnostic cable is described in the hardware documentation of the device manufacturer.

---

This communication is utilized when the System Configurator has to access the device via the diagnostic interface of the Hilscher device. The following two application cases are possible:

Application case 1: The System Configurator is installed on another PC (e.g. a notebook) than the Hilscher device.

Application case 2: The System Configurator is installed on the same PC on which the Hilscher device is situated. Then the application can use the Dual-port memory to access the Hilscher device and the diagnostic interface can be used at the same time to communicate with the device (diagnostic data).

- **CIF TCP/IP Driver**

The System Configurator communicates with the Hilscher device via an Ethernet TCP/IP connection.

This communication is utilized when the System Configurator is installed on a PC and the PC and the Hilscher device is connected via Ethernet.

It has to be distinguished:

1. The Hilscher device is installed in a PC and the TCP/IP connection is built up to the PC, that means the IP address of the PC is used as IP address.
2. The Hilscher device has an own Ethernet connection and the TCP/IP connection is built up to the Hilscher device, that means the IP address of the Hilscher device is used as IP address.

Select the favored driver for the communication between the System Configurator and the used device from the lower table.

You find a detailed instruction about the selection of the several drivers in the denoted section:

| Driver            | Described in section     | Page |
|-------------------|--------------------------|------|
| CIF Device Driver | <i>CIF Device Driver</i> | 65   |
| CIF Serial Driver | <i>CIF Serial Driver</i> | 67   |
| CIF TCP/IP Driver | <i>CIF TCP/IP Driver</i> | 69   |

Table 22: Driver Selection

To select a driver, mark the favored driver by clicking on it in the dialog window **Driver Select** and confirm your selection with **OK**.

The configuration window of the favored driver opens.

## 5.1.2 CIF Device Driver

The CIF Device Driver supports up to four Hilscher devices in one PC, and they are accessed via the Dual-port memory.

### Driver Description



Figure 31: CIF Device Driver - Driver Description

In the upper part of the **CIF Device Driver** dialog the actual used CIF Device Driver and its version number are displayed.

This display is only for information purposes and is not editable by the user.

### Board Selection

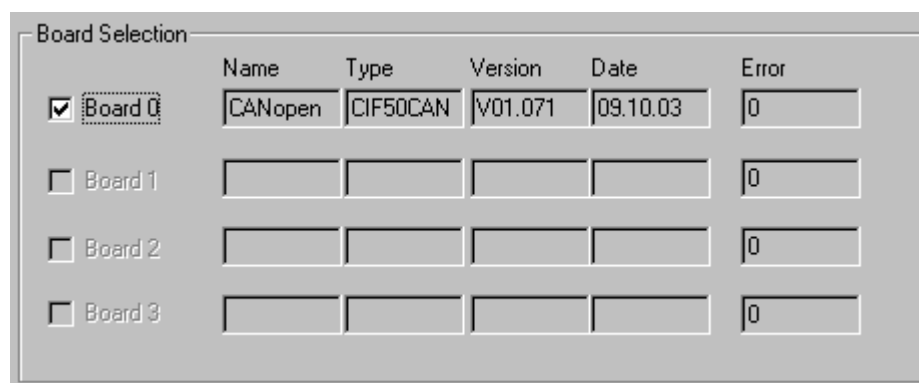


Figure 32: CIF Device Driver - Board Selection

If an assignable device is found by the CIF Device Driver, the checkbox next to the board number is selectable. To select the device, you have to enable it by clicking in the checkbox located left of the desired board and confirm this selection with **OK**.

| Checkbox                            | Description  |
|-------------------------------------|--|
| <input type="checkbox"/>            | Device is still not assigned and it can be selected.                                     |
| <input checked="" type="checkbox"/> | Device is assigned. The Assignment can be abrogated by deselecting.                      |
| <input type="checkbox"/>            | The assignment of the device is not possible.  |
| <input checked="" type="checkbox"/> | The device is still assigned in another open configuration and can not be selected here. |

Table 23: Device Assignment - Checkboxes of the CIF Device Driver

Now the device is connected with the System Configurator via the CIF Device Driver and the Device Assignment dialog is closed.

By clicking the **Cancel** button, the Device Assignment is closed without an assignment has been completed or respectively changed.

### **More Details of the CIF Device Driver**

Next to the field **Board Selection** there is a button with the name **more>>**. Selecting this button, a dialog opens which displays further information about the CIF Device Driver.

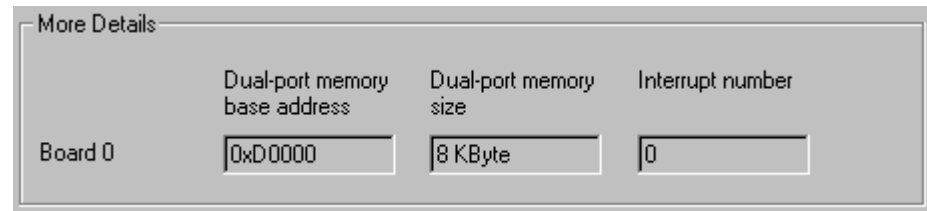


Figure 33: CIF Device Driver - More Details

In this dialog the used **Dual-port memory base address**, the **Dual-port memory size** and the **Interrupt number** of the selected board are displayed. Interrupt number 0 means polling mode.

This display is only for information purposes and is not editable by the user.

### 5.1.3 CIF Serial Driver

The CIF Serial Driver supports the interfaces COM1 to COM 4 of the PC, in order to get the configuration or to do diagnostic serially via the diagnostic interface of the Hilscher device.

#### Driver Description



Figure 34: CIF Serial Driver - Driver Description

In the upper part of the **CIF Serial Driver** dialog the actual used driver is displayed.

This display is only for information purposes and is not editable by the user.

#### Board Selection

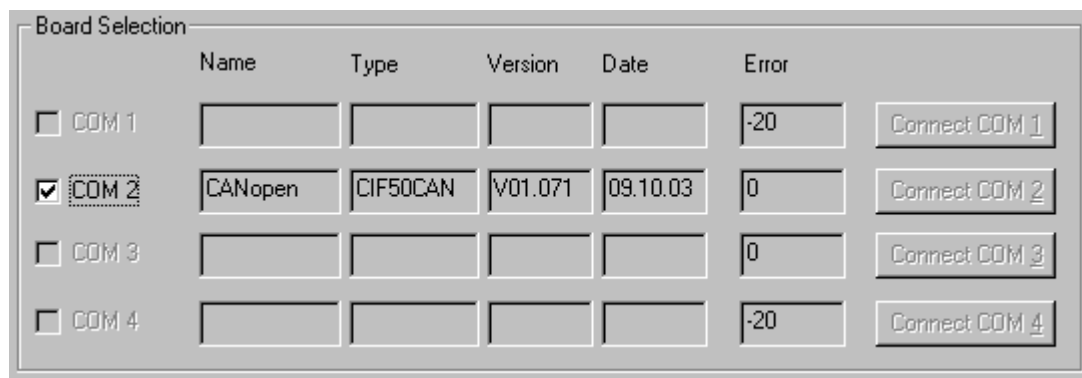


Figure 35: CIF Serial Driver - Board Selection

First the connection must be established by clicking on the button **Connect COM1** or **Connect COM2** or **Connect COM3** or **Connect COM4**.

They can be used depending on which COM interfaces are installed and free on the PC.

The System Configurator sends a request to the corresponding COM Port and polls the Firmware of the device. If the device is connected, the Firmware of the device is displayed and the checkbox of the corresponding COM interface is selectable.

| Checkbox                            | Description  |
|-------------------------------------|--|
| <input type="checkbox"/>            | Device is still not assigned and it can be selected.                                     |
| <input checked="" type="checkbox"/> | Device is assigned. The Assignment can be abrogated by deselecting.                      |
| <input type="checkbox"/>            | The assignment of the device is not possible.  |
| <input checked="" type="checkbox"/> | The device is still assigned in another open configuration and can not be selected here. |

Table 24: Device Assignment - Checkboxes of the CIF Serial Driver

This selection has to be confirmed by clicking the **OK** button. Now the device is connected with the System Configurator via the serial driver and the Device Assignment dialog is closed. If the assignment is not possible or if the assignment has failed, this is displayed by an error number in the **Error** column.

If the error number **(-51)** appears after activating one of the buttons, a timeout error has occurred. That means no device is connected to this COM port.

The error number **(-20)** indicates that this COM port is not available or not free (already in use).

By clicking the **Cancel** button, the Device Assignment is closed without an assignment has been completed or respectively changed.

## 5.1.4 CIF TCP/IP Driver

The CIF TCP/IP Driver builds up a connection to the Hilscher device via Ethernet TCP/IP.

This communication is utilized when the System Configurator is installed on a PC and the PC and the Hilscher device are connected via Ethernet.

It is distinguished between two application possibilities:

1. The Hilscher device is installed in a PC and the TCP/IP connection is built up to the PC, that means the IP address of the PC is used as IP address.

This PC is called Remote PC in the following. The following two requirements have to be accomplished to get access to the Hilscher device via Ethernet TCP/IP:

---

**Note:** The CIF Device Driver has to be installed and it must have access to the Hilscher device. Additionally the TCP/IP Server has to be started on the Remote PC.

---

2. The Hilscher device has an own Ethernet connection and the TCP/IP connection is built up to the Hilscher device, that means the IP address of the Hilscher device is used as IP address.

### Driver Description



Figure 36: CIF TCP/IP Driver - Driver Description

In the upper part of the **CIF TCP/IP Driver** dialog the actual used driver and its version number are displayed.

This display is only for information purposes and is not editable by the user.

### **Build up TCP/IP Connection**

There are two possibilities to enter the IP address to build up a TCP/IP connection between the Hilscher device and the PC.

- **Scan network for devices**

Clicking on the **NetIdent Rescan** button, the local Ethernet network is scanned for Hilscher devices. This devices need to support the identification by the Hilscher NetIdent Protocol.

Devices found during the network scan and which are connectable to the PC are displayed in the table **Board Selection**.

- **Type in IP Address manually**

If the device to be connected is not located in the local Ethernet network, it is necessary to type in the IP address of the device manually.

Also some devices do not support the identification by the Hilscher NetIdent Protocol. In this case the IP address of the device has to be typed in manually, too.




*Figure 37: CIF TCP/IP Driver - Type in IP Address manually*

The IP address of the device to be connected need to be typed in the field **Add IP Address**. Clicking the **Add** button, it is tried to build up a CIF TCP/IP connection between the PC and the device.

If a device with the typed in IP address was found, it is displayed in the table **Board Selection**.

### Board Selection

In the table **Board Selection** the devices are displayed, which were found via inserting the IP address or via the Hilscher NetIdent Protocol and which can be connected to the PC.

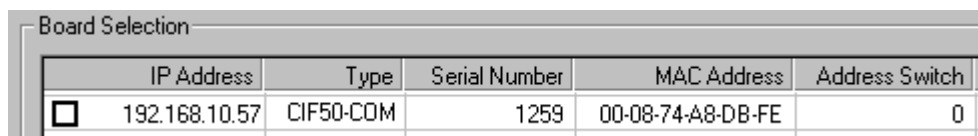

|                          | IP Address    | Type      | Serial Number | MAC Address       | Address Switch |
|--------------------------|---------------|-----------|---------------|-------------------|----------------|
| <input type="checkbox"/> | 192.168.10.57 | CIF50-COM | 1259          | 00-08-74-A8-DB-FE | 0              |

Figure 38: CIF TCP/IP Driver - Board Selection - Found Device

When the device already has an IP address, this is shown in the field **IP Address**.

If the shown IP address is 0.0.0.0, an IP address has to be assigned to the device with the button **Set IP Address**. Further information for changing the IP address you find in section *Change IP Address* on page 72.

### Connect Device


To connect a device to the PC, the checkbox of the favored device has to be selected in front of the **IP Address** field.

| Checkbox                            | Description   |
|-------------------------------------|---|
| <input type="checkbox"/>            | Device is still not assigned and it can be selected.                |
| <input checked="" type="checkbox"/> | Device is assigned. The Assignment can be abrogated by deselecting. |

Table 25: Device Assignment - Checkboxes of the CIF TCP/IP Driver

**Note:** A connection can be build up to exactly one device.

The following picture shows an assigned device:

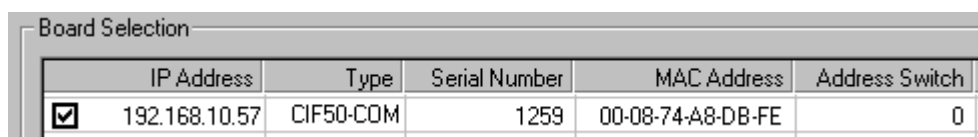

|                                     | IP Address    | Type      | Serial Number | MAC Address       | Address Switch |
|-------------------------------------|---------------|-----------|---------------|-------------------|----------------|
| <input checked="" type="checkbox"/> | 192.168.10.57 | CIF50-COM | 1259          | 00-08-74-A8-DB-FE | 0              |

Figure 39: CIF TCP/IP Driver - Board Selection - Assigned Device

This selection has to be confirmed by clicking the **OK** button. Now the device is connected with the System Configurator via the CIF TCP/IP Driver and the Device Assignment dialog is closed.

By clicking the **Cancel** button, the Device Assignment is closed without an assignment has been accomplished or respectively changed.

### Filtered Devices

| Filtered Device(s) |         |               |                   |                |  |
|--------------------|---------|---------------|-------------------|----------------|--|
| IP Address         | Type    | Serial Number | MAC Address       | Address Switch |  |
| 192.168.10.161     | NN40/42 | 5             | 00-02-A2-0A-00-05 | 0              |  |
| 192.168.10.155     | NL-MPI  | 13            | 00-02-A2-0C-00-0D | 0              |  |
| 192.168.10.160     | NN40/42 | 11            | 00-02-A2-0A-00-0B | 0              |  |

Figure 40: CIF TCP/IP Driver - Filtered Devices


Devices listed in the table **Filtered Device(s)** were found during the network scan in the local Ethernet network, but they can not be assigned, because they belong to another device family.

#### 5.1.4.1 Change IP Address

A new IP address is assigned to a device or respectively an existing IP address of a device is changed via the button **Change IP Address**.

**Note:** The IP address can only be changed in case of Hilscher devices which are connected directly to the Ethernet and which support the function 'Change IP Address'. These are for example: NL-MPI, NN40, NN42, CIF 104-EN, COM-C-EN, COM-EN.

Therefore the device has to be selected in the table Board Selection by activating the checkbox. Via the **Change IP Address** button the following dialog opens:

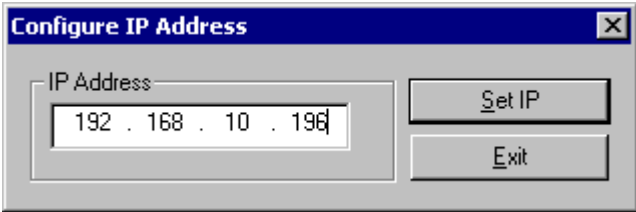

The dialog box titled "Configure IP Address" contains a text field for the IP address, currently showing "192 . 168 . 10 . 196". To the right of the text field are two buttons: "Set IP" and "Exit".

Figure 41: Set IP Address

Type in the IP address for the device and confirm the entry by clicking on the **Set IP** button.

**Note:** The IP address set by clicking the **Set IP button** is only temporarily adjusted. A permanent storage of the IP address takes place with a download of the configuration from the framework.

## 5.2 Bus Parameter

In this windows the basic settings for the CANopen network are done. Mainly, this concerns the setting of the **Baudrate**.

**Attention:** Check that all CANopen Nodes support also the selected Baud rate.

**Basic rule:** The Baud rate must be set same for all devices. The Node address on the other hand must differ from Node to Node.

Figure 42: Settings > Bus Parameter

- **Master Node ID**

The **Master Node ID** is necessary for the addressing of the device at the bus and has to be unique. Therefore it is not allowed to use this number two times in the same network.

- **Baudrate**

Set the **Baudrate**. The following Baudrates are available:

| Baudrate   |
|------------|
| 10 kBit/s  |
| 20 kBit/s  |
| 50 kBit/s  |
| 100 kBit/s |
| 125 kBit/s |
| 250 kBit/s |
| 500 kBit/s |
| 800 kBit/s |
| 1 Mbit/s   |

Table 26: Baudrate

- **Master stops in case of Node Guard or Heartbeat Error**

The **Master stops in case of Node Guard or Heartbeat Error** feature defines the behaviour of the Master if the communication is interrupted to at least one Node. If the flag is set to **Activated**, the Master will also stop the communication to all further Nodes which were still responding and active. If the flag set to **Deactivated**, then a lost communication to one Node has no influence on the communication of the still present Nodes. For all the error affected Nodes the master remains in the state to try the reestablishment of the communication again.

- **Heartbeat Function**

If the Heartbeat Protocol should be used for the device supervision, this has to be activated. In the **Master Producer Heartbeat Time** field the cycle time for the Master is entered in ms.

- **Synchronization Object (SYNC)**

Furthermore the **Communication Cycle Period** and the message number **COB-ID** has to be set. The default value for the COB-ID is 128.

- **Enable Global Start Node**

After the Master started all Nodes configured individually first, it sends a Global Start Node with activated menu option afterwards, in order to synchronize all Nodes again.

**Attention:** The following setting are just for Master devices which support the 29 Bit CAN specific identifier according to CAN 2.0B. At the moment this is only available in case of the TSX CPP 100 module hardware.

- **Enable 29 Bit Selector**

If this menu option is activated the 29 Bit identifier is switched free for the Master.

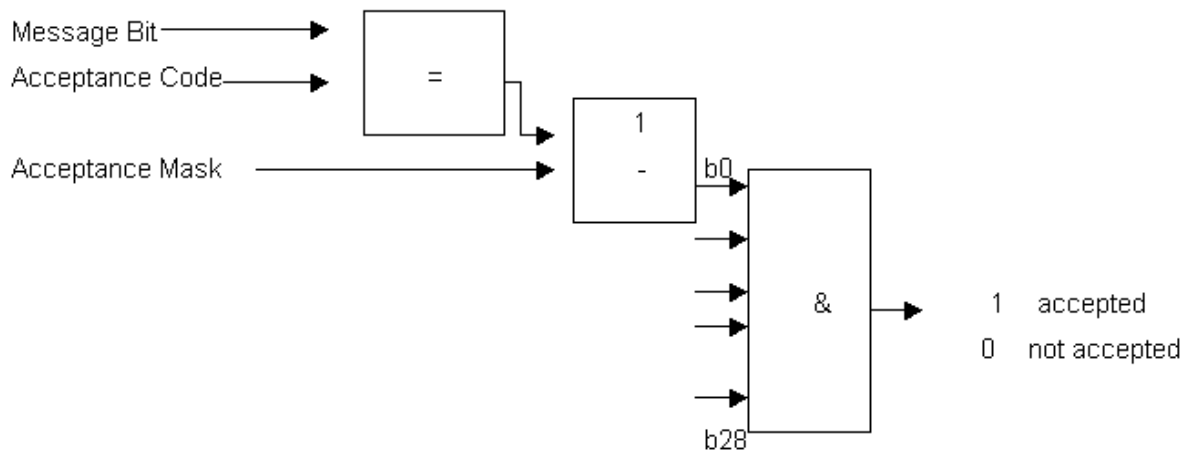


Figure 43: Diagram Acceptance Code / Acceptance Mask

## 5.3 CANopen Master

### 5.3.1 Master Settings

To enter the CANopen Master settings, select the menu **Settings > Master Settings** or click with the right mouse button on the corresponding Master symbol and select **Master Settings** from the list which opens up. The Master Settings are also available from the **Master Configuration** window.

The CANopen **Master Settings** contain parameters that determine the behaviour of the Master device as well as the user interface. These settings are only valid for Hilscher devices and are included in the download of the configuration.

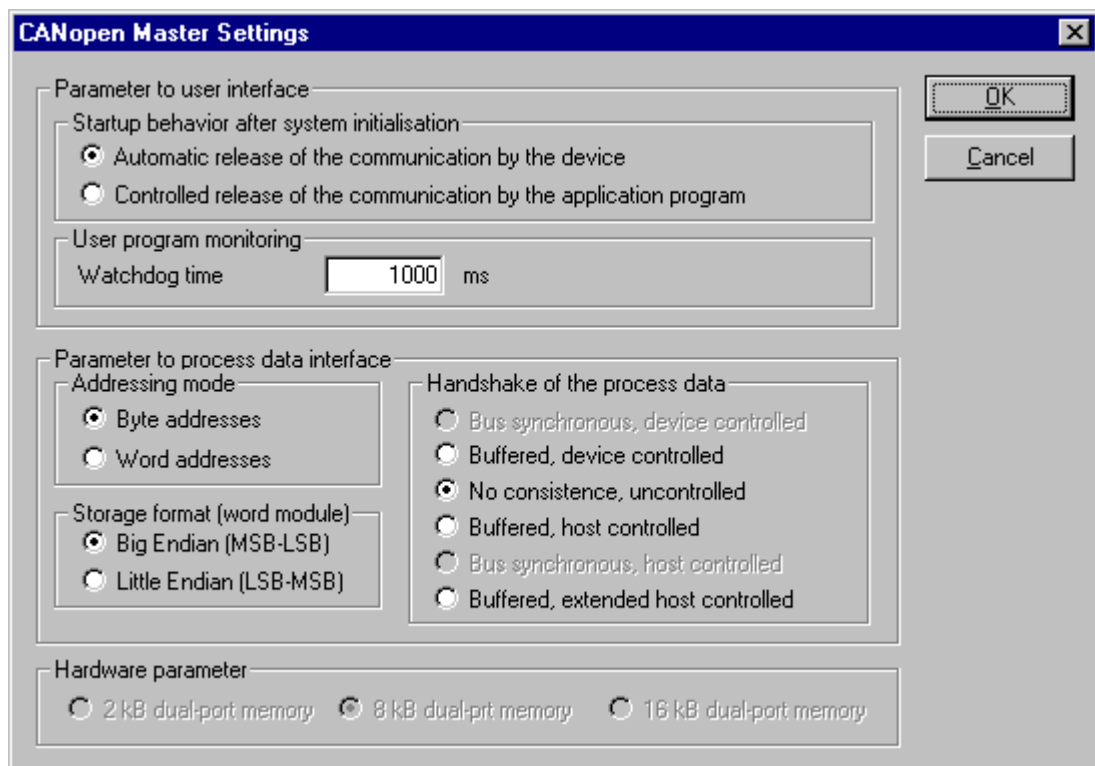


Figure 44: Settings > CANopen Master Settings

- **Startup behaviour after system initialization**

When **Automatic release of the communication by the device** is selected, the Master device starts with the data exchange at the Bus after the initializing has been finished. If **Controlled release of communication by the application program** has been set, the application program must activate the data exchange at the Bus.

- **User program monitoring**

The **Watchdog time** determines how long the device waits for a triggering of the software watchdog by the application program until it sets the outputs of the Slave devices to 0. This behaviour must be activated by the user program and does not start automatically.

---

**Note:** The Watchdog is not a special CANopen function, but an often needed feature in interaction with a SoftPLC.

---

- **Addressing mode**

The addressing mode of the process data image determines how the addresses (Offsets) of the process data are interpreted. Either of the addressing modes **Byte addresses** or **Word addresses** are possible. See also details on the next page.

- **Storage format (word module)**

The storage format determines how the data are interpreted and laid down in the process image. For the Word data type it is possible to select higher/lower value and for Byte data type lower/higher value Byte.

- **Handshake of the process data**

These various types are used for setting the transfer process of the process data for the CANopen Master. The choice of which type is used is important for the correct data exchange between the application program and the device.

The set handshake of the process data must be supported by the application program. The handshake buffered, host controlled is mostly supported. The handshake no consistence, uncontrolled works without handshake and both processes run free.

A detailed description is provided in the manual for the Toolkit or the manual for the device driver.

If you run a soft PLC or a visualization software on your PC, please check in their documentation, which handshake mode this program expects.

- **Hardware parameter**

With this parameter you the size of the dual-port memory of the hardware is selected. The parameter will enlarge or reduce the possible value ranges for the I/O offsets.

In case of CANopen Master cards the dual-port memory size is 8K, whereby 7K are process data.

---

**Note:** For CIF 30-COM, CIF 104-COM and COM-COM 8 KByte are prescribed.

---

## 5.3.2 Addressing Mode

The addresses in the configuration of the Nodes define the starting point of the data in the process image. This can work in a Word or Byte oriented method by means of the **Addressing mode** parameter.

| Addresses      | Meaning   |
|----------------|---|
| Byte addresses | The process image has a Byte structure and each Byte has its own address. |
| Word addresses | The process image has a Word structure and each Word has its own address. |

Table 27: Addressing Mode

This has nothing to do with the physical size of the Dual-port memory – this is always Byte-oriented! When the application makes a Word access, it is automatically divided by the PC into two sequential Byte accesses.

The following table shows the different storing of the various data types in the Byte- or Word-oriented process image:

| IEC addresses in Byte mode | IEC addresses in word mode | Offset addresses in the dual-port memory | Data in the process image | Output to an I/O Module  |
|----------------------------|----------------------------|--|---------------------------|--|
| QB 0                       | QB 0                       | 0  | 0000 0000                 |  |
| QB 1                       |                            | 1  | 0000 0000                 |  |
| QB 2                       | QB 1                       | 2  | 1110 0010                 | Output of QB2 / QB1 to a single Byte module:<br>D7 D6 D5 D4 D3 D2 D1 D0<br>1 1 1 0 0 0 1 0   |
| QB 3                       |                            | 3  | 0000 0000                 |  |
| QB 4<br>QB 5               | QB 2                       | 4<br>5                                   | 1111 1000<br>0000 0111    | Output of two Bytes beginning from QB4 / QB2 to a module that is defined as a Byte module with the data count 2 (no differentiation between the two memory formats as the data are of Byte type):<br>D7 D6 D5 D4 D3 D2 D1 D0 D7 D6 D5 D4 D3 D2 D1 D0<br>1 1 1 1 1 0 0 0 0 0 0 0 0 0 1 1 1                                  |
| QW 6                       | QW 3                       | 6<br>7                                   | 1111 1111<br>0100 0100    | Output of QW6 / QW3 in the data format lower/higher value Byte:<br>D15 D14 D13 D12 D11 D10 D9 D8 D7 D6 D5 D4 D3 D2 D1 D0<br>0 1 0 0 0 1 0 0 1 1 1 1 1 1 1 1<br>Output of QW6 / QW3 in the data format higher/lower value Byte:<br>D15 D14 D13 D12 D11 D10 D9 D8 D7 D6 D5 D4 D3 D2 D1 D0<br>1 1 1 1 1 1 1 1 0 1 0 0 0 1 0 0 |

Table 28: Example for place to keep data in the process image

The following table is meant to clarify the method of addressing:

| Byte addressing |      |      | Word addressing |      |      |
|-----------------|------|------|-----------------|------|------|
| Byte 0          | IB 0 | IW 0 | Word 0          | IB 0 | IW 0 |
| Byte 1          | IB 1 |      |                 | -    |      |
| Byte 2          | IB 2 | IW 2 | Word 1          | IB 1 | IW 1 |
| Byte 3          | IB 3 |      |                 | -    |      |
| Byte 4          | IB 4 | IW 4 | Word 2          | IB 2 | IW 2 |
| Byte 5          | IB 5 |      |                 | -    |      |

Table 29: Image of the method of addressing for input

| Byte addressing |      |      | Word addressing |      |      |
|-----------------|------|------|-----------------|------|------|
| Byte 0          | QB 0 | QW 0 | Word 0          | QB 0 | QW 0 |
| Byte 1          | QB 1 |      |                 | -    |      |
| Byte 2          | QB 2 | QW 2 | Word 1          | QB 1 | QW 1 |
| Byte 3          | QB 3 |      |                 | -    |      |
| Byte 4          | QB 4 | QW 4 | Word 2          | QB 2 | QW 2 |
| Byte 5          | QB 5 |      |                 | -    |      |

Table 30: Image of the method of addressing for output

### 5.3.3 Master Configuration

The Master configuration is described further above in section *Master Configuration* on page 36.

### 5.3.4 Global Settings

First you have to set the focus on the Master (left mouse click) and select the menu **Settings > Global Settings**

or

click with the right mouse key on the symbol of the Master device to select the menu **Master Configuration** and then click the button **Global Settings**.

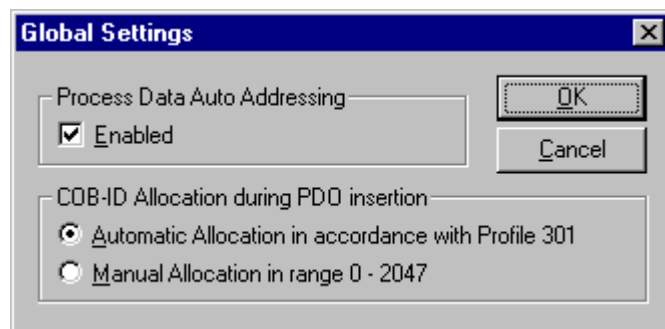


Figure 45: Settings > Global Settings

- **Process Data Auto Addressing**

In this window it is adjusted whether the process data addressing is executed automatically by SyCon (active selected) or manually by the user (active not selected).

| Auto Addressing active   | Auto Addressing deactivated  |
|--|--|
| Auto addressing (by SyCon)   | Manually addressing (by the user)  |
| The addresses will be allocated beginning with 0 and incremented in accordance with the entry sequence of the Slaves before downloading and can be viewed and checked in the menu <b>View &gt; Address Table</b> . | The address 0 is shown in the <b>I Addr or O Addr</b> and must be overwritten by the user. |

Table 31: Process Data Auto Addressing activated / deactivated

- **COB-ID Allocation during PDO insertion**

The CANopen specification provides that the message number (COB-ID) of a PDO is given relatively to the Node address according to a fixed routine. It is called Pre-Defined Connection Set. This is described in section *COB-ID (Predefined Connection Set)* on page 175.

- **Automatic Allocation in accordance with Profile 301**

If this menu option is selected, an alteration of the message number of the PDOs is not possible and its assignment takes place automatically by the CANopen profile 301.

- **Manual Allocation in range 0-2047**

If this menu option is selected, a definition of the message number of the PDOs is possible and can take place in the context of the possible 2048 (11 bit) different CAN-Identifier manually.

## 5.4 CANopen Node

### 5.4.1 Node Settings

The CANopen Node Settings contain parameters that define the behaviour of the device at its user interface, which does not belong to the CANopen Node configuration. This menu point is applicable only to Hilscher devices. These settings are transferred with the download of the CANopen configuration to the device.

In order to open the CANopen Node Settings menu, first choose the Node and then open the window in the **Settings > Node Settings** menu.

or

make a right mouse click at the symbol of the Hilscher Node device and then select **Node Settings**.

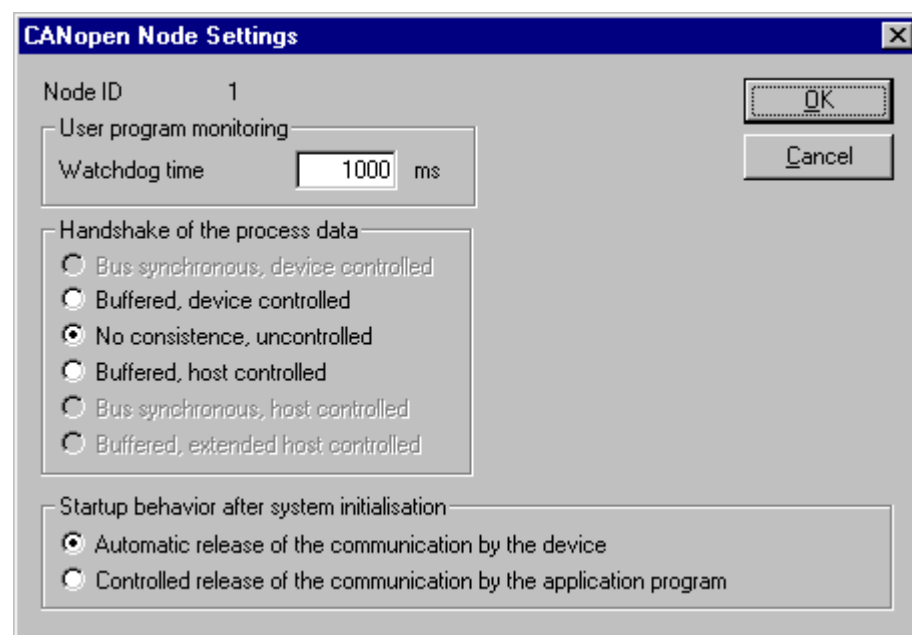


Figure 46: Settings > CANopen Node Settings

- **User program monitoring**

The watchdog time appoints how long the device will wait for a user trigger of the watchdog, until it resets all outputs to zero. This must be activated from the application.

- **Handshake of the process data**

With this different modes the handshake of the process data is selected for the master. The selection of this mode is important for the correct data exchange between the application and the device. Please refer to the tool kit or the device driver manual for the detailed description of these modes.

The set handshake of the process data must be supported by the application program. The handshake buffered, host controlled is mostly supported. The handshake no consistence, uncontrolled works without handshake and both processes run free.

A detailed description is provided in the manual for the Toolkit or the manual for the device driver.

If you run a soft PLC or a visualization software on your PC, please check in their documentation, which handshake mode this program expects.

- **Startup behaviour after system initialization**

If **Automatic release of the communication by the device** is selected, the Slave is ready to communicate with the master when started. If **Controlled release of the communication by the application program** is selected, the user has to release communication by a defined release procedure.

## 5.4.2 CANopen Node Configuration

The CANopen Node Configuration is described further above in section *Node Configuration* on page 40.

## 5.5 Project Information

If the user creates his own project, the project information can be typed in into the **Settings > Project Information** menu. Anybody can then read this entry when this menu is called up.

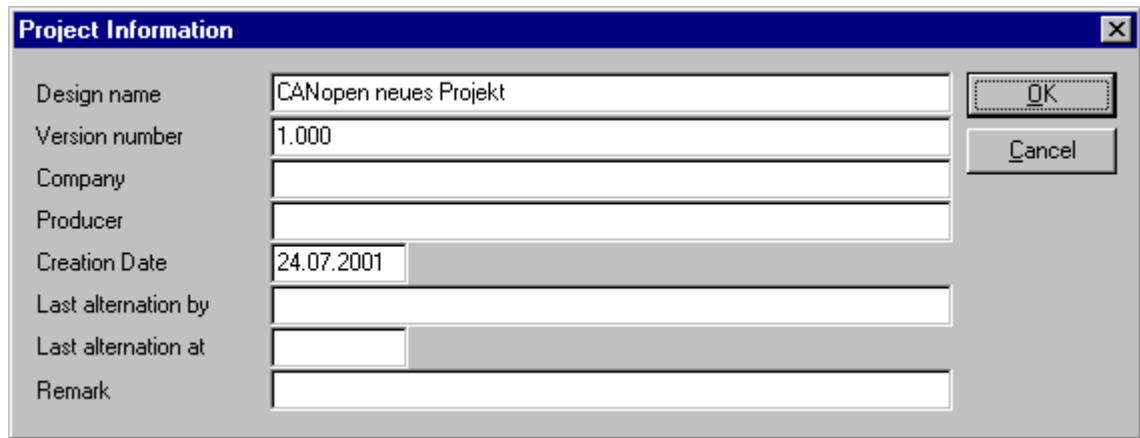


Figure 47: Settings > Project Information

By clicking the **OK** button the Project Information is saved.

## 5.6 Path

When the **Settings > Path** menu is selected, then the search path for EDS files is displayed.

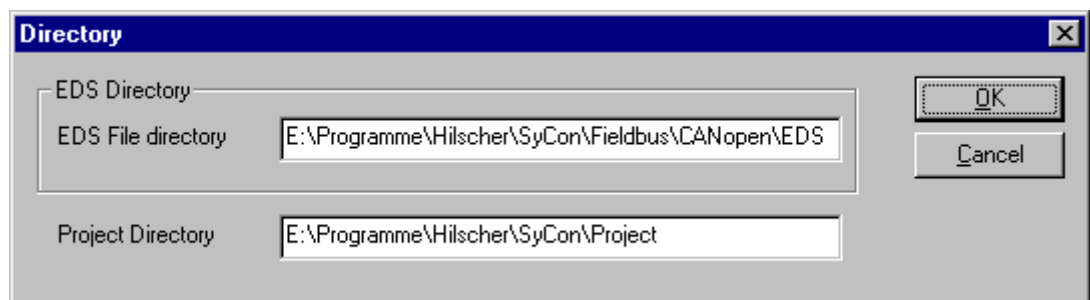


Figure 48: Settings > Path

If you click the button **OK**, all EDS files are read in.

## 5.7 Language

Choose the **Settings > Language** menu and the following window opens:

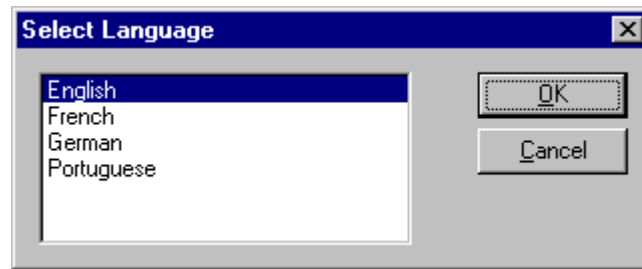


Figure 49: Settings > Language

Here one is in a position of setting the language of the System Configurator. Select the desired language and confirm the entry with the **OK** button.

A message appears that the System Configurator must be started again in order to activate the selected language. Please carry this out.

After restarting the System Configurator, the language will have changed to the one selected.

---

**Note:** Up to now not all languages are available for all fieldbuses!

---

## 5.8 Start Options

After activating the **Settings > Start...** menu point in the network mode, the following dialog will appear. Here it is possible to set the various starting options or modes. Some are of importance only for the OPC-Server operation.

**Note:** The point of menu start options appears only in the selection settings, if the network view is opened.

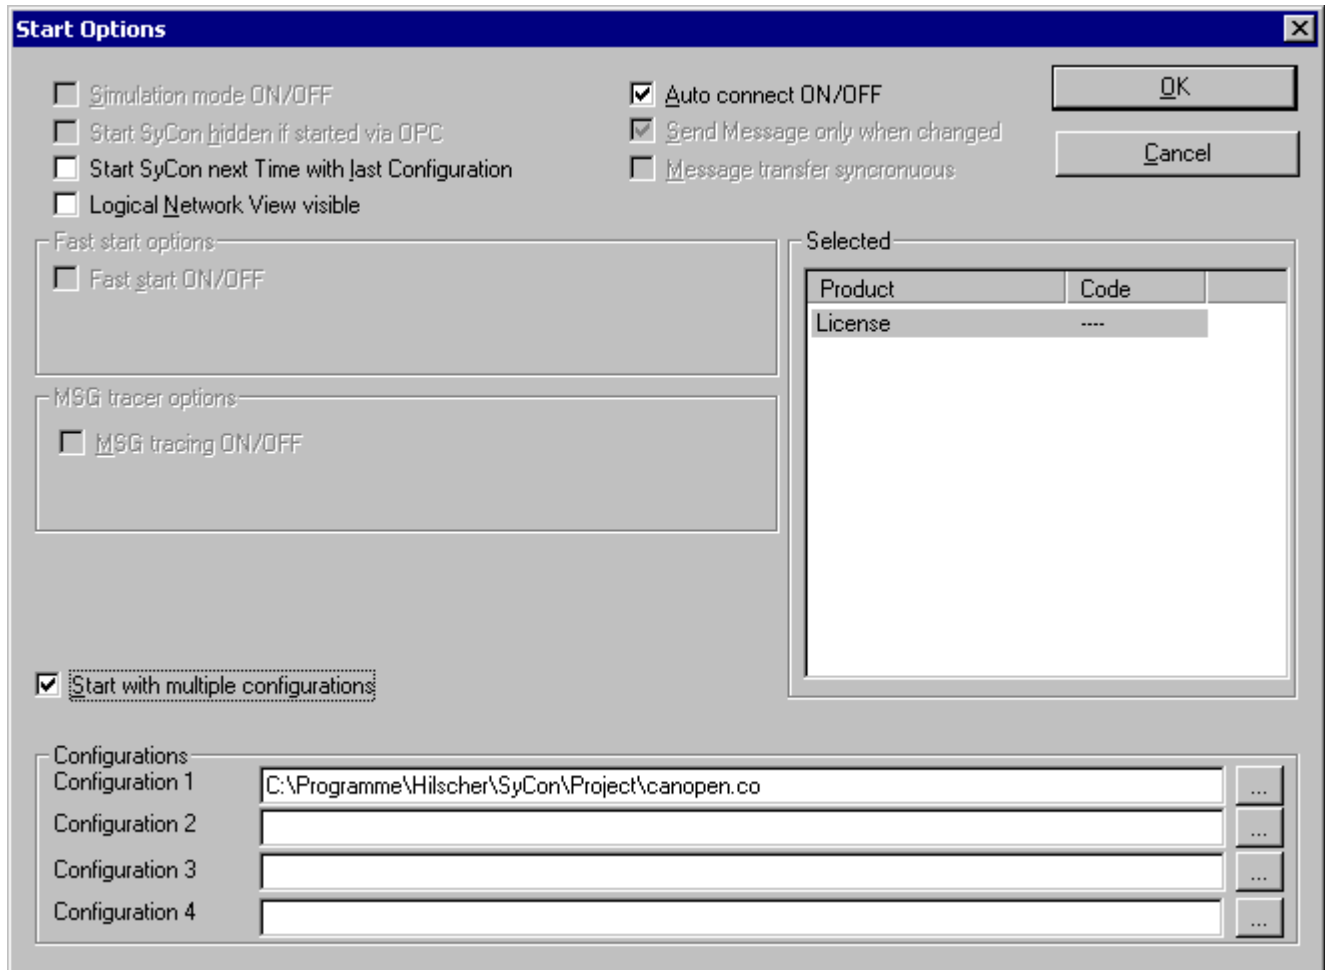


Figure 50: Settings > Start Options

- **Simulation mode ON/OFF**  
Only valid for the OPC Server.
- **Start SyCon hidden if started via OPC**  
Only valid for the OPC Server.

- **Start SyCon next time with last Configuration**

When this is marked the last saved configuration in the SyCon is automatically loaded when the SyCon is started again.
- **Logic Network View visible**

When this is marked, there is the possibility of diverting to the network mode without having to install the SyCon with OPC. It is also possible to use the Watch List from the network mode.
- **Fast start ON/OFF**

Only valid for the OPC Server.
- **MSG tracing ON/OFF**

Only valid for the OPC Server.
- **Auto connect ON/OFF**

If this is marked, when opening a configuration automatically a connection to that Hilscher devices is manufactured without the device allocation additionally have to be executed.
- **Send Message only when changed**

Only valid for the OPC Server.
- **Message transfer synchronous**

Only valid for the OPC Server.
- **Start with multiple configurations**

If this option is selected, you have the possibility to start SyCon with up to four configurations simultaneously. The paths are shown in the window and they are changeable there.



## 6 Online Functions

### 6.1 Introduction

In this section all the functions that directly influence Hilscher CANopen devices, e.g. CIF 50-COM, CIF 50-COS are presented.

**Note:** Please note that this also permits an interruption of the running communication or that input and output can be switched ON or OFF.

### 6.2 Online to the CIF

#### 6.2.1 Downloading the Configuration

First, the desired device must be chosen for downloading by a left mouse click on the symbol of the device.

In order to release the configuration and network access, a transfer (Download) to the CIF/COM/PKV devices must be carried out on the **Online > Download** menu. A warning will appear that the communication on the CANopen will be interrupted. This warning must be confirmed.

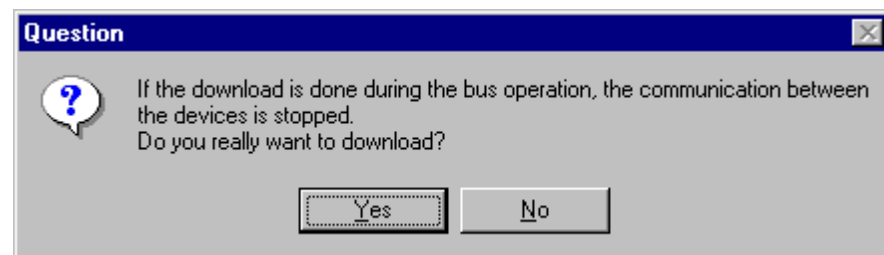


Figure 51: Security question before Download

**Attention:** The download overwrites the configuration in the device and the communication with the connected devices is interrupted.

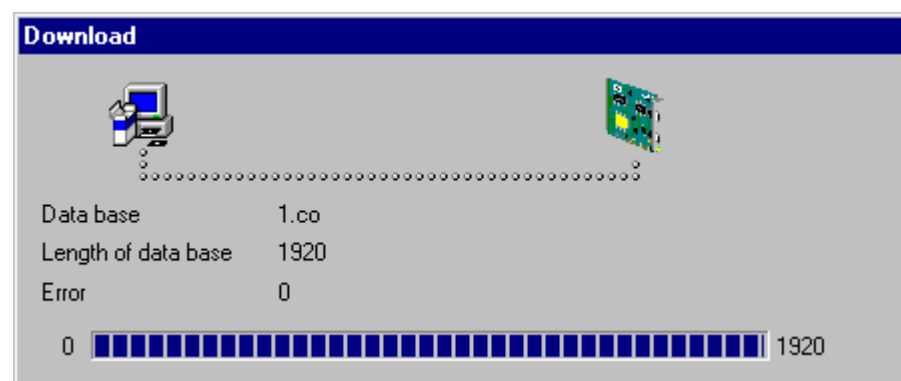


Figure 52: Online > Download

Before the Download is executed, the configuration is checked by the Configurator. The most common cause of error is overlapping of addresses in the process data image. This can be checked by calling up the address table with the **View > Address Table** menu point.

If the issue of addresses in the process data image should be carried out automatically, then the **Auto Addressing** button in the **Master Configuration** window must be activated.

The configuration is transferred into the selected device and is stored there in FLASH memory in a zero voltage manner so that the configuration is available when the voltage supply is switched off and on again.

After the download, the device carries out an internal restart and begins with the communication if in **CANopen Master Settings** the **Automatic Release of Communication by the Device** menu point has been set.

## 6.2.2 Firmware Download

If a Firmware download is to be carried out, proceed as follows: first the desired device for Firmware downloading must be chosen in that the symbol of the device is selected with a left mouse click. Then, call up the **Online > Firmware Download** menu. Select the new Firmware and retrieve it with **Download** into the device. The Firmware is now retrieved.

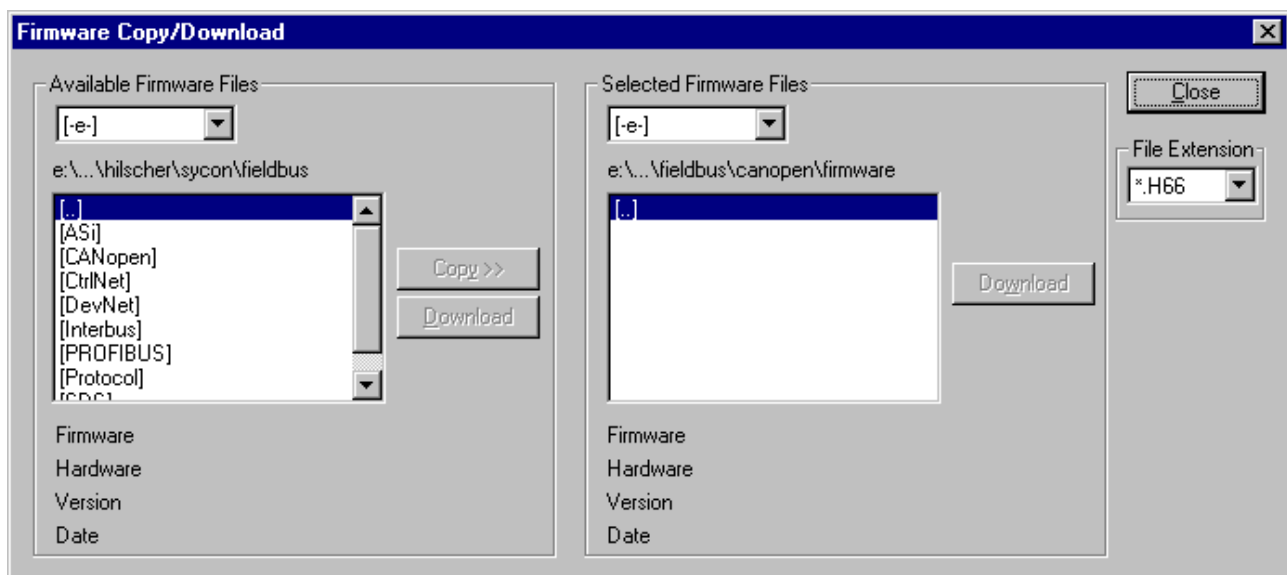


Figure 53: Online > Firmware Download

### 6.2.3 Firmware / Reset

First the desired device must be chosen with a left mouse click on the symbol of the device. Then the **Online > Firmware / Reset** menu must be called up and the name and the version of the Firmware are displayed.

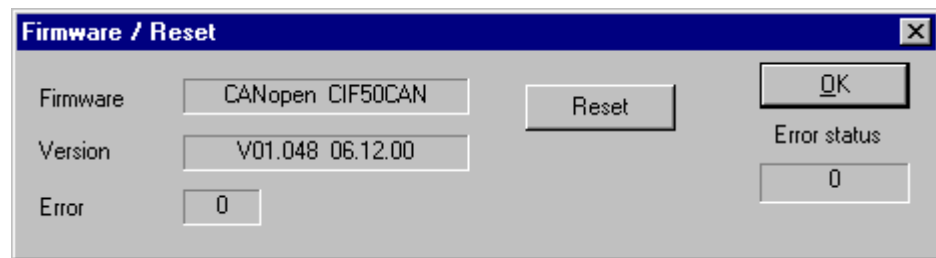


Figure 54: Online > Firmware / Reset

The device is reset with the **Reset** button.

### 6.2.4 Device Info

First the desired device must be chosen with a left mouse click on the symbol of the device. Then select the **Online > Device Info** menu in order to obtain further information on the selected device.

The manufacturer date, the device number and the serial number of the device is retrieved and shown.

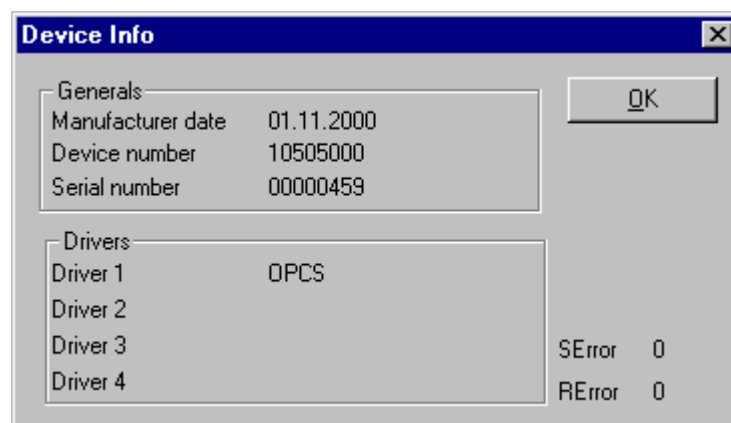


Figure 55: Online > Device Info

## 6.2.5 Activate Driver

The driver has to be licensed, if the software PLC or SyCon OEM is used.

If the driver was ordered by buying the SyCon, you don't need to license it because this was done before.

First the desired device must be chosen with a left mouse click on the symbol of the device. Then select the **Online > Activate Driver** menu.

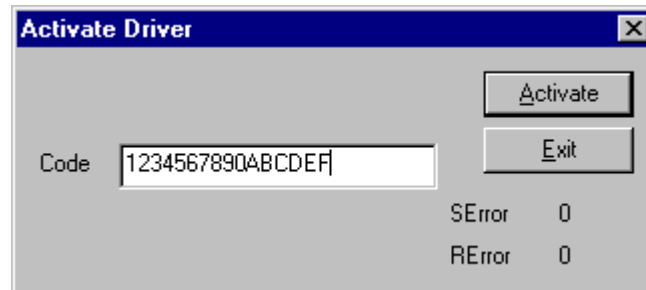


Figure 56: Online > Activate Driver

---

**Note:** The code 01234567890ABCDEF is not a valid code and is only shown as an example.

---

## 6.3 Start/Stop Communication

The communication between CANopen Master and CANopen Node can be manually started or stopped.

First the desired device must be chosen with a left mouse click on the symbol of the device. Then select the **Online > Communication start** or **Online > Communication stop** menu.

## 6.4 Diagnostic Functions

The following table shows diagnostic functions and their using in case of

- Hilscher CANopen Master devices
- Hilscher CANopen Nodes (Slaves).

| Diagnostic Function               | Using   | Usable for Hilscher CANopen Master devices | Usable for Hilscher CANopen Nodes            |
|-----------------------------------|---|--|--|
| <i>Live List</i>                  | Determine, which devices are connected to the Hilscher CANopen Master device.   | Yes  | No, only for Hilscher CANopen Master devices |
| <i>Debugmode (CANopen)</i>        | Determine, to which CANopen Nodes the Hilscher CANopen Master has communication | Yes  | No, only for Hilscher CANopen Master devices |
| <i>Global State Field</i>         | Status information of the Hilscher CANopen Master                               | Yes  | No, only for Hilscher CANopen Master devices |
| <i>Extended Device Diagnostic</i> | Statistic information and status information from the Hilscher CANopen device   | Yes  | Yes  |

Table 32: Overview Diagnostic Functions

### 6.4.1 Live List

First the desired device must be chosen with a left mouse click on the symbol of the device. Then select the **Online > Live List** menu and obtain an overview over all active devices at the CANopen network.

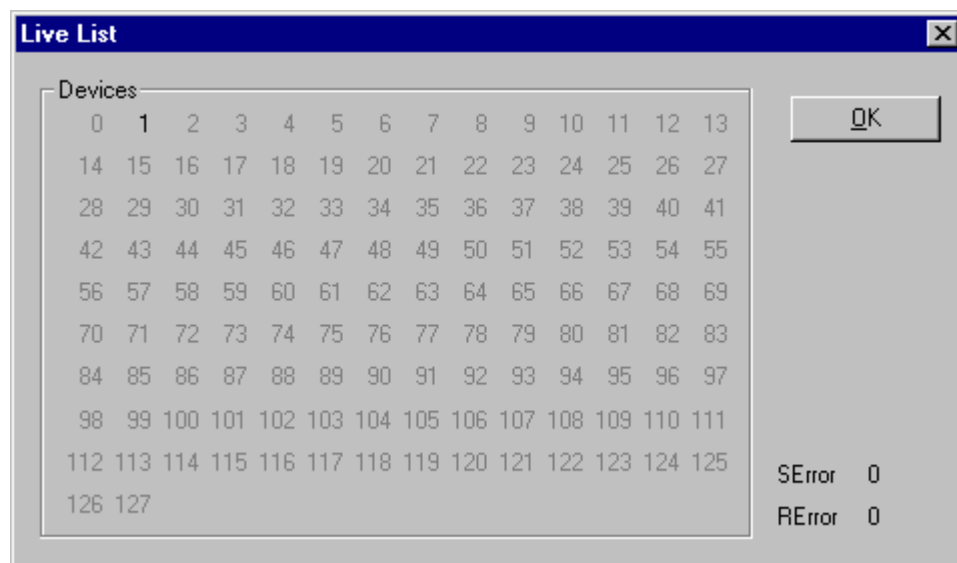


Figure 57: Online > Live List

Generally all devices are displayed grey. At the bus detected Nodes are represented black on the basis their appropriate Node address.

## 6.4.2 Debugmode (CANopen)

Click the menu item **Online > Start Debug Mode**. Then the System Configurator cyclically interrogates the status of the network communication from the CIF, COM or PKV and the individual conditions of the Nodes.

To end the Debug Mode select the menu **Online > Stop Debug Mode**.

### 6.4.2.1 The Debugwindow

When the debug session is started the configuration window changes into the debug window. The devices and the line between them are displayed in green or red colour depending on the established network communication.

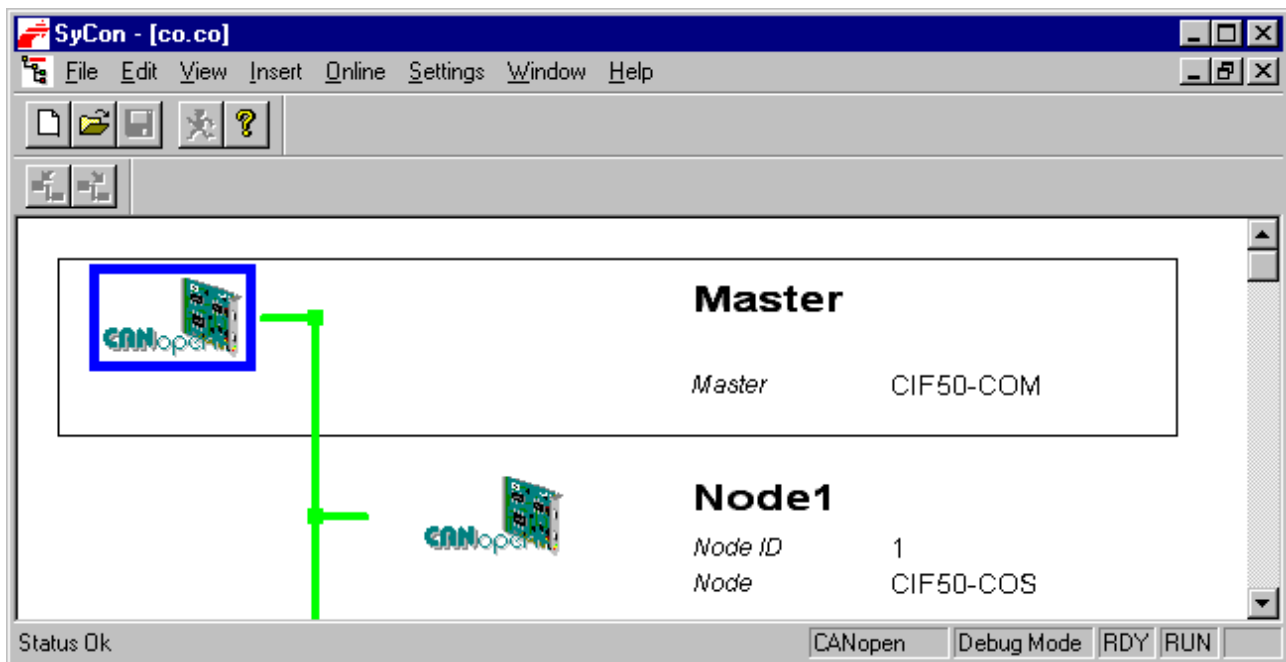



Figure 58: The Debugwindow

If a diagnostic information is available for a specific device, next to the device Icon the text **Diag** appears in red. To get further device specific diagnostic information then double-click on the device itself or set the focus to the device and select **Online > Device Diagnostic**.

**Note:** Only if the CANopen Node supports the Nodeguarding, the CANopen Master (NMT-Master) can recognize that the Node has failed.

The Master icon has the  sign to show the stop mode.

In run mode the Master icon has the sign .

### 6.4.2.2 CANopen Node specific Diagnostic

After the debug started from this time SyCon requests the status of all devices from the master. If there is an error on a device the bus line to this Slave is displayed in red colour otherwise it is green. SyCon also displays the letters **Diag**, if the device signals a diagnostic information. This information is displayed closer if you click with the mouse onto the corresponding device in debug mode.

To activate the debug mode you have to mark the Master with a left mouse click and select the menu **Online > Start Debug Mode**. Now set the focus at the Node (left mouse click) and select the menu **Online > Device Diagnostic** to show the CANopen Device Diagnostic. To end the Debug Mode you have to mark the Master again and select the menu **Online > Stop Debug Mode**.

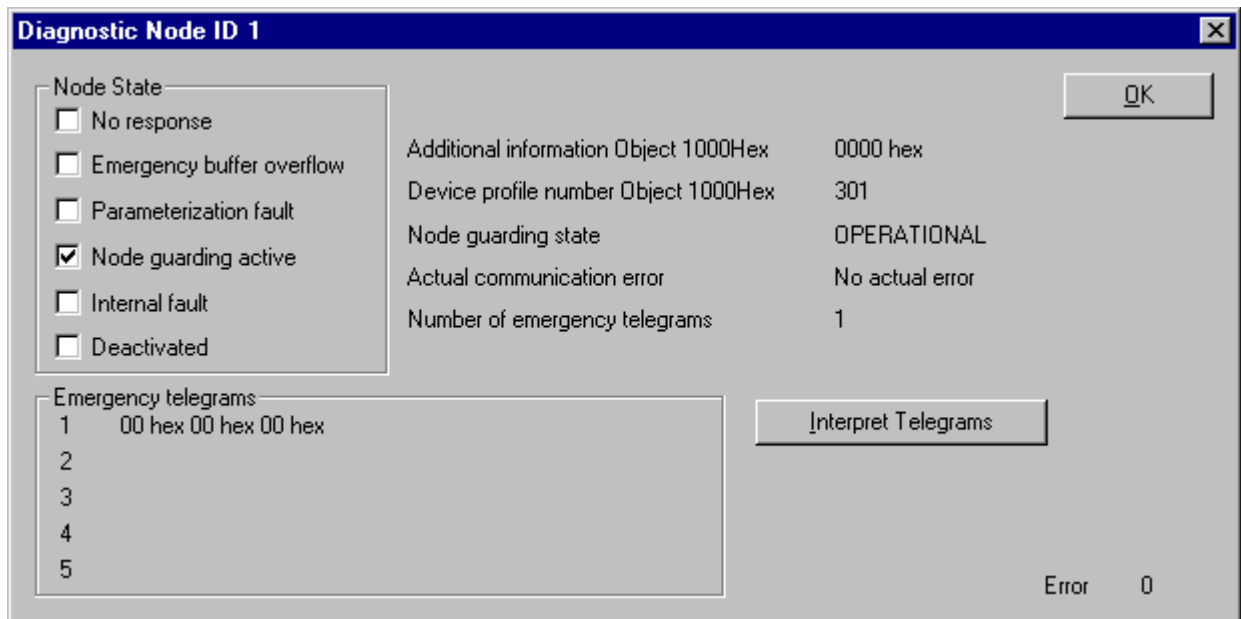


Figure 59: Online > Device Diagnostic (CANopen Standard Diagnostic)

Description see next page.


The individual bits in the **Device Diagnostic** and their meaning:

| Bits in the Device Diagnostic | Meaning   |
|-------------------------------|---|
| No Response                   | The Node is configured but is not present in the network. Please check the physical connection between the Master and this Node. Compare the selected baudrate of the Node with the baudrate of the Master, if this baudrate is supported by the Node. Further more compare the Node address.   |
| Emergency buffer overflow     | CANopen defines a special reserved emergency channel for each Node with high priority to give each Node the possibility to report emergency messages triggered by the occurrence of a device internal fatal error situation. The emergency message of each Node are saved in an internal buffer on the Master. The buffer will be cleared when SyCon reads out this buffer and shows the telegrams in the lower <b>Emergency telegrams</b> window. If this buffer now is overstepped it will cause lost telegrams. In this case the buffer overflow event is reported. By means of CANopen Communication Profile defined emergency error codes the emergency condition is specified. Collected and shown <b>Emergency telegrams</b> in the lower table can be interpreted textual by clicking onto the <b>Interpret Telegrams</b> button. |
| Parameterization fault        | The Master compares the configured Device <b>Profile</b> and the corresponding <b>Device Type</b> value of the <b>Node Configuration</b> window with the real physically present ones in the Node by reading out the Node object 1000H. If the Master detects differences between the values it will report the Parameterization Fault. The real 1000H containment that is just read out online from the Node is shown similar as value in this window behind the <b>Device profile number Object 1000H</b> and <b>Additional information Object 1000H</b> entry.   |
| Node guarding active          | As soon as the master has finished up the configuration phase of the Node it will start the cyclic Node guarding mechanism and set the Node guarding active indication flag. Remember: the Node guarding will only be activated if neither the Guard time nor the Life time factor in the Node Configuration window is zero.  |
| Internal fault                | The internal fault indication serves to report master internal fatal error situations. If it is reported the office Hilscher should be called.  |
| Deactivated                   | This bit is set by the master automatically, if the Node state was configured to <b>Deactivate Node in actual configuration</b> in the <b>Node Configuration</b> window.  |

Table 33: Meaning of the bits in the Device Diagnostic

### 6.4.2.3 Emergency Telegrams

Emergency telegrams are sent by the Node when an internal event occurs if a Node enters. The CANopen Master can buffer maximally 5 Emergency telegrams.

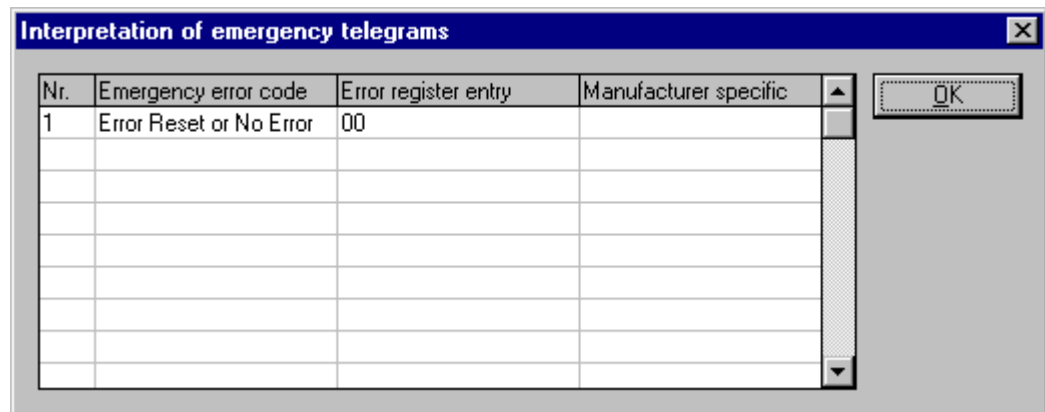

| Nr. | Emergency error code    | Error register entry | Manufacturer specific |
|-----|-------------------------|----------------------|-----------------------|
| 1   | Error Reset or No Error | 00                   |                       |
|     |                         |                      |                       |
|     |                         |                      |                       |
|     |                         |                      |                       |
|     |                         |                      |                       |
|     |                         |                      |                       |
|     |                         |                      |                       |
|     |                         |                      |                       |
|     |                         |                      |                       |
|     |                         |                      |                       |

Figure 60: Online > Device Diagnostic > Interpretation of emergency telegrams

A table with the Error Codes is described in section *Emergency Telegram Error Codes* at page 189.

---

**Note:** The table Emergency Error Codes is a general list. For the exact meaning it is referred to the manual of the Node manufacturer.

---

### 6.4.3 Global State Field

With the menu option **Online > Global State Field** opens a window in that cyclically statistic about the bus status and connected devices are shown.

**Global State Field**

Online master main state    **OPERATE**   

Collective status bits    ☐ TOUT   ☐ NRDY   ☐ EVE   ☐ FAT   ☐ NEXC   ☐ ACLR   ☐ CTRL

Collective online error location and corresponding error

Error at remote address                      0        dec

Corresponding error event                      No actual error

Statistic bus information

Counter of detected bus off reports                      0        dec

Counter of rejected telegram transmissions                      0        dec

Device specific status bits

|     |     |     |     |     |     |     |     |     |     |     |     |     |     |
|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| 0   | 1   | 2   | 3   | 4   | 5   | 6   | 7   | 8   | 9   | 10  | 11  | 12  | 13  |
| 14  | 15  | 16  | 17  | 18  | 19  | 20  | 21  | 22  | 23  | 24  | 25  | 26  | 27  |
| 28  | 29  | 30  | 31  | 32  | 33  | 34  | 35  | 36  | 37  | 38  | 39  | 40  | 41  |
| 42  | 43  | 44  | 45  | 46  | 47  | 48  | 49  | 50  | 51  | 52  | 53  | 54  | 55  |
| 56  | 57  | 58  | 59  | 60  | 61  | 62  | 63  | 64  | 65  | 66  | 67  | 68  | 69  |
| 70  | 71  | 72  | 73  | 74  | 75  | 76  | 77  | 78  | 79  | 80  | 81  | 82  | 83  |
| 84  | 85  | 86  | 87  | 88  | 89  | 90  | 91  | 92  | 93  | 94  | 95  | 96  | 97  |
| 98  | 99  | 100 | 101 | 102 | 103 | 104 | 105 | 106 | 107 | 108 | 109 | 110 | 111 |
| 112 | 113 | 114 | 115 | 116 | 117 | 118 | 119 | 120 | 121 | 122 | 123 | 124 | 125 |
| 126 | 127 |     |     |     |     |     |     |     |     |     |     |     |     |

Error    0

Figure 61: Online > Global State Field

The first row displays the main status of the Master. It can take the status **OPERATE** or **STOP** or **OFFLINE**.

The next row displays individual bus errors. A pending error is displayed with a red field. The meaning of the individual abbreviations is described in the following:

| Bus error   | Meaning   |
|-------------|---|
| <b>TOUT</b> | Timeout Error   |
| <b>NRDY</b> | HOST-NOT-READY-NOTIFICATION<br>shows, if the application program is ready or not. If this bit is set the application program is not ready to communicate.   |
| <b>EVE</b>  | EVENT-ERROR<br>the CAN chip has detected transmission errors. The number of detected events are counted in the bus off reports and the error warning limit counter. The bit will be set when the first event was detected and will not be deleted any more. |
| <b>FAT</b>  | FATAL-ERROR<br>because of heavy bus error, no further bus communication is possible.  |
| <b>NEXC</b> | NON-EXCHANGE-ERROR<br>At least one Node has not reached the data exchange state and no process data are exchange with it.   |
| <b>ACLR</b> | AUTO-CLEAR-ERROR<br>device stopped the communication to all Nodes and reached the auto-clear end state.   |
| <b>CTRL</b> | CONTROL-ERROR<br>a parameterization error has occurred.   |

Table 34: Meaning of collective status bits in the Global State Field

Further contents are given:

**Collective online error location and corresponding error** gives the address of the incorrect station and the lining up error in plain text.

**Statistic bus information** gives the number of detected bus short-circuits and rejected telegrams.

#### Device specific status bits

**Parameterized Devices, Activated Devices** and **Devices with Diagnostic** are shown if you click at that button. The activated addresses are colored numbers. You can see the diagnostic by double-clicking at a highlighted station address of a device.

This displaying is cyclically updated.

## 6.4.4 Extended Device Diagnostic

The Extended Device Diagnostic helps to find Bus and configuration errors when the SyCon menu functions are of no further help.

First the required device must be chosen with a left mouse click on the symbol of the device. Then select the **Online > Extended Device Diagnostic** menu.

This menu opens a list of diagnostic structures. These contain online counters, statuses and parameters:

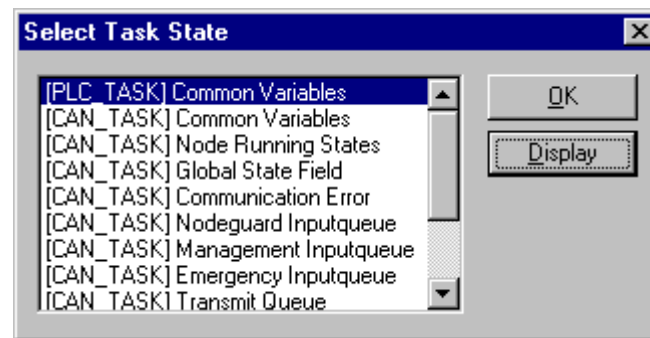


Figure 62: Online > Extended Device Diagnostic

First the specification for the CANopen Master and far down for the CANopen Slave follows.

#### 6.4.4.1 Extended Device Diagnostic CANopen Master

| Task/Taskstate                        | Page |
|---------------------------------------|------|
| <i>PLC_TASK Common Variables</i>      | 157  |
| <i>CAN_TASK Common Variables</i>      | 158  |
| <i>CAN_TASK Node Running State</i>    | 159  |
| <i>CAN_TASK Global State Field</i>    | 160  |
| <i>CAN_TASK Communication Error</i>   | 160  |
| <i>CAN_TASK Nodeguard Inputqueue</i>  | 161  |
| <i>CAN_TASK Management Inputqueue</i> | 161  |
| <i>CAN_TASK Emergency Inputqueue</i>  | 162  |
| <i>CAN_TASK Transmit Queue</i>        | 162  |
| <i>CAN_TASK CMS Domain Services</i>   | 163  |
| <i>CAN_TASK Timeout Counter</i>       | 164  |
| <i>CAN_TASK Node Init Counter</i>     | 165  |

Table 35: CANopen Master Taskstate

#### 6.4.4.2 Extended Device Diagnostic CANopen Node

| Task/Taskstate                     | Page |
|------------------------------------|------|
| <i>PCL_TASK Common Variables</i>   | 166  |
| <i>COS_TASK Common Variables</i>   | 167  |
| <i>COS_TASK User Communication</i> | 169  |
| <i>COS_TASK Node Management</i>    | 170  |
| <i>COS_TASK PDO Transfer</i>       | 171  |
| <i>COS_TASK SDO Transfer</i>       | 172  |
| <i>COS_TASK Object Dictionary</i>  | 173  |
| <i>COS_TASK Receive Queue</i>      | 173  |
| <i>COS_TASK Transmit Queue</i>     | 174  |

Table 36: CANopen Node Taskstate

## 6.5 User Data Transfer

The following table show test functions with user data transfer and the usability for

- Hilscher CANopen Master devices
- Hilscher CANopen Nodes

| User data transfer function        | Usage   | Usable with Hilscher CANopen Master devices | Usable with Hilscher CANopen Slave devices |
|------------------------------------|---|---|--|
| <i>I/O-Monitor</i>                 | Read input data and set output data. (cyclic I/O data exchange) | Yes   | Yes  |
| <i>I/O Watch</i>                   | Read input data and set output data. (cyclic I/O data exchange) | Yes   | No   |
| <i>Read Objects (SDO Upload)</i>   | Read objects (SDO Upload)                                       | Yes   | No   |
| <i>Write Object (SDO Download)</i> | Write objects (SDO Download)                                    | Yes   | No   |

Table 37: Overview User Data Transfer

### 6.5.1 I/O-Monitor

This is an easy way of viewing and changing the first 32 Bytes of the process data image. The I/O Monitor is called up with the menu **Online > I/O Monitor**.

**I/O Monitor**

Input data

| dec | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|-----|---|---|---|---|---|---|---|---|---|---|
| 0   | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 1   | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 2   | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 3   | 0 | 0 |   |   |   |   |   |   |   |   |
| 4   |   |   |   |   |   |   |   |   |   |   |
| 5   |   |   |   |   |   |   |   |   |   |   |
| 6   |   |   |   |   |   |   |   |   |   |   |
| 7   |   |   |   |   |   |   |   |   |   |   |

Output data

| dec | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|-----|---|---|---|---|---|---|---|---|---|---|
| 0   | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 1   | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 2   | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 | 0 |
| 3   | 0 | 0 |   |   |   |   |   |   |   |   |
| 4   |   |   |   |   |   |   |   |   |   |   |
| 5   |   |   |   |   |   |   |   |   |   |   |
| 6   |   |   |   |   |   |   |   |   |   |   |
| 7   |   |   |   |   |   |   |   |   |   |   |

OK  
DEC/HEX  
Update  
Error 0

Figure 63: Online > I/O-Monitor

**DEC/HEX** converts the display of the input data. The output data are always in the decimal form.

Enter the output value and then press **Update**.

Always the first 32 input and output Bytes of the process depiction are shown, also when these Bytes have not been occupied by the configuration.

The display is always in a Byte manner.

A more comfortable display is offered by the I/O-Watch Monitor that is described in the next section.

## 6.5.2 I/O Watch

The I/O Watch monitor can be used in place of the I/O Monitor and offers more functionality.

- Various data formats: Hex, Unsigned Decimal, Signed Decimal, Bit
- The I/O Watch monitor works symbol oriented
- It is not necessary to know the offset addresses

The following firmware supports the I/O Watch monitor function:

| Fieldbus            | From Version                                |
|---------------------|---|
| PROFIBUS-DP Master  | 1.040 (Combimaster) resp. 1.140 (DP-Master) |
| InterBus Master     | 2.040                                       |
| CANopen Master      | 1.040                                       |
| DeviceNet Master    | 1.058                                       |
| AS-Interface Master | 1.010                                       |

Table 38: Firmware for I/O Watch function

The following table lists the typical steps to use the I/O Watch monitor.

Preconditions:

- The project/configuration already exists, containing a CANopen Master and the CANopen Node(s) as described in section *Getting Started – Configuration Steps* on page 21.
- The Configuration has been downloaded into the CANopen Master using **Online > Download**
- Running bus system

1. Open the existing project using **File > Open**.
2. Open the Windows dropdown menu and select **Window > Logical Network View** to change the window. A window with three sections opens

| Left Window          | Center Window | Right Window |
|----------------------|---------------|--------------|
| Logical network view | Tag list      | I/O Watch    |

3. Open the tree structure in the left window to reach the I/O module of the device desired:

Project > Master > Node > Module > (possible) Submodul

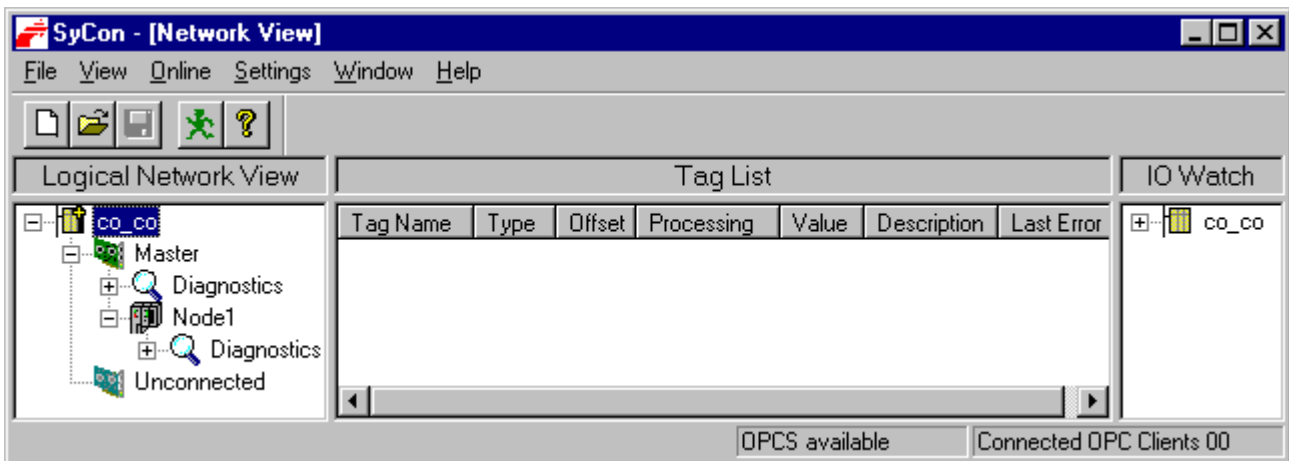


Figure 64: Logical Network View and I/O Watch

4. Left click on the module desired and the tags (I/Os) will be displayed in the center window of the Logical Network View.
5. Select with the left mouse button the tag/symbol desired and drag and drop them in the right window of the Logical Network View.
6. In the right window select the desired tag with the left mouse click to highlight it then right mouse click to open a menu. Select **Start**. A new window called I/O Watch appears.
7. A table shows the Device, Symbolic Name, IEC Address (Offset), Data type Representation and Value.
8. Input data are displayed and can't be changed. Output data can be entered into the value column.

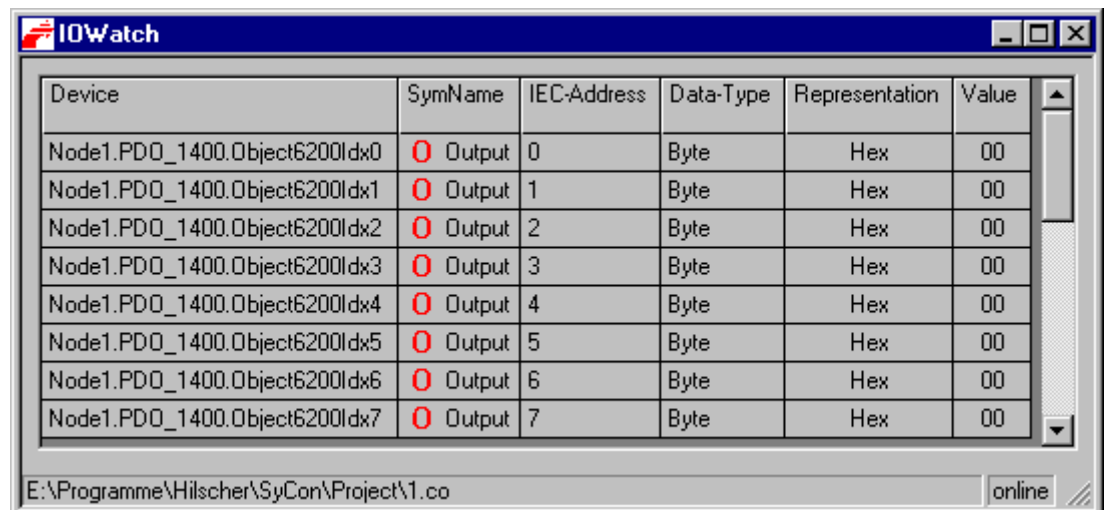


Figure 65: I/O Watch window

In the column representation can be selected the data type: Bit Pattern, Char, decimal Signed, decimal Unsigned, Hex

### 6.5.3 Read Objects (SDO Upload)

With this function you can execute the CANopen services read object and write object based on the current configuration.

As the first you must select the required device, by clicking with the left mouse button on the symbol Node. Then select the menu **Online Read Object** or **Online > Write Object**.

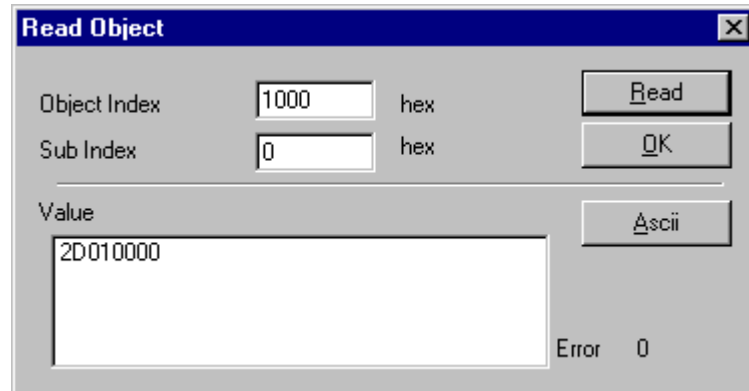


Figure 66: Online > Read Object

### 6.5.4 Write Object (SDO Download)

With this function you can execute the CANopen services read object and write object based on the current configuration.

As the first you must select the required device, by clicking with the left mouse button on the symbol Node. Then select the menu **Online Read Object** or **Online > Write Object**.

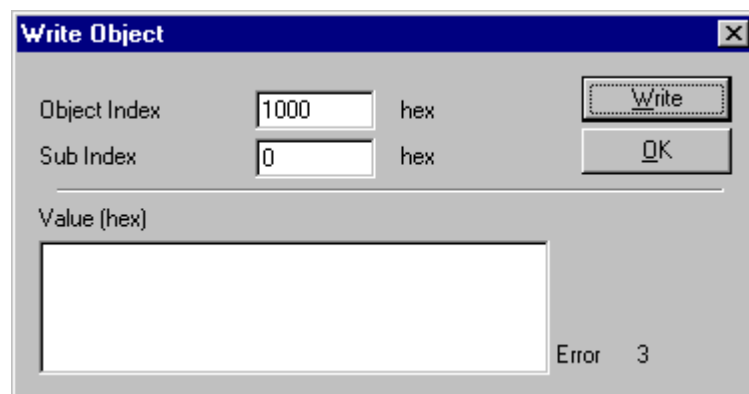


Figure 67: Online > Write Object

Objects in CANopen are addresses in the manner Object-Index and corresponding Sub-Index. Both values must be specified in the selected window. Press **Read** or **Write** button to start the action. SyCon informs about success and failure of the action.

## 6.6 Message Monitor

The Message Monitor permits access to the Mailbox of the CIF. The usage of the Message Monitor assumes advanced knowledge on the part of the user.

First the Hilscher device must be chosen with a left mouse click on the symbol of the Hilscher device. Then call up the **Online > Message Monitor** menu.

**Message Monitor**

File Edit View

**MESSAGE OUTPUT** Counter 0

Message Header

|    |   |    |   |
|----|---|----|---|
| RX | 0 | TX | 0 |
| LN | 0 | NR | 0 |
| A  | 0 | F  | 0 |
| B  | 0 | E  | 0 |

Telegram Header

|             |                                 |
|-------------|---------------------------------|
| Device Adr. | Data Area                       |
| Data Adr.   | Data Idx.                       |
| Data Count  | Data Type                       |
| Function    | <input type="checkbox"/> enable |

Receive data

|    | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|----|---|---|---|---|---|---|---|---|---|---|
| 0  |   |   |   |   |   |   |   |   |   |   |
| 10 |   |   |   |   |   |   |   |   |   |   |
| 20 |   |   |   |   |   |   |   |   |   |   |
| 30 |   |   |   |   |   |   |   |   |   |   |
| 40 |   |   |   |   |   |   |   |   |   |   |
| 50 |   |   |   |   |   |   |   |   |   |   |
| 60 |   |   |   |   |   |   |   |   |   |   |
| 70 |   |   |   |   |   |   |   |   |   |   |

**MESSAGE INPUT** Counter 0

Message Header

|    |   |                                  |      |
|----|---|----------------------------------|------|
| RX | 0 | TX                               | 255  |
| LN | 0 | Auto NR <input type="checkbox"/> | NR 0 |
| A  | 0 | F                                | 0    |
| B  | 0 | E                                | 0    |

Telegram Header

|             |                                 |
|-------------|---------------------------------|
| Device Adr. | Data Area                       |
| Data Adr.   | Data Idx.                       |
| Data Count  | Data Type                       |
| Function    | <input type="checkbox"/> enable |

Send data

|    | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|----|---|---|---|---|---|---|---|---|---|---|
| 0  |   |   |   |   |   |   |   |   |   |   |
| 10 |   |   |   |   |   |   |   |   |   |   |
| 20 |   |   |   |   |   |   |   |   |   |   |
| 30 |   |   |   |   |   |   |   |   |   |   |
| 40 |   |   |   |   |   |   |   |   |   |   |
| 50 |   |   |   |   |   |   |   |   |   |   |
| 60 |   |   |   |   |   |   |   |   |   |   |
| 70 |   |   |   |   |   |   |   |   |   |   |

☐ Put cyclic PutMessage

Figure 68: Online > Message Monitor

A Message can be saved and retrieved and has the file suffix \*.MSG.

**File > New:** closes the window

**File > Open:** opens a Message (Message can be retrieved)

**File > Save** or **File > Save As:** saves a Message

**File > Exit:** ends the Message Monitor and returns to the SyCon.

### 6.6.1 Message Monitor for Using LSS/LMT

For setting the baud rate and the Node address LSS/LMT services can be used for some Nodes.

The LSS/LMT Master sends telegrams to the LSS/LMT Slave with CAN telegram identifier 2021 (07E5H). The LSS/LMT Slave replies to the LSS/LMT Master with the CAN telegram identifier 2020 (07E4H).

---

**Note:** It may be coupled only one Node to the Master at a time.

---

First the baud rate of the Hilscher CANopen Master have to be set equal to the baud rate of the Node.

Then the CAN telegram identifier 2020 has to be set with the receive filter.

| Message for Setting the Receive Filter CAN (Layer 2) |                             |                |
|--|-----------------------------|----------------|
| Message Header                                       |                             |                |
| Rx = 3 (fixed)                                       | Tx = 255                    |                |
| Ln = (is calculated)                                 | Nr = 0...255                |                |
| A = 0  | F = 0                       |                |
| B = 82   | E = 0                       |                |
| Send Data  | Meaning for CAN             | Range of value |
|  | CAN Receive ID Part 1 (LSB) | 228            |
|  | CAN Receive ID Part 2 (MSB) | 7              |

Table 39: Message Monitor for LSS/LMT > Setting the Receive Filter

**Message Monitor**

File Edit View

MESSAGE OUTPUT Counter 1

Message Header

|    |     |    |   |
|----|-----|----|---|
| RX | 255 | TX | 3 |
| LN | 0   | NR | 0 |
| A  | 82  | F  | 0 |
| B  | 0   | E  | 0 |

Telegram Header

|             |                                 |
|-------------|---------------------------------|
| Device Adr. | Data Area                       |
| Data Adr.   | Data Idx.                       |
| Data Count  | Data Type                       |
| Function    | <input type="checkbox"/> enable |

Receive data

|    | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|----|---|---|---|---|---|---|---|---|---|---|
| 0  |   |   |   |   |   |   |   |   |   |   |
| 10 |   |   |   |   |   |   |   |   |   |   |
| 20 |   |   |   |   |   |   |   |   |   |   |
| 30 |   |   |   |   |   |   |   |   |   |   |
| 40 |   |   |   |   |   |   |   |   |   |   |
| 50 |   |   |   |   |   |   |   |   |   |   |
| 60 |   |   |   |   |   |   |   |   |   |   |
| 70 |   |   |   |   |   |   |   |   |   |   |

MESSAGE INPUT Counter 1

Message Header

|    |    |                                  |      |
|----|----|----------------------------------|------|
| RX | 3  | TX                               | 255  |
| LN | 2  | Auto NR <input type="checkbox"/> | NR 0 |
| A  | 0  | F                                | 0    |
| B  | 82 | E                                | 0    |

Telegram Header

|             |                                 |
|-------------|---------------------------------|
| Device Adr. | Data Area                       |
| Data Adr.   | Data Idx.                       |
| Data Count  | Data Type                       |
| Function    | <input type="checkbox"/> enable |

Send data

|    | 0   | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|----|-----|---|---|---|---|---|---|---|---|---|
| 0  | 228 | 7 |   |   |   |   |   |   |   |   |
| 10 |     |   |   |   |   |   |   |   |   |   |
| 20 |     |   |   |   |   |   |   |   |   |   |
| 30 |     |   |   |   |   |   |   |   |   |   |
| 40 |     |   |   |   |   |   |   |   |   |   |
| 50 |     |   |   |   |   |   |   |   |   |   |
| 60 |     |   |   |   |   |   |   |   |   |   |
| 70 |     |   |   |   |   |   |   |   |   |   |

☐ Put cyclic PutMessage

OK

Figure 69: Message Monitor for LSS/LMT > Set the Receive Filter

## 1. Switch in configuration mode

| Message for Sending via CAN (Layer 2) |                                  |                |
|---------------------------------------|----------------------------------|----------------|
| Message Header                        |                                  |                |
| Rx = 3 (fixed)                        | Tx = 255                         |                |
| Ln = (is calculated)                  | Nr = 0...255                     |                |
| A = 0                                 | F = 0                            |                |
| B = 84                                | E = 0                            |                |
| Send Data                             | Meaning for CAN                  | Range of value |
|                                       | CAN Receive ID Part 1 (LSB)      | 252            |
|                                       | CAN Receive ID Part 2 (MSB)      | 162            |
|                                       | Send data 1: Mode Global Service | 4              |
|                                       | Send data 2: Config Mode         | 1              |

Table 40: Message Monitor LSS/LMT (1) &gt; Switch Configuration Mode on

The screenshot shows the 'Message Monitor' window with a menu bar (File, Edit, View) and an 'OK' button. It is divided into two main sections: 'MESSAGE OUTPUT Counter 1' and 'MESSAGE INPUT Counter 2'.

**MESSAGE OUTPUT Counter 1:**

- Message Header:** RX 255, TX 3, LN 0, NR 0, A 82, F 0, B 0, E 0.
- Telegram Header:** Device Adr., Data Area, Data Adr., Data Idx., Data Count, Data Type, Function (enable checkbox).
- Receive data:** A table with 10 columns (0-9) and 8 rows (0-70).

**MESSAGE INPUT Counter 2:**

- Message Header:** RX 3, TX 255, LN 4, NR 0 (Auto NR checkbox), A 0, F 0, B 84, E 0.
- Telegram Header:** Device Adr., Data Area, Data Adr., Data Idx., Data Count, Data Type, Function (enable checkbox).
- Send data:** A table with 10 columns (0-9) and 8 rows (0-70). Row 0 contains values 252, 162, 4, 1.
- Buttons:** 'Put cyclic' checkbox and 'PutMessage' button.

Figure 70: Message Monitor LSS/LMT (1) &gt; Switch Configuration Mode on

## 2. Set Node Address

| Message for Sending via CAN (Layer 2) |                             |                |
|---------------------------------------|-----------------------------|----------------|
| Message Header                        |                             |                |
| Rx = 3 (fixed)                        | Tx = 255                    |                |
| Ln = (is calculated)                  | Nr = 0...255                |                |
| A = 0                                 | F = 0                       |                |
| B = 84                                | E = 0                       |                |
| Send Data                             | Meaning for CAN             | Range of value |
|                                       | CAN Receive ID Part 1 (LSB) | 252            |
|                                       | CAN Receive ID Part 2 (MSB) | 162            |
|                                       | Send data 1: Set Node ID    | 17             |
|                                       | Send data 2: Node Address   | 1...127        |

Table 41: Message Monitor LSS/LMT (2) &gt; Set Node Address

**Message Monitor**

File Edit View

**MESSAGE OUTPUT** Counter 1

Message Header

|    |    |    |   |
|----|----|----|---|
| RX | 16 | TX | 3 |
| LN | 5  | NR | 0 |
| A  | 0  | F  | 0 |
| B  | 83 | E  | 0 |

Telegram Header

|             |                                 |
|-------------|---------------------------------|
| Device Adr. | Data Area                       |
| Data Adr.   | Data Idx.                       |
| Data Count  | Data Type                       |
| Function    | <input type="checkbox"/> enable |

Receive data

|    | 0   | 1   | 2  | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|----|-----|-----|----|---|---|---|---|---|---|---|
| 0  | 252 | 131 | 17 | 0 | 0 |   |   |   |   |   |
| 10 |     |     |    |   |   |   |   |   |   |   |
| 20 |     |     |    |   |   |   |   |   |   |   |
| 30 |     |     |    |   |   |   |   |   |   |   |
| 40 |     |     |    |   |   |   |   |   |   |   |
| 50 |     |     |    |   |   |   |   |   |   |   |
| 60 |     |     |    |   |   |   |   |   |   |   |
| 70 |     |     |    |   |   |   |   |   |   |   |

**MESSAGE INPUT** Counter 2

Message Header

|    |    |                                  |      |
|----|----|----------------------------------|------|
| RX | 3  | TX                               | 255  |
| LN | 4  | Auto NR <input type="checkbox"/> | NR 0 |
| A  | 0  | F                                | 0    |
| B  | 84 | E                                | 0    |

Telegram Header

|             |                                 |
|-------------|---------------------------------|
| Device Adr. | Data Area                       |
| Data Adr.   | Data Idx.                       |
| Data Count  | Data Type                       |
| Function    | <input type="checkbox"/> enable |

Send data

|    | 0   | 1   | 2  | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|----|-----|-----|----|---|---|---|---|---|---|---|
| 0  | 252 | 162 | 17 | 1 |   |   |   |   |   |   |
| 10 |     |     |    |   |   |   |   |   |   |   |
| 20 |     |     |    |   |   |   |   |   |   |   |
| 30 |     |     |    |   |   |   |   |   |   |   |
| 40 |     |     |    |   |   |   |   |   |   |   |
| 50 |     |     |    |   |   |   |   |   |   |   |
| 60 |     |     |    |   |   |   |   |   |   |   |
| 70 |     |     |    |   |   |   |   |   |   |   |

☐ Put cyclic

PutMessage

Figure 71: Message Monitor LSS/LMT (2) &gt; Set Node Address

## 3. Set Baud Rate

| Message for Sending via CAN (Layer 2) |                             |   |
|---------------------------------------|-----------------------------|---|
| Message Header                        |                             |   |
| Rx = 3 (fixed)                        | Tx = 255                    |   |
| Ln = (is calculated)                  | Nr = 0...255                |   |
| A = 0                                 | F = 0                       |   |
| B = 84                                | E = 0                       |   |
| Send Data                             | Meaning for CAN             | Range of value  |
|                                       | CAN Receive ID Part 1 (LSB) | 252   |
|                                       | CAN Receive ID Part 2 (MSB) | 163   |
|                                       | Send data 1: Set Baud Rate  | 19  |
|                                       | Send data 2: Table          | 0 (Standard Table)<br>128...255   |
|                                       | Send data 3: Baud Rate      | In case of table 0:<br>0 = 1 Mbit/s<br>1 = 800 kbit/s<br>2 = 500 kbit/s<br>3 = 250 kbit/s<br>4 = 125 kbit/s<br>5 = 50 kbit/s<br>6 = 20 kbit/s |

Table 42: Message Monitor LSS/LMT (3) &gt; Set Baud Rate

**Message Monitor**

File Edit View

**MESSAGE OUTPUT** Counter 1

Message Header

|    |    |    |   |
|----|----|----|---|
| RX | 16 | TX | 3 |
| LN | 5  | NR | 0 |
| A  | 0  | F  | 0 |
| B  | 83 | E  | 0 |

Telegram Header

|             |                                 |
|-------------|---------------------------------|
| Device Adr. | Data Area                       |
| Data Adr.   | Data Idx.                       |
| Data Count  | Data Type                       |
| Function    | <input type="checkbox"/> enable |

Receive data

|    | 0   | 1   | 2  | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|----|-----|-----|----|---|---|---|---|---|---|---|
| 0  | 252 | 131 | 19 | 0 | 0 |   |   |   |   |   |
| 10 |     |     |    |   |   |   |   |   |   |   |
| 20 |     |     |    |   |   |   |   |   |   |   |
| 30 |     |     |    |   |   |   |   |   |   |   |
| 40 |     |     |    |   |   |   |   |   |   |   |
| 50 |     |     |    |   |   |   |   |   |   |   |
| 60 |     |     |    |   |   |   |   |   |   |   |
| 70 |     |     |    |   |   |   |   |   |   |   |

**MESSAGE INPUT** Counter 3

Message Header

|    |    |                                  |      |
|----|----|----------------------------------|------|
| RX | 3  | TX                               | 255  |
| LN | 5  | Auto NR <input type="checkbox"/> | NR 0 |
| A  | 0  | F                                | 0    |
| B  | 84 | E                                | 0    |

Telegram Header

|             |                                 |
|-------------|---------------------------------|
| Device Adr. | Data Area                       |
| Data Adr.   | Data Idx.                       |
| Data Count  | Data Type                       |
| Function    | <input type="checkbox"/> enable |

Send data

|    | 0   | 1   | 2  | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|----|-----|-----|----|---|---|---|---|---|---|---|
| 0  | 252 | 162 | 19 | 0 | 2 |   |   |   |   |   |
| 10 |     |     |    |   |   |   |   |   |   |   |
| 20 |     |     |    |   |   |   |   |   |   |   |
| 30 |     |     |    |   |   |   |   |   |   |   |
| 40 |     |     |    |   |   |   |   |   |   |   |
| 50 |     |     |    |   |   |   |   |   |   |   |
| 60 |     |     |    |   |   |   |   |   |   |   |
| 70 |     |     |    |   |   |   |   |   |   |   |

☐ Put cyclic PutMessage

Figure 72: Message Monitor LSS/LMT (3) &gt; Set Baud Rate

## 4. Save Configuration

| Message for Sending via CAN (Layer 2) |                                 |                |
|---------------------------------------|---------------------------------|----------------|
| Message Header                        |                                 |                |
| Rx = 3 (fixed)                        | Tx = 255                        |                |
| Ln = (is calculated)                  | Nr = 0...255                    |                |
| A = 0                                 | F = 0                           |                |
| B = 84                                | E = 0                           |                |
| Send Data                             | Meaning for CAN                 | Range of value |
|                                       | CAN Send ID Part 1              | 252            |
|                                       | CAN Send ID Part 2              | 161            |
|                                       | Send data 1: Save Configuration | 23             |

Table 43: Message Monitor LSS/LMT (4) &gt; Save Configuration

**Message Monitor**

File Edit View

**MESSAGE OUTPUT** Counter 1

Message Header

|    |    |    |   |
|----|----|----|---|
| RX | 16 | TX | 3 |
| LN | 3  | NR | 0 |
| A  | 0  | F  | 0 |
| B  | 83 | E  | 0 |

Telegram Header

|             |                                 |
|-------------|---------------------------------|
| Device Adr. | Data Area                       |
| Data Adr.   | Data Idx.                       |
| Data Count  | Data Type                       |
| Function    | <input type="checkbox"/> enable |

Receive data

|    | 0   | 1   | 2  | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|----|-----|-----|----|---|---|---|---|---|---|---|
| 0  | 252 | 129 | 23 |   |   |   |   |   |   |   |
| 10 |     |     |    |   |   |   |   |   |   |   |
| 20 |     |     |    |   |   |   |   |   |   |   |
| 30 |     |     |    |   |   |   |   |   |   |   |
| 40 |     |     |    |   |   |   |   |   |   |   |
| 50 |     |     |    |   |   |   |   |   |   |   |
| 60 |     |     |    |   |   |   |   |   |   |   |
| 70 |     |     |    |   |   |   |   |   |   |   |

**MESSAGE INPUT** Counter 4

Message Header

|    |    |                                  |      |
|----|----|----------------------------------|------|
| RX | 3  | TX                               | 255  |
| LN | 3  | Auto NR <input type="checkbox"/> | NR 0 |
| A  | 0  | F                                | 0    |
| B  | 84 | E                                | 0    |

Telegram Header

|             |                                 |
|-------------|---------------------------------|
| Device Adr. | Data Area                       |
| Data Adr.   | Data Idx.                       |
| Data Count  | Data Type                       |
| Function    | <input type="checkbox"/> enable |

Send data

|    | 0   | 1   | 2  | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|----|-----|-----|----|---|---|---|---|---|---|---|
| 0  | 252 | 161 | 23 |   |   |   |   |   |   |   |
| 10 |     |     |    |   |   |   |   |   |   |   |
| 20 |     |     |    |   |   |   |   |   |   |   |
| 30 |     |     |    |   |   |   |   |   |   |   |
| 40 |     |     |    |   |   |   |   |   |   |   |
| 50 |     |     |    |   |   |   |   |   |   |   |
| 60 |     |     |    |   |   |   |   |   |   |   |
| 70 |     |     |    |   |   |   |   |   |   |   |

☐ Put cyclic PutMessage

OK

Figure 73: Message Monitor LSS/LMT (4) &gt; Save Configuration

## 5. Switch in Operating Mode

| Message for Sending via CAN (Layer 2) |                                 |                |
|---------------------------------------|---------------------------------|----------------|
| Message Header                        |                                 |                |
| Rx = 3 (fixed)                        | Tx = 255                        |                |
| Ln = (is calculated)                  | Nr = 0...255                    |                |
| A = 0                                 | F = 0                           |                |
| B = 84                                | E = 0                           |                |
| Send Data                             | Meaning for CAN                 | Range of value |
|                                       | CAN Send ID Part 1              | 252            |
|                                       | CAN Send ID Part 2              | 161            |
|                                       | Send data 1: Save Configuration | 23             |

Table 44: Message Monitor LSS/LMT (5) &gt; Switch in Operating Mode

**Message Monitor**

File Edit View

**MESSAGE OUTPUT** Counter 1

Message Header

|    |    |    |   |
|----|----|----|---|
| RX | 16 | TX | 3 |
| LN | 3  | NR | 0 |
| A  | 0  | F  | 0 |
| B  | 83 | E  | 0 |

Telegram Header

|             |                                 |
|-------------|---------------------------------|
| Device Adr. | Data Area                       |
| Data Adr.   | Data Idx.                       |
| Data Count  | Data Type                       |
| Function    | <input type="checkbox"/> enable |

Receive data

|    | 0   | 1   | 2  | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|----|-----|-----|----|---|---|---|---|---|---|---|
| 0  | 252 | 129 | 23 |   |   |   |   |   |   |   |
| 10 |     |     |    |   |   |   |   |   |   |   |
| 20 |     |     |    |   |   |   |   |   |   |   |
| 30 |     |     |    |   |   |   |   |   |   |   |
| 40 |     |     |    |   |   |   |   |   |   |   |
| 50 |     |     |    |   |   |   |   |   |   |   |
| 60 |     |     |    |   |   |   |   |   |   |   |
| 70 |     |     |    |   |   |   |   |   |   |   |

**MESSAGE INPUT** Counter 5

Message Header

|    |    |                                  |      |
|----|----|----------------------------------|------|
| RX | 3  | TX                               | 255  |
| LN | 4  | Auto NR <input type="checkbox"/> | NR 0 |
| A  | 0  | F                                | 0    |
| B  | 84 | E                                | 0    |

Telegram Header

|             |                                 |
|-------------|---------------------------------|
| Device Adr. | Data Area                       |
| Data Adr.   | Data Idx.                       |
| Data Count  | Data Type                       |
| Function    | <input type="checkbox"/> enable |

Send data

|    | 0   | 1   | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|----|-----|-----|---|---|---|---|---|---|---|---|
| 0  | 252 | 162 | 4 | 0 |   |   |   |   |   |   |
| 10 |     |     |   |   |   |   |   |   |   |   |
| 20 |     |     |   |   |   |   |   |   |   |   |
| 30 |     |     |   |   |   |   |   |   |   |   |
| 40 |     |     |   |   |   |   |   |   |   |   |
| 50 |     |     |   |   |   |   |   |   |   |   |
| 60 |     |     |   |   |   |   |   |   |   |   |
| 70 |     |     |   |   |   |   |   |   |   |   |

☐ Put cyclic PutMessage

Figure 74: Message Monitor LSS/LMT (5) &gt; Switch in Operating Mode

## 6.6.2 Message Monitor for Sending or Receiving Transparent CAN Telegrams

Sending and receiving of CAN telegrams (Layer 2) is possible on basis of Messages.

### 6.6.2.1 Message Monitor for Sending CAN Telegrams (transparent)

In the following the Message Monitor for sending CAN telegrams to the Hilscher Master and/or Hilscher Node is described.

For sending you have to type in the following in the Message Monitor:

| Message for Sending via CAN (Layer 2) |                           |                |
|---------------------------------------|---------------------------|----------------|
| Message Header                        |                           |                |
| Rx = 3 (fixed)                        | Tx = 255                  |                |
| Ln = (is calculated)                  | Nr = 0...255              |                |
| A = 0                                 | F = 0                     |                |
| B = 84                                | E = 0                     |                |
| Send Data                             | Meaning for CAN           | Range of value |
|                                       | CAN Send ID Part 1        | 0...255        |
|                                       | CAN Send ID Part 2        | 0...255        |
|                                       | Send data 1, if available | 0...255        |
|                                       | Send data 2, if available | 0...255        |
|                                       | Send data 3, if available | 0...255        |
|                                       | Send data 4, if available | 0...255        |
|                                       | Send data 5, if available | 0...255        |
|                                       | Send data 6, if available | 0...255        |
|                                       | Send data 7, if available | 0...255        |
|                                       | Send data 8, if available | 0...255        |

Table 45: Message Monitor for Sending CAN Telegrams (transparent)

**Note:** If the Hilscher device is used simultaneously as CANopen device, then Identifier are already used. The user is responsible that it comes to no conflicts here.

The CAN Send ID consists of two Bytes and is formed as follows:

The CAN ID (in range of value 0 to 2047) is multiplied with 32 and the data length (in range of value 0 to 8) is added up. CAN Send ID Part 1 is then the byte with high order and CAN Send ID Part 2 then is the byte of low order.

Example: If the CAN telegram with CAN ID 2000 with 8 byte user data should be sent, the following results:  $2000 \times 32 + 8 = 64008$  and/or FA08H. Then the CAN Send IP Part 1 is 250 and/or FAH and CAN Send IP Part 2 is 8 and/or 08H.

The following picture shows the Sending of the CAN ID 2000 with 8 bytes user data. The user data here are 1, 2, 3, 4, 5, 6, 7 and 8.

**Message Monitor - [CANSEND.MSG]**

File Edit View

**MESSAGE OUTPUT** Counter 0

Message Header

|    |   |    |   |
|----|---|----|---|
| RX | 0 | TX | 0 |
| LN | 0 | NR | 0 |
| A  | 0 | F  | 0 |
| B  | 0 | E  | 0 |

Telegram Header

|             |                                 |
|-------------|---------------------------------|
| Device Adr. | Data Area                       |
| Data Adr.   | Data Idx.                       |
| Data Count  | Data Type                       |
| Function    | <input type="checkbox"/> enable |

Receive data

|    | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|----|---|---|---|---|---|---|---|---|---|---|
| 0  |   |   |   |   |   |   |   |   |   |   |
| 10 |   |   |   |   |   |   |   |   |   |   |
| 20 |   |   |   |   |   |   |   |   |   |   |
| 30 |   |   |   |   |   |   |   |   |   |   |
| 40 |   |   |   |   |   |   |   |   |   |   |
| 50 |   |   |   |   |   |   |   |   |   |   |
| 60 |   |   |   |   |   |   |   |   |   |   |
| 70 |   |   |   |   |   |   |   |   |   |   |

**MESSAGE INPUT** Counter 1

Message Header

|    |    |                                  |      |
|----|----|----------------------------------|------|
| RX | 3  | TX                               | 255  |
| LN | 10 | Auto NR <input type="checkbox"/> | NR 0 |
| A  | 0  | F                                | 0    |
| B  | 84 | E                                | 0    |

Telegram Header

|             |                                 |
|-------------|---------------------------------|
| Device Adr. | Data Area                       |
| Data Adr.   | Data Idx.                       |
| Data Count  | Data Type                       |
| Function    | <input type="checkbox"/> enable |

Send data

|    | 0   | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|----|-----|---|---|---|---|---|---|---|---|---|
| 0  | 250 | 8 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 |
| 10 |     |   |   |   |   |   |   |   |   |   |
| 20 |     |   |   |   |   |   |   |   |   |   |
| 30 |     |   |   |   |   |   |   |   |   |   |
| 40 |     |   |   |   |   |   |   |   |   |   |
| 50 |     |   |   |   |   |   |   |   |   |   |
| 60 |     |   |   |   |   |   |   |   |   |   |
| 70 |     |   |   |   |   |   |   |   |   |   |

☐ Put cyclic

PutMessage

Figure 75: Message Monitor for Sending CAN telegrams (transparent)

**Note:** The sending of the telegram is not confirmed and the error number 2025 appears.

### 6.6.2.2 Message Monitor for Receiving CAN Telegrams (transparent)

For the receiving of CAN telegrams it has to be informed, which CAN Identifier are permissible for receiving. For this the receive filter is set, to inform, which CAN identifier are passed through.

In the following the Message Monitor for setting the receive filter at the Hilscher Master and/or Hilscher Node is described.

For setting a receive filter you have to type in the following in the Message Monitor:

| Message for Setting the Receive Filter CAN (Layer 2) |                       |                |
|--|-----------------------|----------------|
| Message Header                                       |                       |                |
| Rx = 3 (fixed)                                       | Tx = 255              |                |
| Ln = (is calculated)                                 | Nr = 0...255          |                |
| A = 0  | F = 0                 |                |
| B = 82   | E = 0                 |                |
| Send Data  | Meaning for CAN       | Range of value |
|  | CAN Receive ID Part 1 | 0...255        |
|  | CAN Receive ID Part 2 | 0...7          |

Table 46: Message Monitor for Setting the Receive Filter

The CAN Receive ID consists of two bytes and is formed as follows:

The CAN ID (in range of value 0 to 2047) is segmented in a low order byte and a high order byte. Then the CAN Receive IP Part 1 is the low order byte and the CAN Receive ID Part 2 the high order byte.

Example: If the CAN telegram with CAN ID 2000 should be received, it results this: 2000 and/or 07D0H. Then CAN Receive ID Part 1 is equal to 208 and/or D0H and CAN Receive ID Part 2 is then 7 and/or 07H.

The following picture shows the setting of the receive filter for CAN ID 2000.

**Message Monitor** [X]

File Edit View

**MESSAGE OUTPUT** Counter 1

Message Header

|    |     |    |   |
|----|-----|----|---|
| RX | 255 | TX | 3 |
| LN | 0   | NR | 0 |
| A  | 82  | F  | 0 |
| B  | 0   | E  | 0 |

Telegram Header

|             |                                 |
|-------------|---------------------------------|
| Device Adr. | Data Area                       |
| Data Adr.   | Data Idx.                       |
| Data Count  | Data Type                       |
| Function    | <input type="checkbox"/> enable |

Receive data

|    | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|----|---|---|---|---|---|---|---|---|---|---|
| 0  |   |   |   |   |   |   |   |   |   |   |
| 10 |   |   |   |   |   |   |   |   |   |   |
| 20 |   |   |   |   |   |   |   |   |   |   |
| 30 |   |   |   |   |   |   |   |   |   |   |
| 40 |   |   |   |   |   |   |   |   |   |   |
| 50 |   |   |   |   |   |   |   |   |   |   |
| 60 |   |   |   |   |   |   |   |   |   |   |
| 70 |   |   |   |   |   |   |   |   |   |   |

**MESSAGE INPUT** Counter 1

Message Header

|    |    |                                  |      |
|----|----|----------------------------------|------|
| RX | 3  | TX                               | 255  |
| LN | 2  | Auto NR <input type="checkbox"/> | NR 0 |
| A  | 0  | F                                | 0    |
| B  | 82 | E                                | 0    |

Telegram Header

|             |                                 |
|-------------|---------------------------------|
| Device Adr. | Data Area                       |
| Data Adr.   | Data Idx.                       |
| Data Count  | Data Type                       |
| Function    | <input type="checkbox"/> enable |

Send data

|    | 0   | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|----|-----|---|---|---|---|---|---|---|---|---|
| 0  | 208 | 7 |   |   |   |   |   |   |   |   |
| 10 |     |   |   |   |   |   |   |   |   |   |
| 20 |     |   |   |   |   |   |   |   |   |   |
| 30 |     |   |   |   |   |   |   |   |   |   |
| 40 |     |   |   |   |   |   |   |   |   |   |
| 50 |     |   |   |   |   |   |   |   |   |   |
| 60 |     |   |   |   |   |   |   |   |   |   |
| 70 |     |   |   |   |   |   |   |   |   |   |

☐ Put cyclic PutMessage

OK

Figure 76: Message Monitor for Setting the Receive Filter

In the following the Message Monitor with the Receive of CAN telegrams at the Hilscher Master and/or Hilscher Node is described .

With the receiving the following appears in the Message Monitor:

| Message for Setting the Receive Filter CAN (Layer 2) |                              |                |
|--|------------------------------|----------------|
| Message Header                                       |                              |                |
| Rx = 16 (fixed)                                      | Tx = 3                       |                |
| Ln = (is calculated)                                 | Nr = 0...255                 |                |
| A = 0  | F = 0                        |                |
| B = 83   | E = 0                        |                |
| Send Data  | Meaning for CAN              | Range of value |
|  | CAN Receive ID Part 1        | 0...255        |
|  | CAN Receive ID Part 2        | 0...255        |
|  | Receive data 1, if available | 0...255        |
|  | Receive data 2, if available | 0...255        |
|  | Receive data 3, if available | 0...255        |
|  | Receive data 4, if available | 0...255        |
|  | Receive data 5, if available | 0...255        |
|  | Receive data 6, if available | 0...255        |
|  | Receive data 7, if available | 0...255        |
|  | Receive data 8, if available | 0...255        |

Table 47: Message Monitor for Receiving of CAN telegrams (transparent)

**Note:** This is only possible via the dual-port memory (CIF Device Driver). It is not possible via a serial connection (CIF Serial Driver).

The CAN Receive ID consists of two bytes and contains the CAN telegram ID and the data length. It is evaluated like follows:

CAN Receive ID Part 1 is the byte with high order of receipt ID part of 2 is the low order byte.

The result is (CAN Receive ID part 1) \* 256 + (CAN Receive ID part 2). This result divided by 32 is the CAN telegram identifier.

The length is included in the 4 below bits of the CAN Receive ID part 2.

Example: CAN Receive ID part 1 is received with 250 respectively FAH and CAN Receive ID part 2 is received with 8 respectively with 08H. Then results:  $250 * 256 + 8 = 64008$ .  $64008 / 32 = 2000,25$ . Hence the telegram identifier is 2000.

The CAN Receive ID part 2 is 8 respectively 08H. With this the 4 bellower bit have the value 8. The CAN Receive Telegram includes 8 byte user data.

The following figure shows the receiving of the CNA ID 2000 with 8 bytes user data. The user data here are 1, 2, 3, 4, 5, 6, 7 and 8.

**Message Monitor**

File Edit View

**MESSAGE OUTPUT** Counter 1

Message Header

|    |    |    |   |
|----|----|----|---|
| RX | 16 | TX | 3 |
| LN | 3  | NR | 3 |
| A  | 0  | F  | 0 |
| B  | 83 | E  | 0 |

Telegram Header

|             |                                 |
|-------------|---------------------------------|
| Device Adr. | Data Area                       |
| Data Adr.   | Data Idx.                       |
| Data Count  | Data Type                       |
| Function    | <input type="checkbox"/> enable |

Receive data

|    | 0   | 1   | 2  | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|----|-----|-----|----|---|---|---|---|---|---|---|
| 0  | 252 | 129 | 23 |   |   |   |   |   |   |   |
| 10 |     |     |    |   |   |   |   |   |   |   |
| 20 |     |     |    |   |   |   |   |   |   |   |
| 30 |     |     |    |   |   |   |   |   |   |   |
| 40 |     |     |    |   |   |   |   |   |   |   |
| 50 |     |     |    |   |   |   |   |   |   |   |
| 60 |     |     |    |   |   |   |   |   |   |   |
| 70 |     |     |    |   |   |   |   |   |   |   |

**MESSAGE INPUT** Counter 1

Message Header

|    |    |                                  |      |
|----|----|----------------------------------|------|
| RX | 3  | TX                               | 255  |
| LN |    | Auto NR <input type="checkbox"/> | NR 0 |
| A  | 0  | F                                | 0    |
| B  | 84 | E                                | 0    |

Telegram Header

|             |                                 |
|-------------|---------------------------------|
| Device Adr. | Data Area                       |
| Data Adr.   | Data Idx.                       |
| Data Count  | Data Type                       |
| Function    | <input type="checkbox"/> enable |

Send data

|    | 0   | 1   | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |
|----|-----|-----|---|---|---|---|---|---|---|---|
| 0  | 252 | 162 | 4 | 0 |   |   |   |   |   |   |
| 10 |     |     |   |   |   |   |   |   |   |   |
| 20 |     |     |   |   |   |   |   |   |   |   |
| 30 |     |     |   |   |   |   |   |   |   |   |
| 40 |     |     |   |   |   |   |   |   |   |   |
| 50 |     |     |   |   |   |   |   |   |   |   |
| 60 |     |     |   |   |   |   |   |   |   |   |
| 70 |     |     |   |   |   |   |   |   |   |   |

☐ Put cyclic PutMessage

Figure 77: Message Monitor for Receiving CAN Telegrams (transparent)

## 7 File, Print, Edit, Export and View

### 7.1 File

#### 7.1.1 Open

An existing project can be opened with **File > open**.

#### 7.1.2 Save and Save As

When the file name is known, the configuration can be saved under the **File > Save** menu, otherwise the **File > Save As** menu must be selected.

#### 7.1.3 Close

The current project can be closed with **File > Close**.

## 7.2 Print

After the current printer has been selected in the **File > Printer Setup** menu, the configuration can be printed out under the **File > Print** menu. For a page view, select the **File > Page View** menu.

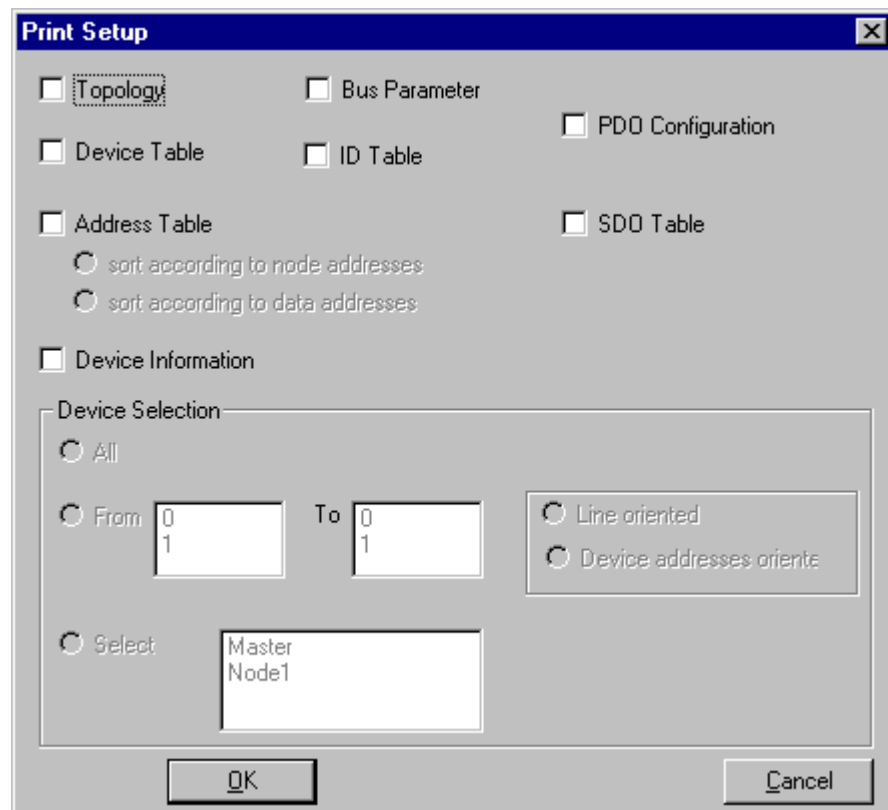


Figure 78: File > Print

The base setting prints information on one sheet only for one device.

**Topology** prints the topology of the Bus system.

**Bus parameters** prints the Bus Parameters of the Bus system.

**Address table** prints the address table of the Master.

**Device table** prints the device table.

**ID Table** prints the ID Table.

**PDO Configuration** prints the **PDO Configuration**.

**SDO Table** prints the **SDO Table**.

The scope can be given with the **Device Selection** menu point. The following can be chosen:

- All
- From Station address to Station address
- Selection of a device by means of its description

If no option is selected and the **OK** button is pressed nothing will be printed out. It is like clicking the **Cancel** button.

## 7.3 Export Functions

### 7.3.1 DBM Export

Select the **File > Export > DBM menu** in order to save the previously saved project file (\*.CO Microsoft Access Format) in a DBM file (Hilscher binary format). This DBM file can be retrieved in the DOS Compro program. The configuration is stored in the Project directory in the path of the SyCon Installation with the extension \*.dpm.

---

**Attention:** The file name can have max. 8 characters.

---

### 7.3.2 CSV Export

With the menu **File > Export > CSV** the configuration data of the connected Slaves can be exported into a table.

Requirement is, that the configuration was saved before the export is executed. The exported file has the ending .csv (comma separated value) and is taken off in the same directory as the configuration, but with the ending \*.csv.

The CSV file can be read with a table program like for example Excel.

The CSV Export saves only the text and the values of the configured Slaves. The meaning of the individual values can be shown in the table.

Here is the description of the parameters:

| Parameter              | Meaning   |
|------------------------|---|
| <b>Stationaddress</b>  | The Station address is the unique device address of the Slave on the bus.   |
| <b>RecordType</b>      | The RecordType defines the version of the following structure and is always 2.  |
| <b>IdentNumber</b>     | This number is the unique device number of the Slave.   |
| <b>VendorNumber</b>    | The VendorNumber is the clear number of the vendor (if available).  |
| <b>VendorName</b>      | Here the name of the vendor is shown (max. 32 characters).  |
| <b>Device</b>          | Name of the device (max. 32 characters).  |
| <b>Description</b>     | This is the description of the device, which is set by the user (max. 32 characters).   |
| <b>MasterAddress</b>   | This is the number of the Master Address, where the devices are related to.   |
| <b>Settings</b>        | Contains information about the addressing mode and the storage format of the process data (words, double words and floats) see section <i>Description of the Parameter Settings</i> .   |
| <b>Reserved</b>        | reserved  |
| <b>ModulCount</b>      | Number of the modules of the device. For each module the parameters data type, data size, data position and offset address are given. It can be follow max 60 modules. The parameters for module 1 are marked with ..._0 and of the module 60 are marked with ..._59. |
| <b>DataSet_0</b>       | Number of bytes, which were used by the module.   |
| <b>DataType_0</b>      | The DataType, which is used in the configuration. The code for this you find below this table in section <i>Description of the Parameter DataType</i> .   |
| <b>DataPosition_0</b>  | The byte DataPosition, which is used in the configuration. The code for this you find below this table in section <i>Description of the Parameter DataPosition</i> .  |
| <b>Address_0</b>       | Offset Address in the Dual-port memory  |
| ...                    | ...   |
| <b>DataSet_59</b>      | if used, see at the top   |
| <b>DataType_59</b>     | if used, see at the top   |
| <b>DataPosition_59</b> | if used, see at the top   |
| <b>Address_59</b>      | if used, see at the top   |

Table 48: CSV Export - Meaning of the values

### 7.3.2.1 Description of the Parameter Settings

| D7            | D6 | D5 | D4 | D3 | D2 | D1     | D0                        |
|---------------|----|----|----|----|----|--------|---------------------------|
| Reserved Area |    |    |    |    |    | Format | Address Mode              |
| reserved      |    |    |    |    |    |        | 0 byte Address            |
|               |    |    |    |    |    |        | 1 word Address            |
|               |    |    |    |    |    |        | 1 little Endian (LSB/MSB) |
|               |    |    |    |    |    |        | 0 big Endian (MSB/LSB)    |

Table 49: CSV-Export - Description of the Byte Settings

### 7.3.2.2 Description of the Parameter DataType

| D7                  | D6             | D5                    | D4 | D3          | D2 | D1 | D0 |
|---------------------|----------------|-----------------------|----|-------------|----|----|----|
| SubFlag             | Data Direction |                       |    | Data Format |    |    |    |
|                     |                | according EN standard |    |             |    |    |    |
|                     |                | 0 blank space         |    |             |    |    |    |
|                     |                | 1 Boolean             |    |             |    |    |    |
|                     |                | 2 Integer 8           |    |             |    |    |    |
|                     |                | 3 Integer 16          |    |             |    |    |    |
|                     |                | 4 Integer 32          |    |             |    |    |    |
|                     |                | 5 Unsigned Integer 8  |    |             |    |    |    |
|                     |                | 6 Unsigned Integer 16 |    |             |    |    |    |
|                     |                | 7 Unsigned Integer 32 |    |             |    |    |    |
|                     |                | 8 Float               |    |             |    |    |    |
|                     |                | 9 ASCII               |    |             |    |    |    |
|                     |                | 10 String             |    |             |    |    |    |
|                     |                | 14 Bit                |    |             |    |    |    |
| 0 empty space       |                |                       |    |             |    |    |    |
| 1 input             |                |                       |    |             |    |    |    |
| 2 output            |                |                       |    |             |    |    |    |
| 0 start of a module |                |                       |    |             |    |    |    |
| 1 sub module        |                |                       |    |             |    |    |    |

Table 50: CSV Export > DataType Code

### 7.3.2.3 Description of the Parameter DataPosition

| D7            | D6 | D5 | D4 | D3                                 | D2 | D1 | D0 |
|---------------|----|----|----|------------------------------------|----|----|----|
| Reserved Area |    |    |    | Bit Position                       |    |    |    |
| reserved      |    |    |    | Bit Position of the Offset Address |    |    |    |

Table 51: CSV Export > DataPosition Code

### 7.3.2.4 Example of a CSV file

Example of a CSV file which was exported in Excel:

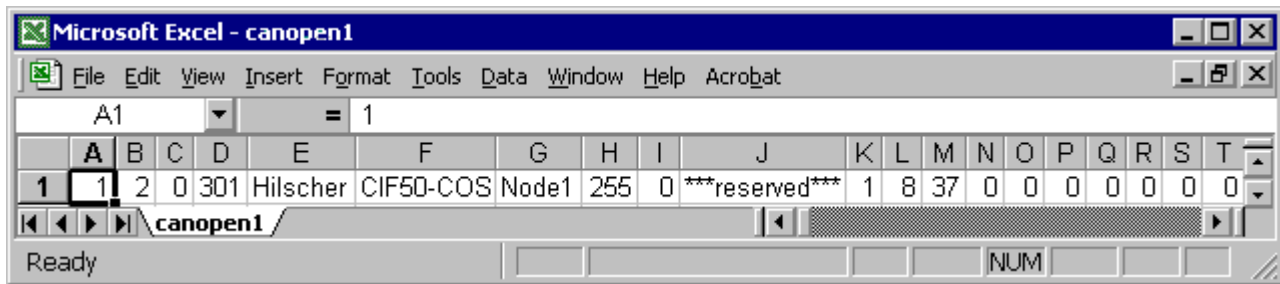


Figure 79: Example of a CSV File in Excel

| Cell     | Parameter      | Value      | Meaning   |
|----------|----------------|------------|---|
| A1       | StationAddress | 1          | Station address of the CANopen Node.  |
| B1       | RecordType     | 2          | The RecordType is always 2.   |
| C1       | IdentNumber    | 0          | IdentNumber of the Node.  |
| D1       | VendorNumber   | 301        | The vendor number is 301.   |
| E1       | VendorName     | Hilscher   | Vendor name of the device.  |
| F1       | Device         | CIF 50-COS | Description of the device.  |
| G1       | Description    | Node1      | Description of the device which is also shown in SyCon as the name of the device.   |
| H1       | MasterAddress  | 255        | Address of the related Master.  |
| I1       | Settings       | 0          | The addressing mode (byte- or word addressing) and the data format of the process data are shown. The description you see in section <i>Description of the Parameter Settings</i> .   |
| J1       | reserved       | reserved   | reserved  |
| K1       | ModulCount     | 1          | Number of the modules of the device. For each module the information with datatype, data size, data position and the offset address follow. The information for module 1 you find in the cells L1, M1, N1, O1 and for module 2 in the cells P1, Q1, R1, S1 and so on. |
| L1       | DataSize       | 8          | The size of the module is 8 bytes.  |
| M1       | DataType       | 37         | Input; Datatype unsigned Integer 8  |
| N1       | DataPosition   | 0          | Output; Datatype unsigned Integer 8   |
| O1       | Offset address | 0          | The Offset address is 0.  |
| P1...IQ1 | DataSize       | 0          | The modules 2 till 59 are not used for this device and so a 0 is shown.   |

Table 52: Example of a CSV File in Excel

If two or more Slave devices are connected to the Master, these are displayed in the next lines of the table.

## 7.4 Edit

### 7.4.1 Cut, Copy and Paste

With the menus **Edit > Cut** and **Edit > Copy** you put the cut/copied device with its settings and configuration (only not the description of the device) in the Clipboard and with **Edit > Paste** it can be insert.

The difference between **Cut** and **Copy** is:

With the menu option **Edit > Cut** you move a device from one point in the configuration to another. With the menu option **Edit > Copy** you duplicate an existing device.

If you select **Edit > Cut** a security question appears.

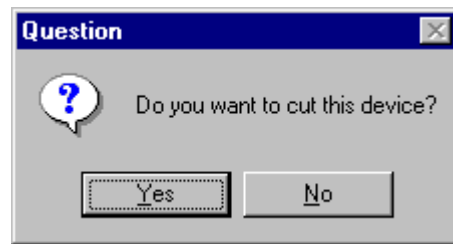


Figure 80: Security question cut device

If you answer this question with **Yes** the device is cut and stays in the clipboard.

With the menu **Edit > Insert** and clicking at the position where the device should be insert, a window opens where the cut/copied device can be selected.

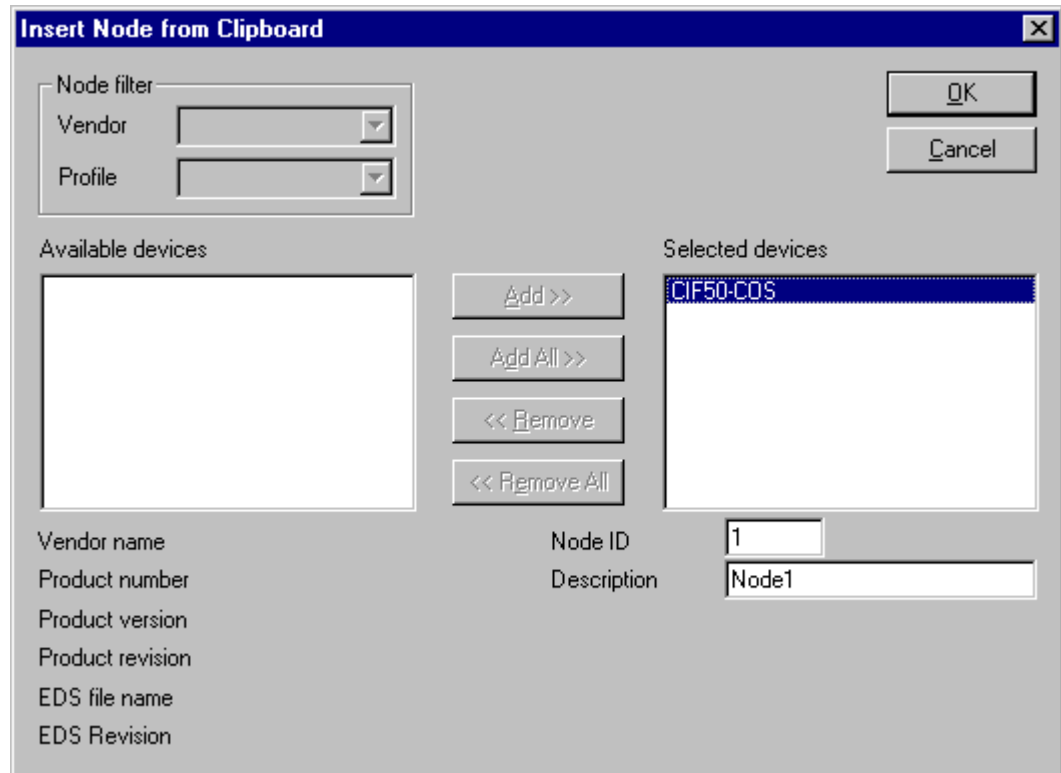


Figure 81: Edit > Insert cut/copied device

When you click on the **OK** button the device will be insert in the configuration.

## 7.4.2 Delete

To delete the Master or a Slave device you have to have to mark this device and then select the menu **Edit > Delete**. Before SyCon deletes the Master or a Slave a security question appears.

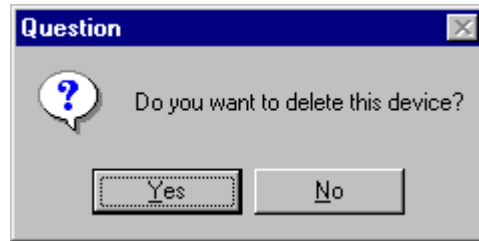


Figure 82: Security question delete device

---

**Note:** When you delete a device the settings and the configuration of this device get lost.

---

## 7.4.3 Replace

With the menu **Edit > Replace** the Master or a Slave device can be replaced. How to replace the Master look in section *Replace Master* at page 37. If you want to replace a Slave device look in section *Replace Node* at page 62.





## 7.5.4 SDO Table

With the menu item **View > SDO Table** you get an overview of the transmitted objects during the Node BootUp phase for each Node. Apart from the Node Address for each entry the Object- and Sub index is displayed with the pertinent value. Thereby if a line contains a cross in the column PDO Dialog, then the entry was created automatically when inserting a PDOs by SyCon and can be changed in section *Node Configuration* (see at page 40). If an entry does not contain a cross in the column PDO Dialog, then the appropriate object is manually created in the *Object Configuration* (see at page 60) and can be changed there. Exceptions here form the entries COB-ID SYNC and Communication Cycle Period, which can be changed in the dialog *Bus Parameter* (see at page 73). It is possible to hid or to display the configured objects of the PDO Dialog. The representation method of the object values can be selected between decimal and hexadecimal.

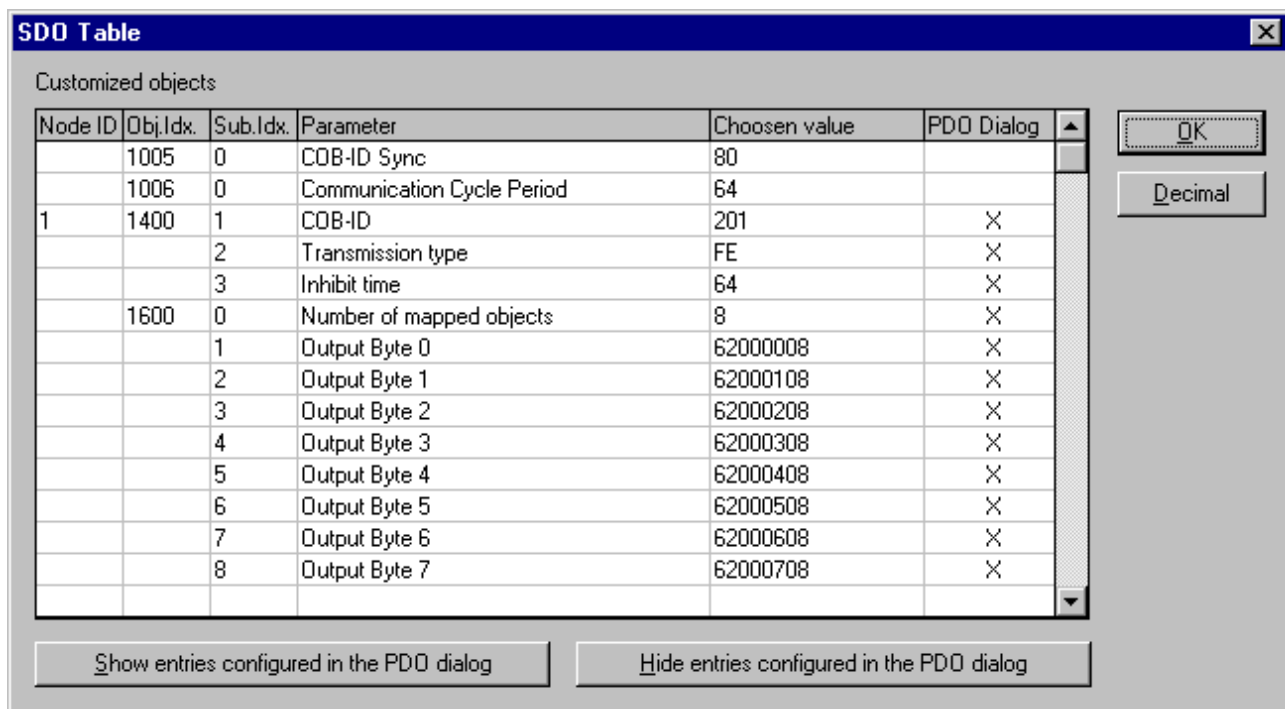


Figure 86: View > SDO Table

## 7.6 View Menu SyCon

### 7.6.1 Logical Network View

In the menu **View > Logical Network View** the user can activate or deactivate the network view by selecting it (with hook) or by not selecting it (without hook).

The network view is used for example for the Start Options.

### 7.6.2 Toolbars

In the menu **View > Toolbars** the user has the possibility to activate or deactivate the Toolbars **Standard** and **Fieldbus**. If this function is deactivated the toolbars are not shown.

### 7.6.3 Status Bar

In the menu **View > Status Bar** this bar can be activated (with hook) or deactivated (without hook).



## 8 Tools

### 8.1 PKV40 / PKV50 Gateway

The **Tools** menu for the PKV40 and respectively PKV50 is described in an own operating manual.



## 9 Error Numbers

### 9.1 CIF Device Driver (Dual-port memory) Error Numbers (-1 .. -49)

This is the list of error numbers of dual-port memory access using the CIF Device Driver.

| Error Number | Description   |
|--------------|---|
| -1           | Driver: Board not initialized<br>The communication board is not initialized by the driver.<br>No or wrong configuration found for the given board, check the driver configuration.<br>Driver function used without calling DevOpenDriver() first.   |
| -2           | Driver: Error in internal 'Init state'  |
| -3           | Driver: Error in internal 'Read state'  |
| -4           | Driver: Command on this channel is active   |
| -5           | Driver: Unknown parameter in function occurred  |
| -6           | Driver: Version is incompatible<br>The device driver version does not correspond to the driver DLL version. From version V1.200 the internal command structure between DLL and driver has changed. Make sure to use the same version of the device driver and the driver DLL.   |
| -10          | Device: Dual port memory RAM not accessible (board not found)<br>Dual-ported RAM (DPM) not accessible / no hardware found.<br>This error occurs, when the driver is not able to read or write to the Dual-port memory.<br>Check the BIOS setting of the PC Memory address conflict with other PC components.<br>Try another memory address, check the driver configuration for this board, check the jumper setting of the board. |
| -11          | Device: Not ready (RDY flag=Ready flag failed)<br>Board is not ready. This could be a hardware malfunction or another program writes inadmissible to the dual-port memory.  |
| -12          | Device: Not running (RUN flag=Running flag failed)<br>The board is ready but not all tasks are running, because of an initialization error. No data base is loaded into the device or a wrong parameter can causes that a task can't initialize.  |
| -13          | Device: Watch dog test failed   |
| -14          | Device: Signals wrong Operating System version<br>No license code found on the communication board. Device has no license for the used operating system or customer software. No firmware or no data base to the device is loaded.  |

Table 53: CIF Device Driver Error Numbers (-1..-14)

| Error Number | Description   |
|--------------|---|
| -15          | Device: Error in dual port memory flags   |
| -16          | Device: Send mailbox is full  |
| -17          | <p>Device: Function PutMessage timeout</p> <p>No message could be send during the timeout period given in the DevPutMessage() function.</p> <p>If you use an interrupt, check the interrupt on the device and in driver setup. These settings have to be the same! Is an interrupt on the board set? Is the right interrupt set? The interrupt could already be used by another PC component, also if the operating system reports it as unused.</p> <p>If you use polling mode, then make sure that no interrupt is set on the board and that polling is set in the driver setup. These settings have to be the same!</p> <p>Device internal segment buffer full and therefore PutMessage() function is not possible, because all segments on the device are in use. This error occurs, when only PutMessage() is used but not GetMessage().</p> <p>HOST flag is not set for the device. No messages are taken by the device. Use DevSetHostState() to signal a board an application is available.</p> |
| -18          | <p>Device: Function GetMessage timeout</p> <p>No message received during the timeout period given in the DevGetMessage() function.</p> <p>If you use an interrupt, then check the interrupt on the device and in driver setup. These settings have to be the same! Is an interrupt on the board set? Is the right interrupt set? The interrupt could already be used by another PC component, also if the operating system reports it as unused.</p> <p>If you use polling mode, then make sure that no interrupt is set on the board and that polling is set in the driver setup. These settings have to be the same!</p> <p>The used protocol on the device needs longer than the timeout period given in the DevGetMessage() function.</p>   |
| -19          | Device: No message available  |

Table 54: CIF Device Driver Error Numbers (-15..-19)

| Error Number | Description   |
|--------------|---|
| -20          | <p>Device: Reset command timeout</p> <p>The board is ready but not all tasks are running, because of an initialization error. No data base is loaded into the device or a wrong parameter can causes that a task can't initialize.</p> <p>The device needs longer than the timeout period given in the DevReset() function. Using device interrupts. The timeout period can differ between fieldbus protocols.</p> <p>If you use an interrupt, then check the interrupt on the device and in driver setup. These settings have to be the same! Is an interrupt on the board set? Is the right interrupt set? The interrupt could already be used by an other PC component, also if the operating system reports it as unused.</p> <p>If you use polling mode, then make sure that no interrupt is set on the board and that polling is set in the driver setup. These settings have to be the same!</p> |
| -21          | <p>Device: COM flag not set</p> <p>The device can not reach communication state. Device not connected to the fieldbus. No station found on the fieldbus. Wrong configuration on the device.</p>   |
| -22          | Device: IO data exchange failed   |
| -23          | <p>Device: IO data exchange timeout</p> <p>The device needs longer than the timeout period given in the DevExchangeIO() function.</p> <p>If you use an interrupt, then check the interrupt on the device and in driver setup. These settings have to be the same! Is an interrupt on the board set? Is the right interrupt set? The interrupt could already be used by another PC component, also if the operating system reports it as unused.</p> <p>If you use polling mode, then make sure that no interrupt is set on the board and that polling is set in the driver setup. These settings have to be the same!</p>   |
| -24          | Device: IO data mode unknown  |
| -25          | Device: Function call failed  |
| -26          | Device: Dual-port memory size differs from configuration  |
| -27          | Device: State mode unknown  |

Table 55: CIF Device Driver Error Numbers (-20..-27)

| Error Number | Description  |
|--------------|--|
| -30          | User: Driver not opened (device driver not loaded)<br>The device driver could not be opened. Device driver not installed. Wrong parameters in the driver configuration. If the driver finds invalid parameters for a communication board and no other boards with valid parameters are available, the driver will not be loaded. |
| -31          | User: Can't connect with device board  |
| -32          | User: Board not initialized (DevInitBoard not called)  |
| -33          | User: IOCTL function failed<br>A driver function could not be called. This is an internal error between the device driver and the DLL. Make sure to use a device driver and a DLL with the same version. An incompatible old driver DLL is used.   |
| -34          | User: Parameter DeviceNumber invalid   |
| -35          | User: Parameter InfoArea unknown   |
| -36          | User: Parameter Number invalid   |
| -37          | User: Parameter Mode invalid   |
| -38          | User: NULL pointer assignment  |
| -39          | User: Messagebuffer too short  |
| -40          | User: Size parameter invalid   |
| -42          | User: Size parameter with zero length  |
| -43          | User: Size parameter too long  |
| -44          | User: Device address null pointer  |
| -45          | User: Pointer to buffer is a null pointer  |
| -46          | User: SendSize parameter too long  |
| -47          | User: ReceiveSize parameter too long   |
| -48          | User: Pointer to send buffer is a null pointer   |
| -49          | User: Pointer to receive buffer is a null pointer  |

Table 56: CIF Device Driver Error Numbers (-30..-49)

| Error Number | Description   |
|--------------|---|
| 1000         | If the operating system of the device reports an initialization error, then a value of 1000 will be add to the error number and shown to the user |

Table 57: CIF Device Driver Error Numbers (1000)

## 9.2 CIF Serial Driver Error Numbers (-20 .. -71)

This is the list of error numbers using the serial driver.

| Error Number | Description   |
|--------------|---|
| -20          | Driver: No COM port found or COM port already in use. |
| -21          | Driver: COM port already opened                       |
| -22          | Driver: Function call into driver has failed          |
| -23          | Driver: Internal driver error                         |
| -24          | Driver: Could not create read thread                  |
| -25          | Driver: Could not create read event                   |
| -26          | Driver: Could not create write event                  |
| -27          | Driver: Could not create timer event                  |
| -28          | Driver: Error by writing data                         |
| -29          | Driver: Wrong COM state                               |
| -30          | Driver: COM state error is set                        |
| -31          | Driver: COM buffer setup failed                       |
| -32          | Driver: COM set timeout failed                        |
| -33          | Driver: Receive buffer overrun                        |
| -34          | Driver: Receive buffer full                           |
| -35          | Driver: Send busy                                     |
| -36          | Driver: Error during close driver                     |
| -40          | User: COM port not opened                             |
| -41          | User: Invalid handle value                            |
| -42          | User: Invalid COM number                              |
| -43          | User: Size parameter invalid                          |
| -44          | User: Size parameter zero                             |
| -45          | User: Buffer pointer is NULL                          |
| -46          | User: Buffer too short                                |
| -47          | User: Setup error                                     |

Table 58: CIF Serial Driver Error Numbers (-20..-47)

| Error Number | Description  |
|--------------|--|
| -50          | User: Send message, timeout error  |
| -51          | User: Could not send a message<br>Cable not connected.<br>Wrong cable.<br>Device does not respond. |
| -52          | User: Send message, no device connected  |
| -53          | User: Error by send message, message receiving   |
| -54          | User: Telegram collision   |
| -55          | User: Telegram, no acknowledgement received  |
| -56          | User: Telegram, noise  |
| -57          | User: Telegram, data overrun   |
| -58          | User: Telegram, parity error   |
| -59          | User: Telegram, framing error  |
| -60          | User: Telegram, unknown error  |
| -70          | User: Timeout by receive a message   |
| -71          | User: No message received  |

Table 59: CIF Serial Driver Error Numbers (-20..-47)

## 9.3 CIF TCP/IP Driver Error Numbers

This is the list of error numbers using the CIF TCP/IP Driver.

### 9.3.1 Standard Win32 Socket API Errors

| Error Number | Description   |
|--------------|---|
| 10013        | Permission denied   |
| 10024        | Too many open sockets.  |
| 10048        | Address already in use  |
| 10049        | Cannot assign requested address.  |
| 10050        | Network is down   |
| 10051        | Network is unreachable  |
| 10052        | Network dropped connection on reset   |
| 10053        | Software caused connection abort. An established connection was aborted by the software in your host machine, possibly due to a data transmission time-out or protocol error. |
| 10054        | Connection reset by peer  |
| 10055        | No buffer space available   |
| 10056        | Socket is already connected   |
| 10057        | Socket is not connected.  |
| 10058        | Cannot send after socket shutdown   |
| 10060        | Connection timed out  |
| 10061        | Connection refused  |
| 10065        | No route to host  |
| 10092        | Winsock.dll version out of range  |

Table 60: CIF TCP/IP Driver Error Numbers - Standard Win32 Socket API errors

### 9.3.2 Specific NetIdent Errors

| Error Number | Description                 |
|--------------|-----------------------------|
| 0x8004c701   | Unknown Device Error        |
| 0x8004c702   | Request Pending             |
| 0x8004c703   | Set IP time exceeded        |
| 0x8004c704   | IP address invalid          |
| 0x8004c705   | Returned IP address invalid |
| 0x8004c706   | Answer from wrong device    |
| 0x8004c707   | Wrong OP code received      |
| 0x8004c708   | NetIdent Timeout            |

Table 61: CIF TCP/IP Driver Error Numbers - Specific NetIdent Errors

## 9.4 RCS Error Numbers (4 .. 93)

This is the list of error numbers returned by the RCS (Realtime Communication System), that is the operating system of Hilscher devices. The error number is returned in an answer message. Command messages and answer messages are used to communicate between the application (e.g. the System Configurator) and the Hilscher device. An example of this communication is the download of a configuration.

| Error Number | Description  |
|--------------|--|
| 4            | Task does not exist  |
| 5            | Task is not initialized  |
| 6            | The MCL is locked  |
| 7            | The MCL rejects a send command because of an error   |
| 20           | The user will download a database into the device that is not valid for this device type.  |
| 21           | Data base segment not configured or not existent   |
| 22           | Number for message wrong during download   |
| 23           | Received number of data during download does not match to that in the command message  |
| 24           | Sequence identifier wrong during download  |
| 25           | Checksum after download and checksum in command message do not match   |
| 26           | Write/Read access of data base segment   |
| 27           | Download/Upload or erase of configured data base type is not allowed   |
| 28           | The state of the data base segment indicated an error. Upload not possible   |
| 29           | The access to the data base segment needs the bootstraploader. The bootstraploader is not present                                      |
| 30           | Trace buffer overflow  |
| 31           | Entry into trace buffer too long   |
| 37           | No or wrong license. The OEM license of the System Configurator allows only communication to devices that have the same license inside |
| 38           | The data base created by the System Configurator and the data base expected by the firmware is not compatible                          |
| 39           | DBM module missing   |

Table 62: RCS error numbers (answer message) (4..39)

| Error Number | Description  |
|--------------|--|
| 40           | No command free  |
| 41           | Command unknown  |
| 42           | Command mode unknown   |
| 43           | Wrong parameter in the command   |
| 44           | Message length does not match to the parameters of the command             |
| 45           | Only a MCL does use this command to the RCS                                |
| 50           | FLASH occupied at the moment   |
| 51           | Error deleting the FLASH   |
| 52           | Error writing the FLASH  |
| 53           | FLASH not configured   |
| 54           | FLASH timeout error  |
| 55           | Access protection error while deleting the FLASH                           |
| 56           | FLASH size does not match or not enough FLASH memory                       |
| 60           | Wrong structure type   |
| 61           | Wrong length of structure  |
| 62           | Structure does not exist   |
| 70           | No clock on the device   |
| 80           | Wrong handle for the table (table does not exist)                          |
| 81           | Data length does not match the structure of this table                     |
| 82           | The data set of this number does not exist                                 |
| 83           | This table name does not exist   |
| 84           | Table full. No more entries allowed  |
| 85           | Other error from DBM   |
| 90           | The device info (serial number, device number and date) does already exist |
| 91           | License code invalid   |
| 92           | License code does already exist  |
| 93           | All memory locations for license codes already in use                      |

Table 63: RCS error numbers (answer message) (40..93)

## 9.5 Database Access Error Numbers (100 .. 130)

The following table lists the error numbers of the database access errors

| Error Number | Description  |
|--------------|--|
| 100          | Database already opened                              |
| 101          | Dataset could not be opened                          |
| 103          | Error while opening database occurred                |
| 104          | No valid path name                                   |
| 105          | No connection to data base. Call function DbOpen().  |
| 106          | Error in parameter                                   |
| 107          | Error during opening a table                         |
| 108          | Null pointer occurred                                |
| 109          | Table not opened. Call function OpenTable() first.   |
| 110          | The first record is reached                          |
| 111          | The last record is reached                           |
| 112          | Unknown type in the record found                     |
| 113          | Data has to be truncated                             |
| 114          | No access driver installed on the system             |
| 115          | Exception received                                   |
| 116          | This table is set to read only                       |
| 117          | There is no data set in the table                    |
| 118          | The requested table could not be edit                |
| 119          | An operation could not be completed                  |
| 120          | User gives an unexpected length in WritsDs().        |
| 121          | An assertion failed                                  |
| 122          | DLL not found  |
| 123          | DLL couldn't be freed                                |
| 124          | Specified function not found in the DLL              |
| 125          | ODBC Function returns an error                       |
| 126          | Count of data bytes in the record exceeds 1938       |
| 127          | DBM32 DLL is not loaded                              |
| 128          | Field with the given index was not found             |
| 129          | This table contains no records                       |
| 130          | Invalid character ( ' ' ) found in a Table or Column |

Table 64: Database Access Error Numbers (100..130)

## 9.6 Online Data Manager Error Numbers

### 9.6.1 Online Data Manager Error Numbers (1000 .. 1018)

The following table lists the error numbers of the Online Data Manager.

| Error Number | Description  |
|--------------|--|
| 1000         | Driver OnlineDataManager not opened  |
| 1001         | Initialization of the OnlineDataManager has failed   |
| 1002         | No DriverObject found. OnlineDataManager Sub DLL not found.  |
| 1003         | No DeviceObject found. Device not found.   |
| 1004         | Application not found  |
| 1010         | Application has requested an unknown event   |
| 1011         | Application has requested an unknown function mode, operating mode. Known function modes, operating modes are Reset, Download, Register Server, Unregister Server. |
| 1012         | Application has requested an unknown command   |
| 1013         | Message Server already exists  |
| 1014         | Message Server not registered  |
| 1015         | Device already in use  |
| 1016         | Device not assigned  |
| 1017         | Device has changed   |
| 1018         | Command active   |

Table 65: Online Data Manager Error numbers (1000..1018)

### 9.6.2 Message Handler Error Numbers (2010 .. 2027)

The following table lists the error numbers of the Message handler of the Online Data Manager.

| Error Number | Description                                  |
|--------------|--|
| 2010         | Message handler: Messagebuffer empty         |
| 2011         | Message handler: Messagebuffer full          |
| 2021         | Message handler: Invalid Message ID (msg.nr) |
| 2022         | Message handler: No entry                    |
| 2023         | Message handler: Message already active      |
| 2024         | Message handler: Wrong Application           |
| 2025         | Message handler: Message Timeout             |
| 2026         | Message handler: Wait for Delete             |
| 2027         | Message handler: No cyclic Message           |

Table 66: Error Numbers of the Message Handler of the Online Data Manager (2010..2027)

### 9.6.3 Driver Functions Error Numbers (2501 .. 2512)

The following table lists the error numbers of the Driver Functions of the Online Data Manager.

| Error Number | Description                                       |
|--------------|---|
| 2501         | OnlineDataManager Sub DLL not found               |
| 2502         | Function missing                                  |
| 2503         | 'Read Thread' not created                         |
| 2504         | 'Write Thread' not created                        |
| 2505         | 'IO Thread' not created                           |
| 2510         | Function failed                                   |
| 2512         | Assign reports error. Return neither OK or cancel |

Table 67: Error Numbers of the Driver Functions of the Online Data Manager (2501..2512)

### 9.6.4 Online Data Manager Subfunctions Error Numbers (8001 .. 8035)

The following table lists the error numbers of the Subfunctions of the Online Data Manager.

| Error Number | Description                                  |
|--------------|--|
| 8001         | Driver not opened. E.g. CIF Device Driver    |
| 8002         | Application has requested an unknown event   |
| 8003         | Application has requested an unknown command |
| 8004         | Command has failed                           |
| 8005         | Command active                               |
| 8006         | Device invalid                               |
| 8010         | No device was assigned                       |
| 8011         | Device was already assigned                  |
| 8020         | Driver not connected                         |
| 8021         | Driver already connected                     |
| 8030         | Faulty 'GetState'                            |
| 8031         | Send error (PutMessage returns error)        |
| 8032         | Send active (PutMessage active)              |
| 8033         | Receive error (GetMessage returns error)     |
| 8034         | Receive active (GetMessage active)           |
| 8035         | IO Error (ExchangeIO returns error)          |

Table 68: Sub function Error Numbers of the Driver Functions of the Online Data Manager (8001..8035)

## 9.7 Data Base Functions Error Numbers (4000 .. 4098)

The following table lists the error numbers of the converting functions.

| Error Number | Description  |
|--------------|--|
| 4000         | File does not exist  |
| 4001         | Success in comprimizing  |
| 4002         | Dataset does not exist   |
| 4003         | Last respectively first entry reached  |
| 4004         | Not enough memory  |
| 4005         | File directory full  |
| 4006         | Max number of entries reached  |
| 4007         | No writing to this table possible, because the table is located in the FLASH |
| 4008         | Table name does already exist  |
| 4009         | File name does not exist   |
| 4010         | Free RAM length from RCS_CNF.P86 is smaller than E_F_INDEX * 2               |
| 4011         | Parameter 'next' wrong   |
| 4012         | Not enough free space to copy data set                                       |
| 4013         | Set is deleted   |
| 4014         | Value for Index is wrong   |
| 4015         | Access not allowed   |
| 4016         | open_file used before init_file  |
| 4017         | Drive is not ready   |
| 4018         | Not enough drive memory  |
| 4019         | File name or path does not exist   |
| 4020         | Cannot create path   |
| 4021         | Wrong path   |
| 4022         | Wrong flag   |
| 4023         | The delete path is the root path   |
| 4024         | Path file exists   |
| 4025         | Write error during write a file  |
| 4026         | Error during create a file   |
| 4027         | Error during close a file  |
| 4028         | No DBM file  |
| 4029         | Length of the read data is unequal of the file length                        |

Table 69: Error numbers of converting functions (4000..4029)

| Error Number | Description   |
|--------------|---|
| 4030         | Path too long   |
| 4031         | Directory changed   |
| 4032         | Directory created   |
| 4034         | Length of converting stream is 0  |
| 4035         | Non equal data set found  |
| 4036         | Non equal data set found  |
| 4037         | Non equal data set found  |
| 4038         | Data set has length 0   |
| 4039         | The function DbmInit has assigned a Zero pointer during RCS initialization                                  |
| 4040         | Printer not ready   |
| 4041         | The data base is used from another function   |
| 4042         | New length of data base is smaller than used  |
| 4043         | Unknown access mode   |
| 4044         | Old data base has to be converted   |
| 4045         | Error while converting. Function not known  |
| 4046         | Unknown type in set 0 found   |
| 4047         | No float function available   |
| 4048         | Function not in RCS module  |
| 4049         | Check failed  |
| 4050         | Checksum check failed   |
| 4051         | More segments are existing in file, than in the structure FILE_INFO_T in wMaxEintraege                      |
| 4052         | SegLen in structure FILE_INFO_T is smaller then the length in the file. Return of function dbm_restore_data |
| 4053         | The header file holds an other information for a length than in the segment itself                          |
| 4054         | Not enough memory for allocation on the PC  |
| 4055         | No index for file handle in structure FLASH_DIR of RCS found  |
| 4057         | File type 2 can not be printed because of too many definitions  |
| 4058         | The definitions need too many lines to display them, than in the program available                          |
| 4059         | An unknown format for the parameter. Valid is U, H, or S  |
| 4060         | Unknown parameter type  |

Table 70: Error numbers of converting functions (4030..4060)

| Error Number | Description   |
|--------------|---|
| 4061         | The data base was transmitted into the FLASH                          |
| 4062         | Set 0 contains no structure definition                                |
| 4063         | Set 0 can not be deleted  |
| 4064         | Error during execution of a ODBC data base access                     |
| 4065         | Initializing of DBM through RCS had no success                        |
| 4066         | Passed data length incorrect  |
| 4067         | Sorting function not linked   |
| 4068         | Error in function parameter   |
| 4069         | Error from ODBC table   |
| 4070         | No free handle available. Too many data base links are already opened |
| 4071         | Unknown data type found in the table                                  |
| 4072         | Structure of table GLOBAL not correct or no such table existing       |
| 4073         | No name of an ACCESS data base  |
| 4074         | Download window can't be created                                      |
| 4075         | Download not fully performable  |

Table 71: Error numbers of converting functions (4061..4075)

| Error Number | Description  |
|--------------|--|
| 4082         | More than 32 tables should be created  |
| 4083         | No entry in element szSourceFile   |
| 4084         | ODBC connection initialization not possible. This could happen when in file ODBCINST.INI in section [Microsoft Access Driver (*.mdb)] is no valid path to ODBCJT16/32.DLL. |
| 4085         | Error in structure in the ACCESS data base that is in DBM format   |
| 4086         | Error in structure in the ACCESS data base that is in DBM format   |
| 4087         | No data in a ODBC table  |
| 4088         | No entry   |
| 4089         | ODBC set length not valid  |
| 4090         | Not enough data sets in ODBC table   |
| 4091         | Table CreateTable not found  |
| 4092         | Error in structure of table CreateTable  |
| 4093         | No entry in element szSourceTable  |
| 4094         | No entry in element szDestTable  |
| 4095         | Entry in iSourceType of table CreateTable is wrong   |
| 4096         | Entry in iTranslate of table CreateTable is wrong  |
| 4097         | Function SQLAllocStmt reports an error   |
| 4098         | ODBC source table not found  |
| 4099         | ODBC data truncated  |
| 4100         | Download timeout   |
| 4101         | Library load error   |
| 4102         | Library function error   |
| 4103         | Error in description 'toggle'  |
| 4104         | Error in description 'KB'  |
| 4105         | Column does not exists   |
| 4106         | ODBC structure different   |
| 4107         | ODBC address error   |
| 4108         | No CRC sum exists (table GLOBAL exists or old)   |
| 4109         | Table GLOBAL is old  |
| 4110         | Calculated CRC different to CRC in table GLOBAL  |
| 4199         | Programming error  |

Table 72: Error numbers of converting functions (4082..4199)

## 9.8 Converting Functions Error Numbers (5001 .. 5008)

The following table lists the error numbers of converting functions.

| Error Number | Description   |
|--------------|---|
| 5000         | Function PackLongToByteShort: Not enough space in pvD (Number of elements greater than reserved memory) |
| 5001         | Function PackLongToByteShort: Not enough space in pvD. Detected during converting of pvS                |
| 5002         | Function PackLongToByteShort: Not enough space in pvD   |
| 5003         | Function StringToByte: Not enough space in pvD  |
| 5004         | Function IntToByte: Not enough space in pvD   |
| 5005         | Function LongToShort: Not enough space in pvD   |
| 5006         | Function PackStringDumpToByteArray: Not enough space in pvD   |
| 5007         | Function PackStringBumpToByteArray: A character was found, which is not convertible into a HEX value    |
| 5008         | Function PackStringDumpToByteArray: Number of character odd   |
| 5009         | Function PackStringDumpToByteArray: Not enough space in pvD   |
| 5010         | Function PackStringDumpToByteArray: The current data set needs to be appended the previous one          |
| 5011         | Function PackStringDumpToByteArray: No corresponding function to the given number exist                 |
| 5012         | Converting error  |

Table 73: Error Numbers of data base functions (5000 .. 5012)



## 10 Appendix

### 10.1 Extended Device Diagnostic Master

The menu item **Online > Extended Device Diagnostic** helps to find possible network and configuration faults while trying to get the network fully operative, when the normal debugger does not rudicate any helpful information any more to get the fault location. This menu activates a list of available structures. The listed structures can be displayed to show the values. The structures will be resetted after power on or after a cold or warmstart command.

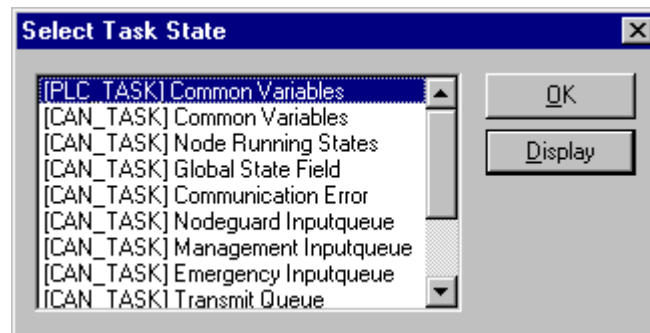


Figure 87: Online > Extended Device Diagnostic

This points contain online counters, values, parameters and statuses. Several task states are available

#### 10.1.1 PLC\_TASK Common Variables

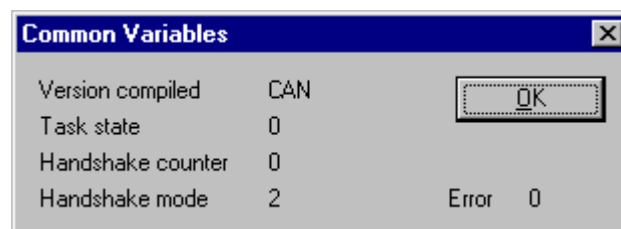


Figure 88: PLC\_TASK Common Variables

| Variable          | Meaning   |
|-------------------|---|
| Version compiled  | indicates the hardware version the software is compiled for   |
| Task state        | is always filled up with value 0  |
| Handshake counter | number of process data handshakes ever done with the application  |
| Handshake mode    | represent the actual process data handshake mode the card is actual running with. The mode can be switched in the menu <b>Settings &gt; CANopen Master Settings</b> |

Table 74: PLC\_TASK Common Variables

### 10.1.2 CAN\_TASK Common Variables

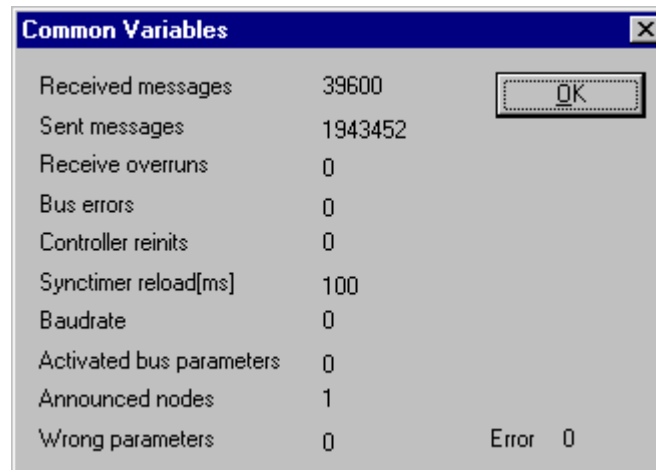


Figure 89: CAN\_TASK Common Variables

| Variable                | Meaning   |
|-------------------------|---|
| Received messages       | Number of received CAN-Messages   |
| Sent messages           | Number of sent CAN-Messages   |
| Receive overruns        | This counter is incrementing when too much incoming CAN messages overload the master. An incremented counter will always cause lost CAN message data, so it should normally contain the value 0.  |
| Bus errors              | Our used CAN controller has two internal error frame counter for detected transmission errors one for receive and one for transmit messages. If one of these error counter oversteps a defined value, the bus error counter is incremented by a value of 1.   |
| Controller reinit       | If the internal CAN controller error frame counter overstep a defined limit the controller goes into the bus off state. If this occurs we reinitialize the controller again to be preoperative and increment this counter value. A value unequal 0 is an indication for bad transmission quality, for unsatisfied bus wiring or for low power in the CAN-controller interface driver. |
| Synctimer reload        | This value represents the value that was configured via the menu <b>Settings &gt; Bus parameter</b> in SyCon and shows the actual configured and handled value.   |
| Baudrate                | This value shows numeric the actual baudrate the master is working with:<br>0 = 1Mbaud,<br>1 = 800Kbaud,<br>2 = 500kbaud,<br>3 = 250Kbaud,<br>4 = 125kbaud,<br>5 = 100Kbaud,<br>6 = 50kbaud,<br>7 = 20kbaud,<br>8 = 10kbaud   |
| Activated bus parameter | Value 0, the master device has found a configuration data base coming from SyCon, value 1, the master device isn't configured and needs to be configured via SyCon  |
| Announced Nodes         | This value represents the number of found Node data sets in the download database.  |
| Wrong parameters        | This value indicates, if the master has detected any error in a Node data set which was a containment of the actual downloaded data base. For each Node which has a wrong entry in there the counter is incremented by 1.   |

Table 75: CAN\_TASK Common Variables

### 10.1.3 CAN\_TASK Node Running State

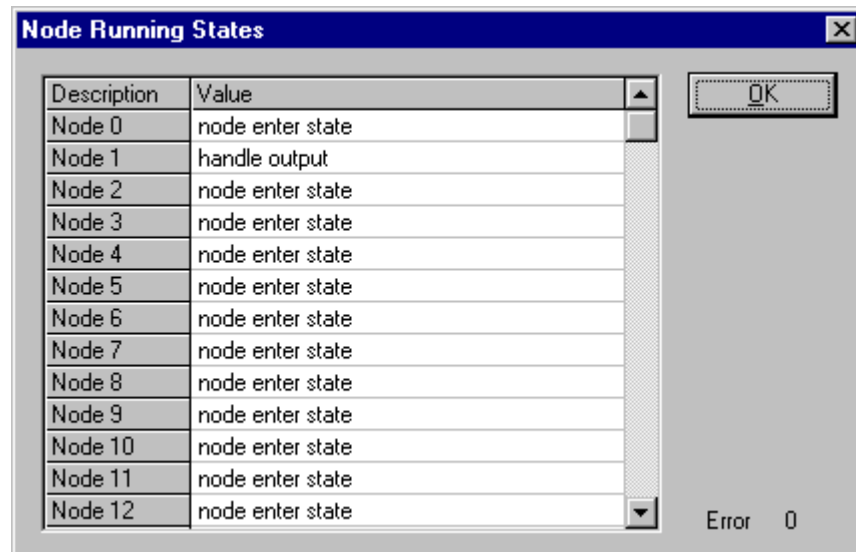


Figure 90: CAN\_TASK Node Running State

To handle the Nodes in their different states and requirements the master device has a so-called Node handler running, where each Node has its own actual state. SyCon interpret now the actual state of each Node and print it on the screen in textual form.

### 10.1.4 CAN\_TASK Global State Field

See section *Global State Field* at page 100.

### 10.1.5 CAN\_TASK Communication Error

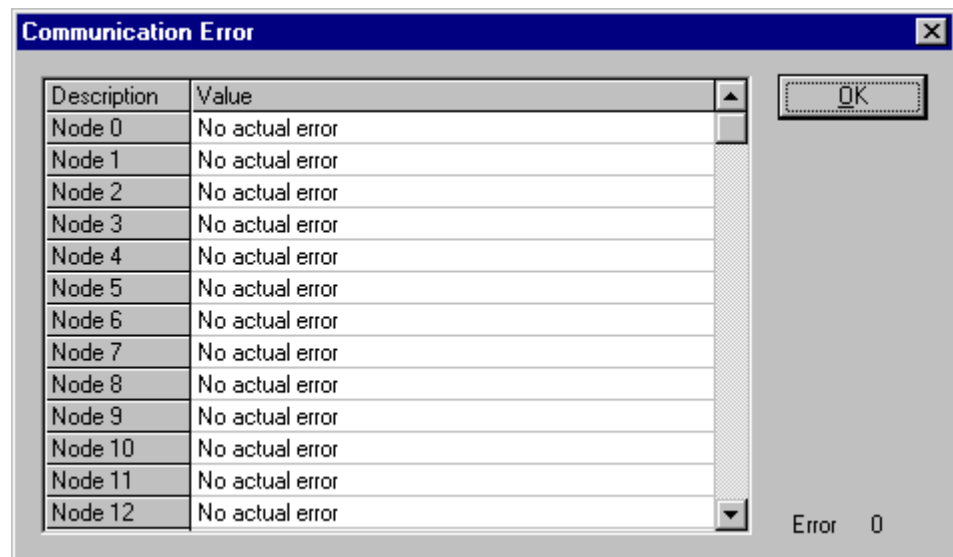


Figure 91: CAN\_TASK Communication Error

For each Node the master has an internal online error buffer. SyCon interprets now the actual error condition and print it on the screen in textual form.

## 10.1.6 Queues

The different incoming CAN specific identifier with their message containment are assigned to different input message queues. A received message is interpreted directly after it was received by the CAN controller and stored into its corresponding queue as well as the messages that shall be sent are stored in a queue while the CAN controller is busy in sending a message. A main loop then interpret these messages and dequeue them or the interrupt handler send the next message. The message queue handler has three parameters and their containments are shown by SyCon. **bInner** is the number of actual stored messages. **bFront** is the pointer where the next message will be store and **bRear** is the pointer where the next message will be dequeue from the queue body area. In a running system the value **bInner** should normally decrease automatically to 0 and **bFront** and **bRear** should be equal.

### 10.1.6.1 CAN\_TASK Nodeguard Inputqueue

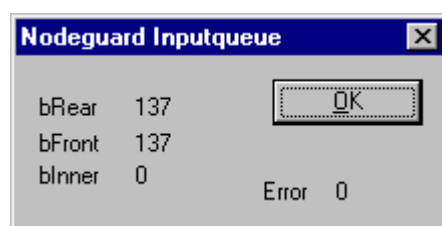


Figure 92: CAN\_TASK Nodeguard Inputqueue

| Variable | Meaning  |
|----------|--|
| bRear    | Position of the next read access to the puffer of received CAN telegrams |
| bFront   | Position of the next write access  |
| bInner   | Number of CAN telegrams which are actual included in the puffer          |

Table 76: CAN\_TASK Nodeguard Inputqueue

### 10.1.6.2 CAN\_TASK Management Inputqueue

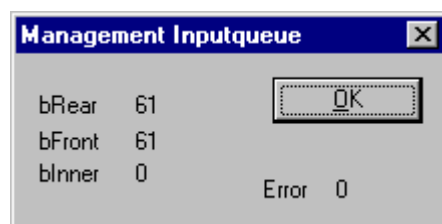


Figure 93: CAN\_TASK Management Inputqueue

| Variable | Meaning  |
|----------|--|
| bRear    | Position of the next read access to the puffer of received CAN telegrams |
| bFront   | Position of the next write access  |
| bInner   | Number of CAN telegrams which are actual included in the puffer          |

Table 77: CAN\_TASK Management Inputqueue

### 10.1.6.3 CAN\_TASK Emergency Inputqueue

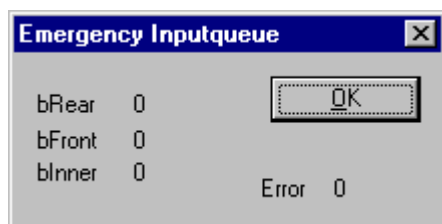


Figure 94: CAN\_TASK Emergency Inputqueue

| Variable | Meaning  |
|----------|--|
| bRear    | Position of the next read access to the puffer of received CAN telegrams |
| bFront   | Position of the next write access  |
| blInner  | Number of CAN telegrams which are actual included in the puffer          |

Table 78: CAN\_TASK Emergency Inputqueue

### 10.1.6.4 CAN\_TASK Transmit Queue


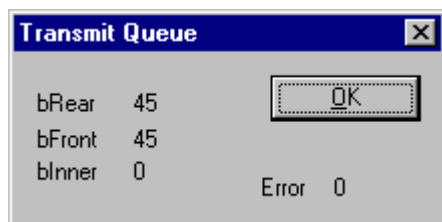


Figure 95: CAN\_TASK Transmit Queue

| Variable | Meaning  |
|----------|--|
| bRear    | Position of the next read access to the puffer of received CAN telegrams |
| bFront   | Position of the next write access  |
| blInner  | Number of CAN telegrams which are actual included in the puffer          |

Table 79: CAN\_TASK Transmit Queue

### 10.1.7 CAN\_TASK CMS Domain Services

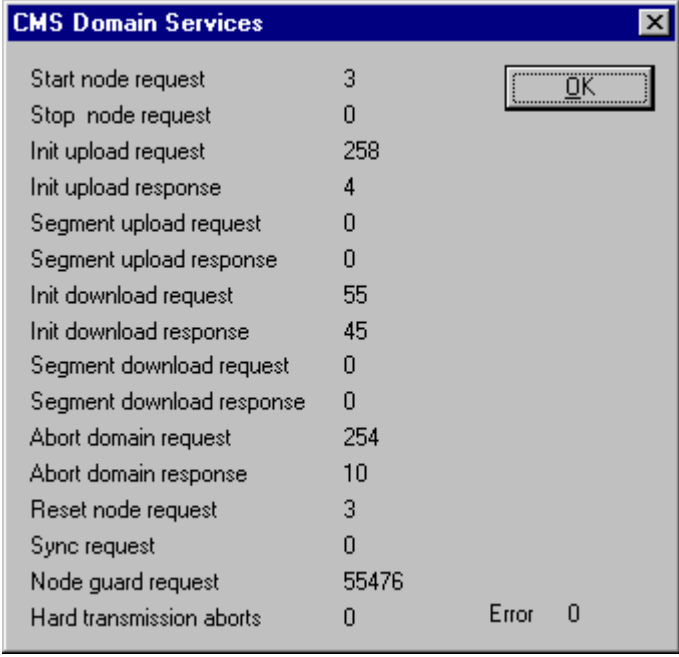

|                           |       |
|---------------------------|-------|
| Start node request        | 3     |
| Stop node request         | 0     |
| Init upload request       | 258   |
| Init upload response      | 4     |
| Segment upload request    | 0     |
| Segment upload response   | 0     |
| Init download request     | 55    |
| Init download response    | 45    |
| Segment download request  | 0     |
| Segment download response | 0     |
| Abort domain request      | 254   |
| Abort domain response     | 10    |
| Reset node request        | 3     |
| Sync request              | 0     |
| Node guard request        | 55476 |
| Hard transmission aborts  | 0     |
| Error                     | 0     |

Figure 96: CAN\_TASK CMS Domain Services

The CANopen protocol defines different services which are summarized under the name **Domain Services**. All Domain Services that are transmitted and were received are counted in this table and shown online by SyCon. A special value is the **Hard transmission abort** counter. Each CAN message which is inserted into the CAN controller to be sent is supervised by a simultaneously started timer. If the CAN controller cannot sent the message because it don't find any other CAN controller active in the connected network who is acknowledging him the message, the message can't be sent and the timer expires. If so the message is thrown away and the next message of the queue is inserted to be sent. So an incrementing **Hard transmission abort** counter is directly an indication for a physical hardware problem in the network. A possible fault that is often made is a wrong configured baud rate for example that causes such an error too.

### 10.1.8 CAN\_TASK Timeout Counter

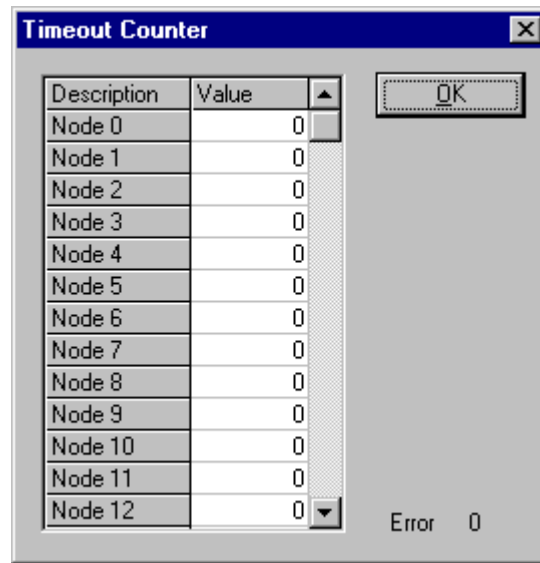


Figure 97: CAN\_TASK Timeout Counter

Normally PDOs are transferred in CANopen protocol without sending back any kind of acknowledge message. But if input PDO data is polled by the master with a remote request telegram each addressed Node has to response. If a Node do not response to an outstanding remote request, then the **Timeout Counter** of the corresponding Node is incremented by a value of 1. So if a counter shows a value unequal 0 this can be seen as an indication that the remote request rate is to high for the Node which cannot answer to every request. In such case decrease the Node request poll rate in the Node configuration window.

### 10.1.9 CAN\_TASK Node Init Counter

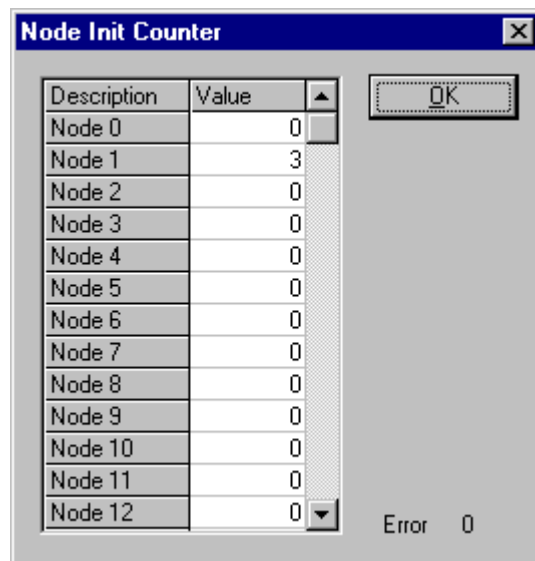


Figure 98: CAN\_TASK Node Init Counter

The Node init counter is always incremented whenever the Node is initialized. Normally the counter must show the value 1 for each configured Node, but if a Node is detected as inactive during the Node guarding procedure, then the master tries to reinitialize the Node again. If this happens the Node init counter is incremented by a value of 1. So values larger than 1 are an indication for communication error to the corresponding Node station.

## 10.2 Extended Device Diagnostic Node

The menu item **Online > Extended Device Diagnostic** helps to find possible bus and configuration faults while trying to get the bus fully operative, when the normal debugger does not rudicate any helpful information any more to get the fault localization. This menu activates a list of available structures. The listed structures can be displayed to show the values.

To activate the extended device diagnostic for Hilscher Nodes, click with the right mouse button to the Node and select the menu **Select as actual master**. Then select the menu **Online > Extended Device Diagnostic**. This menu activates the following list:

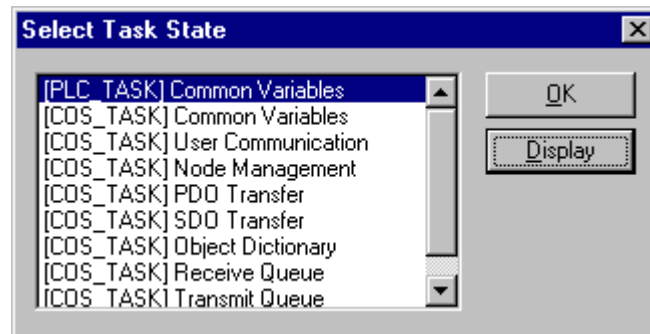


Figure 99: Extended Device Diagnostic Node

### 10.2.1 PCL\_TASK Common Variables

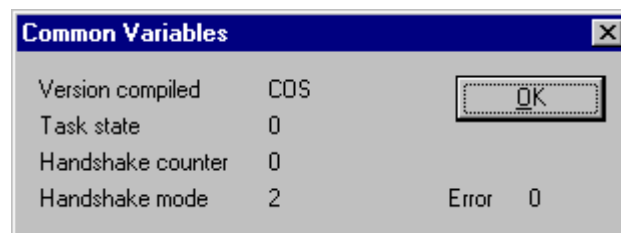


Figure 100: PCL\_TASK Common Variables

| Variable          | Meaning   |
|-------------------|---|
| Version compiled  | Holds a static text ('COS') indicating the hardware the PLC task was compiled for |
| Task state        | Internal state of the PLC task  |
| Handshake counter | Number handshake cycles executed  |
| Handshake mode    | Currently activated handshake mode (1, 2 or 3)                                    |

Table 80: PCL\_TASK Common Variables

## 10.2.2 COS\_TASK Common Variables

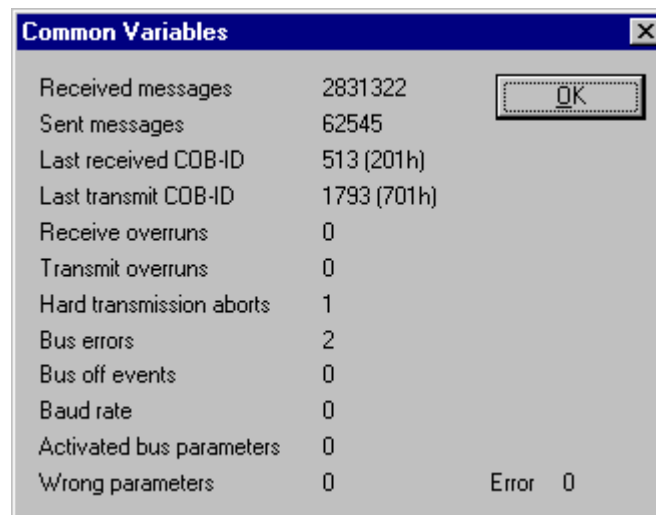


Figure 101: COS\_TASK Common Variables

| Variable                 | Meaning   |
|--------------------------|---|
| Received messages        | Number of received CAN messages   |
| Sent messages            | Number of messages handed over to CAN chip for transmission (This does not necessarily mean these messages were sent over the bus, see below).  |
| Last received COB-ID     | COB ID of most recently received CAN message  |
| Last transmit COB-ID     | COB ID of most recently CAN message handed over to CAN chip   |
| Receive overruns         | Number of overrun situations in the CAN chip internal receive queue   |
| Transmit overruns        | Reserved for future use   |
| Hard transmission aborts | Number of discarded messages because no acknowledging partner could be found on the bus   |
| Bus errors               | Counter for bus events detected by the CAN chip. This includes warnings, bus off situations and receive queue overruns. The latter two are also counted in separate variables (see below/above).  |
| Bus off events           | Number of bus off events. These indicate severe communication problems on the CAN bus. When the CAN chip detects such a situation it goes to disabled state and is not involved in bus operations anymore. To resume to work it must be re-initialized which is done by the firmware automatically. |
| Baud rate                | Current baud rate the CAN chip is operating at on the bus<br>0 - 1 Mbit/s<br>1 - 800 Kbit/s<br>2 - 500 Kbit/s<br>3 - 250 Kbit/s<br>4 - 125 Kbit/s<br>5 - 100 Kbit/s<br>6 - 50 Kbit/s<br>7 - 20 Kbit/s<br>8 - 10 Kbit/s  |
| Activated bus parameters | 0 - valid configuration data received<br>255 - current configuration data is invalid  |
| Wrong parameters         | Reserved for future use   |

Table 81: COS\_TASK Common Variables

### 10.2.3 COS\_TASK User Communication

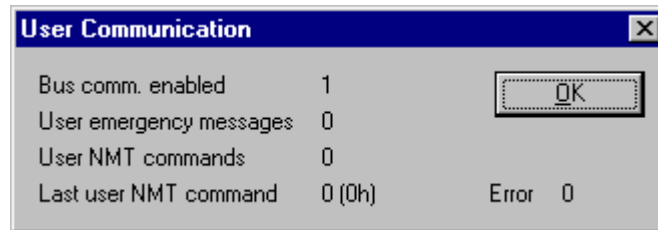


Figure 102: COS\_TASK User Communication

| Variable                | Meaning  |
|-------------------------|--|
| Bus comm. enabled       | 0 - bus communication is disabled because of Not Ready bit set in DPM or HOST watchdog error<br>1 - bus communication is enabled |
| User emergency messages | Number of user generated emergency messages sent   |
| User NMT commands       | Number of NMT commands received from user  |
| Last user NMT command   | NMT command received most recently from user   |

Table 82: COS\_TASK User Communication

## 10.2.4 COS\_TASK Node Management

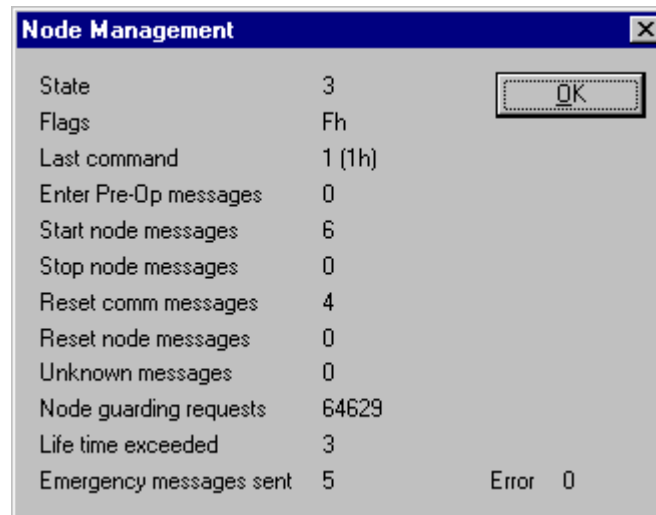


Figure 103: COS\_TASK Node Management

| Variable                | Meaning  |
|-------------------------|--|
| State                   | Current Node management state of the DEVICE<br>0 - Init<br>1 - Pre-Operational<br>2 - Prepared<br>3 - Operational  |
| Flags                   | Some flags<br>Bit 0 - PDO communication enable<br>Bit 1 - SDO communication enable<br>Bit 2 - Node guarding enable<br>Bit 3 - life guarding enable<br>Bit 7 - Node guarding toggle bit |
| Last command            | Last Node management command received  |
| Enter Pre-Op messages   | Number of Enter Pre-Operational State messages received  |
| Start Node messages     | Number of Start Node messages received   |
| Stop Node messages      | Number of Stop Node messages received  |
| Reset comm messages     | Number of Reset Communication messages received  |
| Reset Node messages     | Number of Reset Node messages received   |
| Unknown messages        | Number of unknown (and ignored) Node management messages received  |
| Node guarding requests  | Number of Node guarding requests received  |
| Life time exceeded      | Number of life time supervision failures   |
| Emergency messages sent | Number of emergency messages sent by the DEVICE  |

Table 83: COS\_TASK Node Management

## 10.2.5 COS\_TASK PDO Transfer

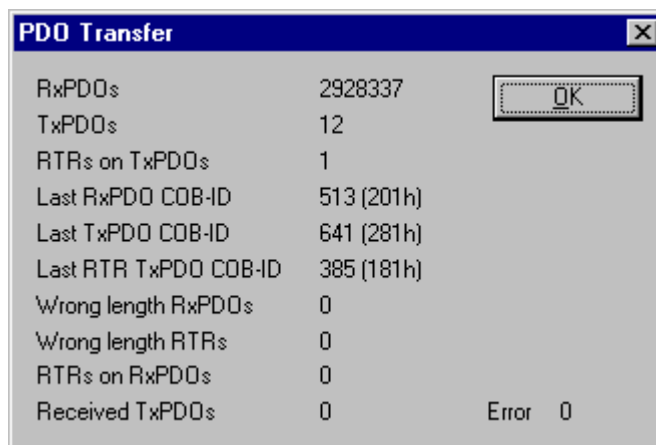


Figure 104: COS\_TASK PDO Transfer

| Variable              | Meaning   |
|-----------------------|---|
| RxPDOs                | Number of valid RxPDOs received   |
| TxPDOs                | Number of TxPDOs sent   |
| RTRs on TxPDOs        | Number of valid RTRs on TxPDOs received   |
| Last RxPDO COB-ID     | COB ID of RxPDO most recently received  |
| Last TxPDO COB-ID     | COB ID of RxPDO most recently sent  |
| Last RTR TxPDO COB-ID | COB ID of RTR on TxPDO most recently received   |
| Wrong length RxPDOs   | Number of RxPDOs with wrong length (unequal internally configured length of this PDO) |
| Wrong length RTRs     | Number of RTRs on TxPDOs with wrong length (unequal 0)                                |
| RTRs on RxPDOs        | Number of RTRs on RxPDOs  |
| Received TxPDOs       | Number TxPDOs received (and ignored)  |

Table 84: COS\_TASK PDO Transfer

## 10.2.6 COS\_TASK SDO Transfer

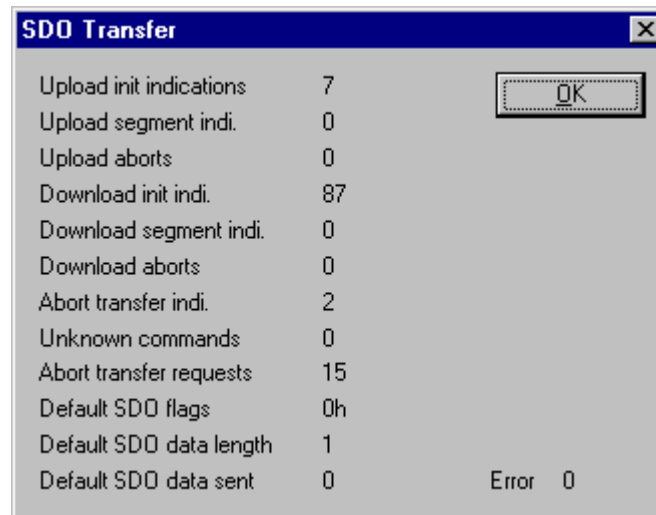


Figure 105: COS\_TASK SDO Transfer

| Variable                | Meaning  |
|-------------------------|--|
| Upload init indications | Number of upload initial segment indications received  |
| Upload segment indi.    | Number of upload segment indications received  |
| Upload aborts           | Number of upload operations aborted  |
| Download init indi.     | Number of download initial segment indications received  |
| Download segment indi.  | Number of download segment indications received  |
| Download aborts         | Number of download operations aborted  |
| Abort transfer indi.    | Number of abort transfer indications received  |
| Unknown commands        | Number of unknown SDO commands received  |
| Abort transfer requests | Number of abort requests sent  |
| Default SDO flags       | Flags indicating the current state of the default SDO<br>Bit 0 - upload operation running<br>Bit 1 - download operation running<br>Bit 7 - SDO transfer toggle bit |
| Default SDO data length | <b>Download:</b> number of bytes received during last download<br><b>Upload:</b> number of bytes to be uploaded  |
| Default SDO data sent   | <b>Download:</b> 0<br><b>Upload:</b> number of bytes already uploaded  |

Table 85: COS\_TASK SDO Transfer

## 10.2.7 COS\_TASK Object Dictionary

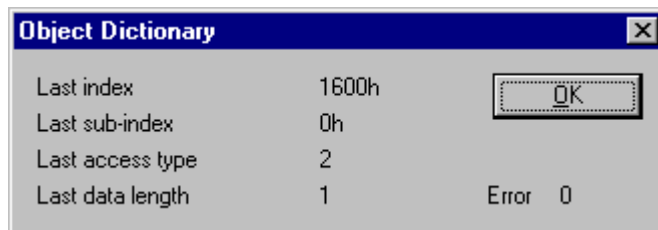


Figure 106: COS\_TASK Object Dictionary

| Variable         | Meaning  |
|------------------|--|
| Last index       | Index of most recent access to object dictionary   |
| Last sub-index   | Sub-index of most recent access to object dictionary   |
| Last access type | Operation type of most recent access to object dictionary<br>1 - read operation<br>2 - write operation |
| Last data length | Number of bytes transferred during most recent access to object dictionary                             |

Table 86: COS\_TASK Object Dictionary

## 10.2.8 COS\_TASK Receive Queue

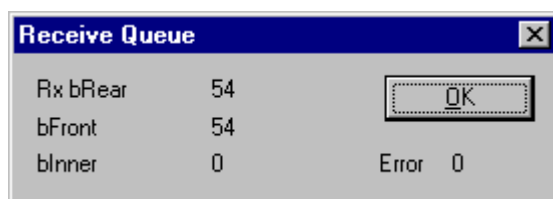


Figure 107: COS\_TASK Receive Queue

| Variable | Meaning   |
|----------|---|
| Rx bRear | Position of the next message to be read from the queue of incoming CAN messages |
| bFront   | Position of the next incoming CAN message to be inserted into the queue         |
| blnner   | Number of messages currently in the queue                                       |

Table 87: COS\_TASK Receive Queue

## 10.2.9 COS\_TASK Transmit Queue

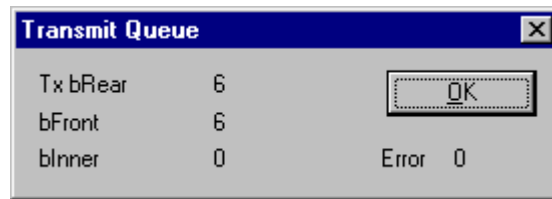


Figure 108: COS\_TASK Transmit Queue

| Variable | Meaning   |
|----------|---|
| Tx bRear | Position of the next message to be read from the queue of CAN messages to be sent   |
| bFront   | Position of the next CAN message to be inserted into the queue, messages to be sent are queued only if the CAN chip is not able to immediately send the message because the preceding message transfer is pending |
| blnner   | Number of messages currently in the queue   |

Table 88: COS\_TASK Transmit Queue

## 10.3 COB-ID (Predefined Connection Set)

COB-ID means Communication Object Identifier. This is the 11 bit telegram identifier of the CAN telegram. The higher 4 bits (bit 10 to 8) is the function code and the lower 7 bits (bit 7 to 0) is the bus address of the Node.

Broadcast Objects:

| Object     | Function Code | COB ID hex | COB ID dec | Index in the Object Directory |
|------------|---------------|------------|------------|-------------------------------|
| NMT        | 0000          | 00H        | 0          | -                             |
| SYNC       | 0001          | 80H        | 128        | 1005H, 1006H, 1007H           |
| TIME STAMP | 0010          | 100H       | 256        | 1012H, 1013H                  |

Table 89: COB ID - Broadcast Objects

Peer-to-Peer Objects:

| Object            | Function Code | COB ID hex | COB ID dec | Index in the Object Directory |
|-------------------|---------------|------------|------------|-------------------------------|
| Emergency         | 0001          | 81H-FFH    | 129-255    | 1014H, 1015H                  |
| PDO 1 (tx)        | 0011          | 181H-1FFH  | 385-511    | 1800H                         |
| PDO 1 (rx)        | 0100          | 201H-27FH  | 513-639    | 1400H                         |
| PDO 2 (tx)        | 0101          | 281H-2FFH  | 641-767    | 1801H                         |
| PDO 2 (rx)        | 0110          | 301H-37FH  | 769-895    | 1401H                         |
| PDO 3 (tx)        | 0111          | 381H-3FFH  | 897-1023   | 1802H                         |
| PDO 3 (rx)        | 1000          | 401H-47FH  | 1025-1151  | 1402H                         |
| PDO 4 (tx)        | 1001          | 481H-4FFH  | 1153-1279  | 1803H                         |
| PDO 4 (rx)        | 1010          | 501H-57FH  | 1281-1407  | 1403H                         |
| SDO (tx)          | 1011          | 581H-5FFH  | 1409-1535  | 1200H                         |
| SDO (rx)          | 1100          | 601H-67FH  | 1537-1663  | 1200H                         |
| NMT Error Control | 1110          | 701H-77FH  | 1793-1919  | 1016H, 1017H                  |

Table 90: COB ID - Peer-to-Peer Objects

## 10.4 Object Dictionary

The Object Dictionary is a collection of data, which have influence on the application and the communication of a CANopen device and the device can be configured with this data collection. The entries are structured by the index and the sub index.

### 10.4.1 Object Name and Object Code

The following table shows a list of the Object Codes:

| Object Name | Comment   | Object Code |
|-------------|---|-------------|
| NULL        | A dictionary entry with no data fields  | 0           |
| DOMAIN      | Large variable amount of data e.g. executable program code  | 2           |
| DEFTYPE     | Denotes a type definition such as a Boolean, UNSIGNED 16, float and so on   | 5           |
| DEFSTRUCT   | complex Data type definition, e.g. PDO Mapping-Structure  | 6           |
| VAR         | A single value such as Unsigned 8, Boolean, visible string etc.   | 7           |
| ARRAY       | A multiple data field object where each data field is a simple variable of the same basic data type e.g. array of Unsigned 16<br>Sub-index 0 is of Unsigned 8 and therefore not part of the array data. | 8           |
| RECORD      | A multiple data field object where the data fields may be any combination of simple variables.<br>Sub-index 0 is of Unsigned 8 and therefore not part of the record data.                               | 9           |

Table 91: Object Codes

**Note:** The list of the Object Names and Object Codes is no information that the Master or the Node support the respective data type.

## 10.4.2 Object Dictionary Data Types

The following table is a survey of the data types and an extract of the CANopen specification.

**Note:** The list of the data types is no information that the Master or the Node support the respective data type.

| Range             | Index (Hex) | Object   | Name            |
|-------------------|-------------|----------|-----------------|
| Reserved          | 0000        | reserved | reserved        |
| Static data types | 0001        | DEFTYPE  | BOOLEAN         |
|                   | 0002        | DEFTYPE  | INTERGER 8      |
|                   | 0003        | DEFTYPE  | INTERGER 16     |
|                   | 0004        | DEFTYPE  | INTERGER 32     |
|                   | 0005        | DEFTYPE  | UNSIGNED 8      |
|                   | 0006        | DEFTYPE  | UNSIGNED 16     |
|                   | 0007        | DEFTYPE  | UNSIGNED 32     |
|                   | 0008        | DEFTYPE  | REAL 32         |
|                   | 0009        | DEFTYPE  | VISIBLE_STRING  |
|                   | 000A        | DEFTYPE  | OCTET_STRING    |
|                   | 000B        | DEFTYPE  | UNICODE_STRING  |
|                   | 000C        | DEFTYPE  | TIME_OF_DAY     |
|                   | 000D        | DEFTYPE  | TIME_DIFFERENCE |
|                   | 000E        | DEFTYPE  | BIT_STRING      |
|                   | 000F        | DEFTYPE  | DOMAIN          |
|                   | 0010        | DEFTYPE  | INTERGER 24     |
|                   | 0011        | DEFTYPE  | REAL 64         |
|                   | 0012        | DEFTYPE  | INTERGER 40     |
|                   | 0013        | DEFTYPE  | INTERGER 48     |
|                   | 0014        | DEFTYPE  | INTERGER 56     |
|                   | 0015        | DEFTYPE  | INTERGER 64     |
|                   | 0016        | DEFTYPE  | UNSIGNED 24     |
|                   | 0017        | reserved | reserved        |
|                   | 0018        | DEFTYPE  | UNSIGNED 40     |
|                   | 0019        | DEFTYPE  | UNSIGNED 48     |
|                   | 001A        | DEFTYPE  | UNSIGNED 56     |
|                   | 001B        | DEFTYPE  | UNSIGNED 64     |
|                   | 001C-001F   | reserved | reserved        |

Continuation see next page.

|  |           |           |   |
|--|-----------|-----------|---|
| Complex data types                       | 0020      | DEFSTRUCT | PDO_COMMUNICATION_PARAMETER                     |
|  | 0021      | DEFSTRUCT | PDO_MAPPING                                     |
|  | 0022      | DEFSTRUCT | SDO_PARAMETER                                   |
|  | 0023      | DEFSTRUCT | IDENTITY  |
|  | 0024-003F | reserved  | reserved  |
| Manufacturer specific complex data types | 0040-005F | DEFSTRUCT | Manufacturer specific complex data types        |
| Device profile data types                | 0060-007F | DEFTYPE   | Device profile (0) specific standard data types |
|  | 0080-009F | DEFSTRUCT | Device profile (0) specific complex data types  |
|  | 00A0-00BF | DEFTYPE   | Device profile 1 specific standard data types   |
|  | 00C0-00DF | DEFSTRUCT | Device profile 1 specific complex data types    |
|  | 00E0-00FF | DEFTYPE   | Device profile 2 specific standard data types   |
|  | 0100-011F | DEFSTRUCT | Device profile 2 specific complex data types    |
|  | 0120-013F | DEFTYPE   | Device profile 3 specific standard data types   |
|  | 0140-015F | DEFSTRUCT | Device profile 3 specific complex data types    |
|  | 0160-017F | DEFTYPE   | Device profile 4 specific standard data types   |
|  | 0180-019F | DEFSTRUCT | Device profile 4 specific complex data types    |
|  | 01A0-01BF | DEFTYPE   | Device profile 5 specific standard data types   |
|  | 01C0-01DF | DEFSTRUCT | Device profile 5 specific complex data types    |
|  | 01E0-01FF | DEFTYPE   | Device profile 6 specific standard data types   |
|  | 0200-021F | DEFSTRUCT | Device profile 6 specific complex data types    |
|  | 0220-023F | DEFTYPE   | Device profile 7 specific standard data types   |
|  | 0240-025F | DEFSTRUCT | Device profile 7 specific complex data types    |
| Reserved                                 | 0300-0FFF | reserved  | reserved  |

Table 92: Object Dictionary Data Types

### 10.4.3 Object Dictionary Profile

The following table is a survey of the profile object dictionary and an extract of the CANopen specification.

**Note:** The list of the single objects is no information that the Master or the Node support the respective object and the function which is associated with it.

| Range                 | Index (Hex) | Object | Name                          | Type / Access      |
|-----------------------|-------------|--------|-------------------------------|--------------------|
| Communication Profile | 1000        | VAR    | Device Type                   | Unsigned 32 / ro   |
|                       | 1001        | VAR    | Error Register                | Unsigned 8 / ro    |
|                       | 1002        | VAR    | Manufacturer Status Register  | Unsigned 32 / ro   |
|                       | 1003        | ARRAY  | Pre-defined Error Field       | Unsigned 32 / ro   |
|                       | 1004        | -      | Reserved                      | -                  |
|                       | 1005        | VAR    | COB-ID SYNC                   | Unsigned 32 / rw   |
|                       | 1006        | VAR    | Communication Cycle Period    | Unsigned 32 / rw   |
|                       | 1007        | VAR    | Synchronous Window Length     | Unsigned 32 / rw   |
|                       | 1008        | VAR    | Manufacturer Device Name      | Visible_string / c |
|                       | 1009        | VAR    | Manufacturer Hardware Version | Visible_string / c |
|                       | 100A        | VAR    | Manufacturer Software Version | Visible_string / c |
|                       | 100B        | -      | Reserved                      | -                  |
|                       | 100C        | VAR    | Guard Time                    | Unsigned 32 / rw   |
|                       | 100D        | VAR    | Life Time Factor              | Unsigned 32 / rw   |
|                       | 100E        | -      | Reserved                      | -                  |
|                       | 100F        | -      | Reserved                      | -                  |
|                       | 1010        | VAR    | Store Parameters              | Unsigned 32 / rw   |
|                       | 1011        | VAR    | Restore Default Parameters    | Unsigned 32 / rw   |
|                       | 1012        | VAR    | COB-ID TIME                   | Unsigned 32 / rw   |
|                       | 1013        | VAR    | High Resolution Time Stamp    | Unsigned 32 / rw   |
|                       | 1014        | VAR    | COB-ID EMCY                   | Unsigned 32 / rw   |
|                       | 1015        | VAR    | Inhibit Time EMCY             | Unsigned 16 / rw   |
|                       | 1016        | ARRAY  | Consumer Heartbeat Time       | Unsigned 32 / rw   |
|                       | 1017        | VAR    | Producer Heartbeat Time       | Unsigned 16 / rw   |
|                       | 1018        | RECORD | Identity Object               | Identity / ro      |
|                       | 1018 / 0    |        | Number of Entries             | Unsigned 8         |
|                       | 1018 / 1    |        | Vendor Information            | Unsigned 32        |
|                       | 1018 / 2    |        | Product Code                  | Unsigned 32        |
|                       | 1018 / 3    |        | Revision Number               | Unsigned 32        |
|                       | 1018 / 4    |        | Serial Number                 | Unsigned 32        |
|                       | 1019-11FF   | -      | Reserved                      | -                  |

Continuation see next page.

| Range                         | Index (Hex) | Object | Name                            | Type / Access      |
|-------------------------------|-------------|--------|---------------------------------|--------------------|
| Communication Profile         | 1200        | RECORD | Server 1. SDO Parameter         | SDO_Parameter / ro |
|                               | 1200 / 0    |        | Number of Entries               | Unsigned 8         |
|                               | 1200 / 1    |        | COB-ID Client -> Server         | Unsigned 32        |
|                               | 1200 / 2    |        | COB-ID Client <- Server         | Unsigned 32        |
|                               | 1200 / 3    |        | NodeID                          | Unsigned 8         |
|                               | 1201-1277   | RECORD | Server 2. to 127. SDO Parameter | SDO_Parameter / rw |
|                               | 1280-12FF   | RECORD | Client SDO Parameter            | SDO_Parameter / rw |
|                               | 1300-13FF   | -      | Reserved                        | -                  |
|                               | 1400-15FF   | RECORD | Receive PDO Parameter           | PDO_Com_Para / rw  |
|                               | 1400 / 0    |        | Number of Entries               | Unsigned 8         |
|                               | 1400 / 1    |        | COB-ID                          | Unsigned 32        |
|                               | 1400 / 2    |        | Transmission Type               | Unsigned 8         |
|                               | 1400 / 3    |        | Transmit Prohibited Time        | Unsigned 16        |
|                               | 1400 / 4    |        | Reserved                        | Unsigned 8         |
|                               | 1400 / 5    |        | Event Timer                     | Unsigned 16        |
|                               | 1600-17FF   | ARRAY  | Receive PDO Mapping             | PDO_Mapping / rw   |
|                               | 1600 / 0    |        | Number of Entries               | Unsigned 8         |
|                               | 1600 / 1    |        | 1. Object                       | Unsigned 32        |
|                               | 1600 / 2    |        | 2. Object                       | Unsigned 32        |
|                               | 1600 / ...  |        | n. Object                       | Unsigned 32        |
|                               | 1600 / 40   |        | 64. Object                      | Unsigned 32        |
|                               | 1800-19FF   | RECORD | Transmit PDO Parameter          | PDO_Com_Para / rw  |
|                               | 1A00-1BFF   | ARRAY  | Transmit PDO Mapping            | PDO_Mapping / rw   |
|                               | 1C00-1FFF   | -      | Reserved                        | -                  |
| Manufacturer Specific Profile | 2000-5FFF   |        |                                 |                    |
| Standardized Device Profiles  | 6000-67FF   |        | Device Profile 1                |                    |
|                               | 6800-6FFF   |        | Device Profile 2                |                    |
|                               | 7000-77FF   |        | Device Profile 3                |                    |
|                               | 7800-7FFF   |        | Device Profile 4                |                    |
|                               | 8000-87FF   |        | Device Profile 5                |                    |
|                               | 8800-8FFF   |        | Device Profile 6                |                    |
|                               | 9000-97FF   |        | Device Profile 7                |                    |
|                               | 9800-9FFF   |        | Device Profile 8                |                    |
| Reserved                      | A000-FFFF   | -      | Reserved                        | -                  |

Table 93: Object Dictionary Profile

## 10.5 Communication Profile, Device Profile and Device Type

The Communication Profile DS 301 specifies, how to communicate. The Device Profiles DS 401ff specify, what is communicated.

| Device Profile | Description                                     |
|----------------|---|
| 301            | Common communication profile according to DS301 |
| 401            | Device profile for I/O modules                  |
| 402            | Device profile for drives                       |
| 406            | Device profile for encoder                      |

Table 94: Device Profile and Device Type

### 10.5.1 Communication Profile 301

The communication profile DS 301 is a common profile. It is the basis of CANopen communication and lays down, how the device on the CANopen communicate with each other.

### 10.5.2 Device Profile 401 - Device Profile for I/O Modules

The device profile DS 401 is a profile for I/O modules.

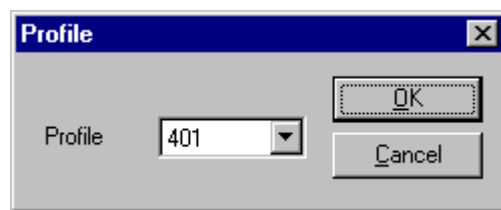


Figure 109: Device Profile 401

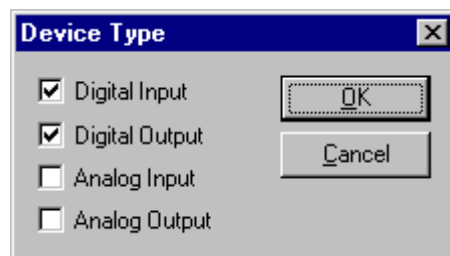


Figure 110: Selection of the Device Type in case of Device Profile 401

| Device Profile | Device Type  | Description                    |
|----------------|--|--------------------------------|
| 401            | Digital Input<br>Digital Output<br>Analog Input<br>Analog Output | Device Profile for I/O Modules |

Table 95: Device Profile for I/O Modules

10.5.3 Device Profile 402 - Device Profile for Drives

The device profile DS 402 is a profile for drives.



Figure 111: Device Profile 402

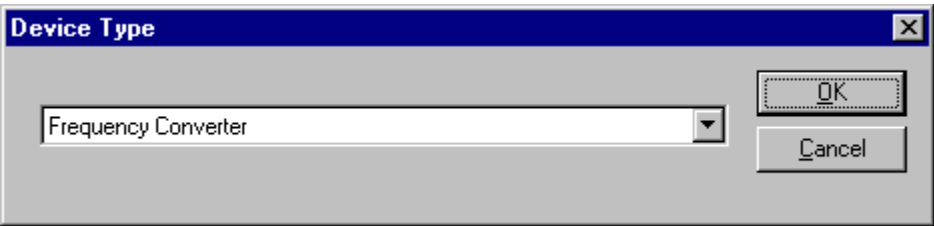


Figure 112: Selection Device Type in case of Device Profile 402

| Device Profile | Device Type  | Description               |
|----------------|--|---------------------------|
| 402            | Frequency Converter<br>Servo Drive<br>Stepper Motor<br>I/O Module<br>Multi device module | Device profile for drives |

Table 96: Device Profile for Drives

### 10.5.4 Device Profile 406 - Device Profile for Encoder

The device profile DS 406 is a profile for encoder.

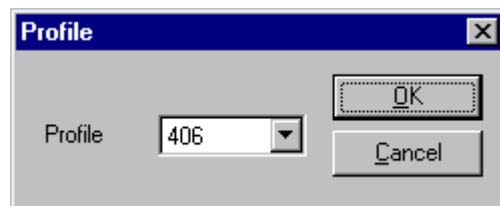


Figure 113: Device Profile 406

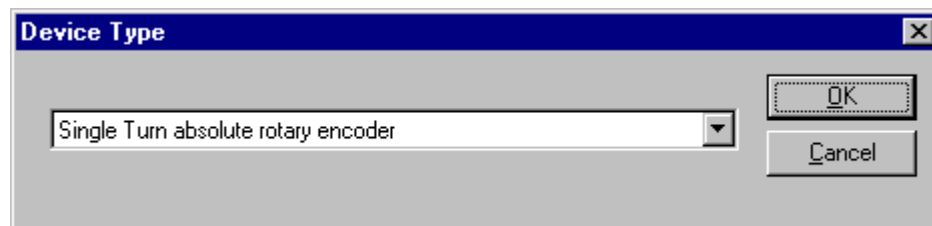


Figure 114: Selection of the Device Type in case of Device Profile 406

| Device Profile | Device Type  | Description                |
|----------------|--|----------------------------|
| 406            | Single Turn absolute rotary encoder                            | Device profile for encoder |
|                | Multi Turn absolute rotary encoder                             |                            |
|                | Single Turn absolute rotary encoder with electronic turn count |                            |
|                | Incremental rotary encoder                                     |                            |
|                | Incremental rotary encoder with electronic counting            |                            |
|                | Incremental linear encoder                                     |                            |
|                | Incremental linear encoder with electronic counting            |                            |
|                | Absolute linear encoder  |                            |
|                | Absolute linear encoder with cyclic coding                     |                            |

Table 97: Device Profile for Encoder

## 10.6 PDO Mapping Method

The PDO Mapping with degree of freedom was fixed in the specification DS301 V3. The System Configurator produces the following PDO Mapping:

- Sub index 0 the number of objects (value N) is entered in object 16xx (and object 1Axx respectively).
- Sub index 1 to N are entered in the objects which are to be mapped in object 16xx (and object 1Axx respectively).

The PDO Mapping was laid down more exactly in the specification DS301 V4. Thereby particular the first mapped information in the Node is deleted, then it is described new and after this it is set to valid.

- To delete the information of the PDO Mapping in the Node (and to set it back to the default mapping respectively), in object 16xx (and object 1Axx respectively) Sub index 0 the value 0 is written down.
- The objects which are to be mapped are entered in object 16xx (and respectively object 1Axx) Sub index 1 to N.
- The number of objects is entered (value N) in object 16xx (and respectively object 1Axx).

## 10.7 NMT State Machine (State Diagram)

NMT stands for Network Management.

The following diagram shows the possible states of a CANopen Node.

Power ON or Hardware Reset

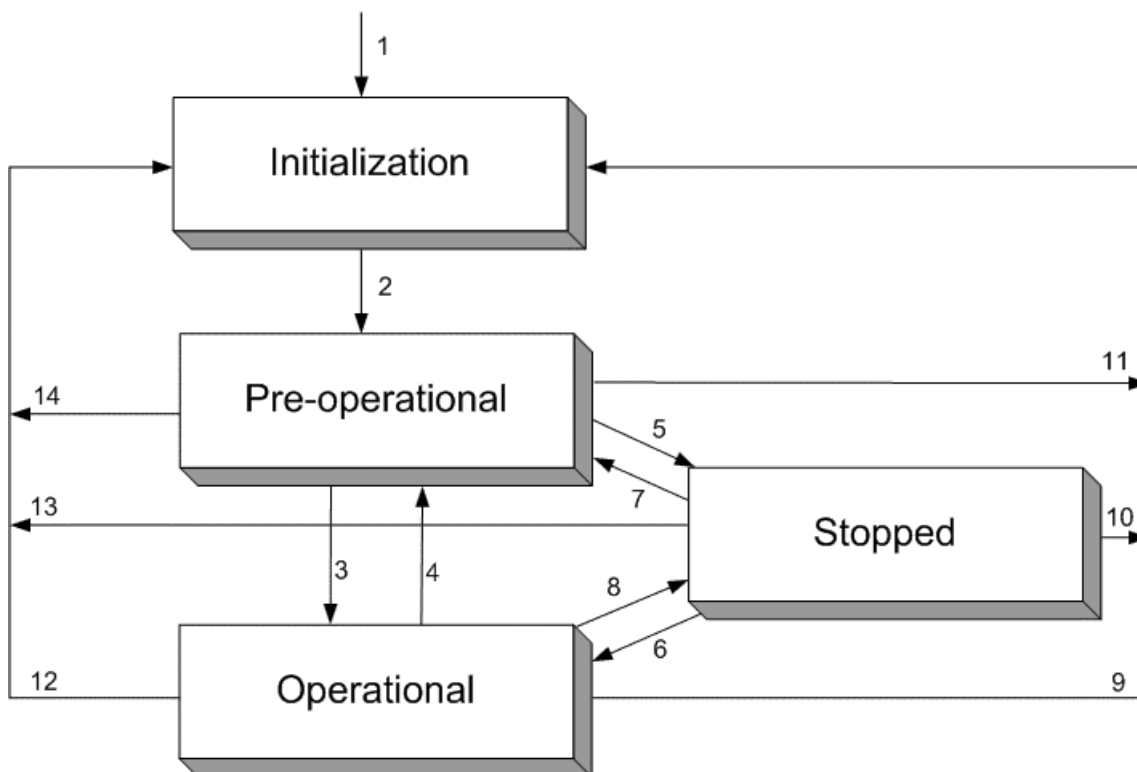


Figure 115: NMT-State Machine

| Number     | Meaning  |
|------------|--|
| 1          | At Power on the initialization state is entered autonomously |
| 2          | Initialization finished -enter PRE_OPERATIONAL automatically |
| 3, 6       | Start_Remote_Node indication                                 |
| 4, 7       | Enter_PRE-OPERATIONAL_State indication                       |
| 5, 8       | Stop_Remote_Node indication                                  |
| 9, 10, 11  | Reset_Node indication  |
| 12, 13, 14 | Reset_Communication indication                               |

Table 98: Description NMT-State Machine

## 10.7.1 Communication Characteristics in the different NMT States

The following table shows the possible communication in the respective NMT states.

| Communication | Initialization | Pre-Operational | Operational | Stopped |
|---------------|----------------|-----------------|-------------|---------|
| PDO           |                |                 | X           |         |
| SDO           |                | X               | X           |         |
| SYNC          |                | X               | X           |         |
| Time Stamp    |                | X               | X           |         |
| EMCY          |                | X               | X           |         |
| BootUp        | X              |                 |             |         |
| NMT           |                | X               | X           | X       |

Table 99: Communication in the different NMT States

## 10.8 LSS/LMT Services

LSS stands for Layer Setting Services, LMT stands for Layer Management and is an older designation.

LSS/LMT supports access to the basic parameter like

- Baud Rate
- Node ID

via the CAN network also without mechanical setting possibilities on the Node. The communication is based on a Master/Slave relationship and uses the COB-ID 2020 (07E4H, Slave to Master) and 2021 (07E5H, Master to Slave).

The LSS/LMT Slave need to be in the NMT state Stop, to perform the LSS/LMT services. The LSS/LMT Slave is able to take the following both states

- Operation Mode = Operating mode with valid parameters and
- Configuration Mode = Configuration Mode.

---

**Note:** It is permitted to couple only one Node to the Master at a time.

---

## 10.9 Emergency Telegrams

Emergency Telegrams are sent by the Node in case of a Node internal event.

The Emergency Telegram has the following structure:

| Byte 1            | Byte 2            | Byte 3         | Byte 4      | Byte 5       | Byte 6            | Byte 7 | Byte 8 |
|-------------------|-------------------|----------------|-------------|--------------|-------------------|--------|--------|
| Error Code<br>LSB | Error Code<br>MSB | Error Register | Comm. Error | Device Error | Emergency Trigger | Info 0 | Info 1 |

Table 100: Emergency Telegram (Structure)

- Error Code (Byte 1 and 2): See section *Emergency Telegram Error Codes* on page 189.
- Error Register (Byte 3): Object 1001H. See device description of the Node manufacturer.

| Bit | Meaning                                    |
|-----|--|
| 0   | generic error                              |
| 1   | current                                    |
| 2   | voltage                                    |
| 3   | temperature                                |
| 4   | communication error (overrun, error state) |
| 5   | device profile specific                    |
| 6   | reserved                                   |
| 7   | manufacturer specific                      |

Table 101: Structure of the Error Register

- Manufacturer specific error field (Byte 4 to 8): See device description of the Node manufacturer.

## 10.9.1 Emergency Telegram Error Codes

The meaning of the Error Codes is shown in the following table:

| Error Code (Hex) | Meaning                                |
|------------------|--|
| 00xx             | No error or reset                      |
| 10xx             | Generic error                          |
| 20xx             | Current                                |
| 21xx             | Current, device input side             |
| 22xx             | Current inside the device              |
| 23xx             | Current, device output side            |
| 30xx             | Voltage                                |
| 31xx             | Mains voltage                          |
| 32xx             | Voltage, inside the device             |
| 33xx             | Output Voltage                         |
| 40xx             | Temperature                            |
| 41xx             | Ambient temperature                    |
| 42xx             | Device temperature                     |
| 50xx             | Device Hardware                        |
| 60xx             | Device Software                        |
| 61xx             | Internal Software                      |
| 62xx             | User Software                          |
| 63xx             | Data Set                               |
| 70xx             | Additional Modules                     |
| 80xx             | Monitoring                             |
| 81xx             | Communication                          |
| 8110             | CAN Overrun (Object lost)              |
| 8120             | CAN in Error Passive Mode              |
| 8130             | Life Guarding Error or Heartbeat Error |
| 8140             | recover from bus off                   |
| 82xx             | Protocol Error                         |
| 8210             | PDO not processed due to length error  |
| 8220             | PDO length exceeded                    |
| 90xx             | External Error                         |
| F0xx             | Additional Functions                   |
| FFxx             | Device specific                        |

Table 102: Emergency Error Codes

**Note:** The table Emergency Error Codes is a common list. To see the exact meaning of these codes we refer to the Node manufacturer.



# 11 Lists

## 11.1 List of Figures

|  |    |
|--|----|
| Figure 1: Selection for the Installation of the System Configurator in Basic Version | 12 |
| Figure 2: Selection for the Installation of the licensed System Configurator         | 13 |
| Figure 3: Enter the Name, the Company Name and the License code                      | 14 |
| Figure 4: Example for Selection of the Fieldbus Module CANopen                       | 17 |
| Figure 5: Enter the License Code   | 18 |
| Figure 6: Note License code is invalid   | 18 |
| Figure 7: EDS files and bitmaps directory  | 33 |
| Figure 8: Insert > Master Symbol   | 34 |
| Figure 9: Insert > Master  | 34 |
| Figure 10: Hardware Assignment Master  | 35 |
| Figure 11: Settings > Master Configuration   | 36 |
| Figure 12: Security question Replace Master  | 37 |
| Figure 13: Edit > Replace Master   | 37 |
| Figure 14: Insert > Node   | 38 |
| Figure 15: Mouse pointer for Insert > Node   | 38 |
| Figure 16: Insert > Node   | 38 |
| Figure 17: Hardware Assignment Node  | 39 |
| Figure 18: Settings > Node Configuration   | 41 |
| Figure 19: Receive PDO Parameter   | 49 |
| Figure 20: Define a new receive PDO  | 50 |
| Figure 21: Transmit PDO Parameter  | 51 |
| Figure 22: Define a new Transmit PDO   | 52 |
| Figure 23: PDO Contents Mapping  | 53 |
| Figure 24: Online > Node Configuration > Node BootUp                                 | 54 |
| Figure 25: Error Control Protocol - Node Guarding Protocol                           | 56 |
| Figure 26: Error Control Protocol - Heartbeat Protocol                               | 57 |
| Figure 27: Online > Node Configuration > Object Configuration                        | 60 |
| Figure 28: Security question Replace Device  | 62 |
| Figure 29: Edit > Replace Node   | 62 |
| Figure 30: Driver Selection  | 63 |
| Figure 31: CIF Device Driver - Driver Description                                    | 65 |
| Figure 32: CIF Device Driver - Board Selection                                       | 65 |
| Figure 33: CIF Device Driver - More Details  | 66 |
| Figure 34: CIF Serial Driver - Driver Description                                    | 67 |
| Figure 35: CIF Serial Driver - Board Selection                                       | 67 |
| Figure 36: CIF TCP/IP Driver - Driver Description                                    | 69 |
| Figure 37: CIF TCP/IP Driver - Type in IP Address manually                           | 70 |
| Figure 38: CIF TCP/IP Driver - Board Selection - Found Device                        | 71 |
| Figure 39: CIF TCP/IP Driver - Board Selection - Assigned Device                     | 71 |
| Figure 40: CIF TCP/IP Driver - Filtered Devices                                      | 72 |
| Figure 41: Set IP Address  | 72 |
| Figure 42: Settings > Bus Parameter  | 73 |
| Figure 43: Diagram Acceptance Code / Acceptance Mask                                 | 75 |
| Figure 44: Settings > CANopen Master Settings  | 76 |
| Figure 45: Settings > Global Settings  | 80 |
| Figure 46: Settings > CANopen Node Settings  | 82 |
| Figure 47: Settings > Project Information  | 84 |
| Figure 48: Settings > Path   | 84 |
| Figure 49: Settings > Language   | 85 |

|   |     |
|---|-----|
| Figure 50: Settings > Start Options   | 86  |
| Figure 51: Security question before Download                                  | 89  |
| Figure 52: Online > Download  | 89  |
| Figure 53: Online > Firmware Download   | 90  |
| Figure 54: Online > Firmware / Reset  | 91  |
| Figure 55: Online > Device Info   | 91  |
| Figure 56: Online > Activate Driver   | 92  |
| Figure 57: Online > Live List   | 95  |
| Figure 58: The Debugwindow  | 96  |
| Figure 59: Online > Device Diagnostic (CANopen Standard Diagnostic)           | 97  |
| Figure 60: Online > Device Diagnostic > Interpretation of emergency telegrams | 99  |
| Figure 61: Online > Global State Field  | 100 |
| Figure 62: Online > Extended Device Diagnostic                                | 102 |
| Figure 63: Online > I/O-Monitor   | 105 |
| Figure 64: Logical Network View and I/O Watch                                 | 107 |
| Figure 65: I/O Watch window   | 107 |
| Figure 66: Online > Read Object   | 108 |
| Figure 67: Online > Write Object  | 108 |
| Figure 68: Online > Message Monitor   | 109 |
| Figure 69: Message Monitor for LSS/LMT > Set the Receive Filter               | 111 |
| Figure 70: Message Monitor LSS/LMT (1) > Switch Configuration Mode on         | 112 |
| Figure 71: Message Monitor LSS/LMT (2) > Set Node Address                     | 113 |
| Figure 72: Message Monitor LSS/LMT (3) > Set Baud Rate                        | 114 |
| Figure 73: Message Monitor LSS/LMT (4) > Save Configuration                   | 115 |
| Figure 74: Message Monitor LSS/LMT (5) > Switch in Operating Mode             | 116 |
| Figure 75: Message Monitor for Sending CAN telegrams (transparent)            | 118 |
| Figure 76: Message Monitor for Setting the Receive Filter                     | 120 |
| Figure 77: Message Monitor for Receiving CAN Telegrams (transparent)          | 122 |
| Figure 78: File > Print   | 124 |
| Figure 79: Example of a CSV File in Excel                                     | 128 |
| Figure 80: Security question cut device                                       | 129 |
| Figure 81: Edit > Insert cut/copied device                                    | 130 |
| Figure 82: Security question delete device                                    | 131 |
| Figure 83: View > Device Table  | 132 |
| Figure 84: View > Address Table   | 133 |
| Figure 85: View > ID Table  | 133 |
| Figure 86: View > SDO Table   | 134 |
| Figure 87: Online > Extended Device Diagnostic                                | 157 |
| Figure 88: PLC_TASK Common Variables  | 157 |
| Figure 89: CAN_TASK Common Variables  | 158 |
| Figure 90: CAN_TASK Node Running State  | 160 |
| Figure 91: CAN_TASK Communication Error                                       | 160 |
| Figure 92: CAN_TASK Nodeguard Inputqueue                                      | 161 |
| Figure 93: CAN_TASK Management Inputqueue                                     | 161 |
| Figure 94: CAN_TASK Emergency Inputqueue                                      | 162 |
| Figure 95: CAN_TASK Transmit Queue  | 162 |
| Figure 96: CAN_TASK CMS Domain Services                                       | 163 |
| Figure 97: CAN_TASK Timeout Counter   | 164 |
| Figure 98: CAN_TASK Node Init Counter   | 165 |
| Figure 99: Extended Device Diagnostic Node                                    | 166 |
| Figure 100: PCL_TASK Common Variables   | 166 |
| Figure 101: COS_TASK Common Variables   | 167 |
| Figure 102: COS_TASK User Communication                                       | 169 |
| Figure 103: COS_TASK Node Management  | 170 |

|  |     |
|--|-----|
| Figure 104: COS_TASK PDO Transfer                                      | 171 |
| Figure 105: COS_TASK SDO Transfer                                      | 172 |
| Figure 106: COS_TASK Object Dictionary                                 | 173 |
| Figure 107: COS_TASK Receive Queue                                     | 173 |
| Figure 108: COS_TASK Transmit Queue                                    | 174 |
| Figure 109: Device Profile 401   | 181 |
| Figure 110: Selection of the Device Type in case of Device Profile 401 | 181 |
| Figure 111: Device Profile 402   | 182 |
| Figure 112: Selection Device Type in case of Device Profile 402        | 182 |
| Figure 113: Device Profile 406   | 183 |
| Figure 114: Selection of the Device Type in case of Device Profile 406 | 183 |
| Figure 115: NMT-State Machine  | 185 |

## 11.2 List of Tables

|  |     |
|--|-----|
| Table 1: SyCon Main Functions  | 7   |
| Table 2: Components of the CANopen Device Model  | 9   |
| Table 3: Selection during Installation   | 15  |
| Table 4: Overview Communication Types CANopen  | 21  |
| Table 5: Overview Communication Types PDO Communication  | 22  |
| Table 6: Overview Communication Types SDO Communication  | 22  |
| Table 7: Overview Communication Types CAN send/receive transparent                                   | 22  |
| Table 8: Configuration Hilscher CANopen Master to any CANopen Node (PDO)                             | 23  |
| Table 9: Configuration Hilscher CANopen Node to any CANopen Master (PDO)                             | 25  |
| Table 10: Configuration Hilscher CANopen Master to a Hilscher CANopen Node (PDO)                     | 26  |
| Table 11: Configuration Hilscher CANopen Master to any CANopen Node (SDO)                            | 28  |
| Table 12: Configuration Hilscher CANopen Node to any CANopen Master (SDO)                            | 29  |
| Table 13: Configuration Hilscher CANopen Master to a Hilscher CANopen Node                           | 30  |
| Table 14: Configuration Hilscher CANopen Master to any CAN Device for Send/Receive transparent (CAN) | 31  |
| Table 15: Configuration Hilscher CANopen Node to any CAN Device for Send/Receive transparently (CAN) | 32  |
| Table 16: EDS files - Source of Supply   | 33  |
| Table 17: Overview Node Configuration  | 45  |
| Table 18: PDO: Send PDO and Receive PDO  | 46  |
| Table 19: PDO Communication Parameter > Transmission Types (Receive PDO)                             | 49  |
| Table 20: PDO Communication Parameter > Transmission Types (Transmit PDO)                            | 51  |
| Table 21: Node BootUp  | 55  |
| Table 22: Driver Selection   | 64  |
| Table 23: Device Assignment - Checkboxes of the CIF Device Driver                                    | 65  |
| Table 24: Device Assignment - Checkboxes of the CIF Serial Driver                                    | 68  |
| Table 25: Device Assignment - Checkboxes of the CIF TCP/IP Driver                                    | 71  |
| Table 26: Baudrate   | 74  |
| Table 27: Addressing Mode  | 78  |
| Table 28: Example for place to keep data in the process image  | 78  |
| Table 29: Image of the method of addressing for input  | 79  |
| Table 30: Image of the method of addressing for output   | 79  |
| Table 31: Process Data Auto Addressing activated / deactivated                                       | 80  |
| Table 32: Overview Diagnostic Functions  | 94  |
| Table 33: Meaning of the bits in the Device Diagnostic   | 98  |
| Table 34: Meaning of collective status bits in the Global State Field                                | 101 |
| Table 35: CANopen Master Taskstate   | 103 |
| Table 36: CANopen Node Taskstate   | 103 |
| Table 37: Overview User Data Transfer  | 104 |
| Table 38: Firmware for I/O Watch function  | 106 |
| Table 39: Message Monitor for LSS/LMT > Setting the Receive Filter                                   | 111 |
| Table 40: Message Monitor LSS/LMT (1) > Switch Configuration Mode on                                 | 112 |
| Table 41: Message Monitor LSS/LMT (2) > Set Node Address   | 113 |
| Table 42: Message Monitor LSS/LMT (3) > Set Baud Rate  | 114 |
| Table 43: Message Monitor LSS/LMT (4) > Save Configuration   | 115 |
| Table 44: Message Monitor LSS/LMT (5) > Switch in Operating Mode                                     | 116 |
| Table 45: Message Monitor for Sending CAN Telegrams (transparent)                                    | 117 |
| Table 46: Message Monitor for Setting the Receive Filter   | 119 |
| Table 47: Message Monitor for Receiving of CAN telegrams (transparent)                               | 121 |
| Table 48: CSV Export - Meaning of the values   | 126 |
| Table 49: CSV-Export - Description of the Byte Settings  | 127 |
| Table 50: CSV Export > DataType Code   | 127 |

|  |     |
|--|-----|
| Table 51: CSV Export > DataPosition Code   | 127 |
| Table 52: Example of a CSV File in Excel   | 128 |
| Table 53: CIF Device Driver Error Numbers (-1..-14)  | 139 |
| Table 54: CIF Device Driver Error Numbers (-15..-19)   | 140 |
| Table 55: CIF Device Driver Error Numbers (-20..-27)   | 141 |
| Table 56: CIF Device Driver Error Numbers (-30..-49)   | 142 |
| Table 57: CIF Device Driver Error Numbers (1000)   | 142 |
| Table 58: CIF Serial Driver Error Numbers (-20..-47)   | 143 |
| Table 59: CIF Serial Driver Error Numbers (-20..-47)   | 144 |
| Table 60: CIF TCP/IP Driver Error Numbers - Standard Win32 Socket API errors                         | 145 |
| Table 61: CIF TCP/IP Driver Error Numbers - Specific NetIdent Errors                                 | 145 |
| Table 62: RCS error numbers (answer message) (4..39)   | 146 |
| Table 63: RCS error numbers (answer message) (40..93)  | 147 |
| Table 64: Database Access Error Numbers (100..130)   | 148 |
| Table 65: Online Data Manager Error numbers (1000..1018)   | 149 |
| Table 66: Error Numbers of the Message Handler of the Online Data Manager (2010..2027)               | 149 |
| Table 67: Error Numbers of the Driver Functions of the Online Data Manager (2501..2512)              | 150 |
| Table 68: Sub function Error Numbers of the Driver Functions of the Online Data Manager (8001..8035) | 150 |
| Table 69: Error numbers of converting functions (4000..4029)   | 151 |
| Table 70: Error numbers of converting functions (4030..4060)   | 152 |
| Table 71: Error numbers of converting functions (4061..4075)   | 153 |
| Table 72: Error numbers of converting functions (4082..4199)   | 154 |
| Table 73: Error Numbers of data base functions (5000 .. 5012)  | 155 |
| Table 74: PLC_TASK Common Variables  | 157 |
| Table 75: CAN_TASK Common Variables  | 159 |
| Table 76: CAN_TASK Nodeguard Inputqueue  | 161 |
| Table 77: CAN_TASK Management Inputqueue   | 161 |
| Table 78: CAN_TASK Emergency Inputqueue  | 162 |
| Table 79: CAN_TASK Transmit Queue  | 162 |
| Table 80: PCL_TASK Common Variables  | 166 |
| Table 81: COS_TASK Common Variables  | 168 |
| Table 82: COS_TASK User Communication  | 169 |
| Table 83: COS_TASK Node Management   | 170 |
| Table 84: COS_TASK PDO Transfer  | 171 |
| Table 85: COS_TASK SDO Transfer  | 172 |
| Table 86: COS_TASK Object Dictionary   | 173 |
| Table 87: COS_TASK Receive Queue   | 173 |
| Table 88: COS_TASK Transmit Queue  | 174 |
| Table 89: COB ID - Broadcast Objects   | 175 |
| Table 90: COB ID - Peer-to-Peer Objects  | 175 |
| Table 91: Object Codes   | 176 |
| Table 92: Object Dictionary Data Types   | 178 |
| Table 93: Object Dictionary Profile  | 180 |
| Table 94: Device Profile and Device Type   | 181 |
| Table 95: Device Profile for I/O Modules   | 181 |
| Table 96: Device Profile for Drives  | 182 |
| Table 97: Device Profile for Encoder   | 183 |
| Table 98: Description NMT-State Machine  | 185 |
| Table 99: Communication in the different NMT States  | 186 |
| Table 100: Emergency Telegram (Structure)  | 188 |
| Table 101: Structure of the Error Register   | 188 |
| Table 102: Emergency Error Codes   | 189 |



## 12 Glossary

### COB-ID

Communication object identifier. Table in section *COB-ID* on page 175.

### LMT

Layer Management

### LSS

Layer Setting Services

### NMT

Network Management. This contains the functions configuration, initialization and supervision of the network devices.

### SyCon

System Configurator.

Configuration- and Diagnostic Tool.